

IOPRINT+ Print Servers

User guide

Part number: 5500081-10

Date: 23 July 2002

Navigating around this manual



Using this on-line manual. See page 5.



Fast Contents. See page 7.



Contents. See page 8.



Quick reference. See page 87.



Index. See page 304.

Copyright statement

This document must not be reproduced in any way whatsoever, either printed or electronically, without the consent of:

Perle Systems Europe Limited,
3, Wintersells Road,
Byfleet,
Surrey
KT14 7LF,
UK

Perle reserves the right to make changes without further notice, to any products to improve reliability, function or design.

Chase Research, The Chase Research logo, Specialix, the Specialix logo, are trademarks of Perle Systems Limited.

Microsoft, Windows 95, Windows 98, Windows NT, Windows 2000 and Internet Explorer are trademarks of Microsoft Corporation.

Netscape is a trademark of Netscape Communications Corporation.

Solaris is a registered trademark of Sun Microsystems, Inc. in the USA and other countries.

Perle Systems Europe Limited, 23 July 2002.

FCC Note

The products described in this manual have been found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions in this Guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

EN 55022: 1998, Class A Note

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Caution: The products described in this manual are approved for commercial use only.



About this manual

Purpose of this manual

This manual tells you how to install, configure and use the Perle IOPRINT+ printer servers.

Who this manual is for


This manual is aimed at users who want seamless connection of serial and parallel interface printers to Ethernet LANs. This manual requires a working knowledge of using personal computers and associated operating systems.

Using this on-line manual

The following is a brief guide to using this manual on-line.

Document navigation

This manual features document navigation hypertext buttons in the header area as shown in the next picture;

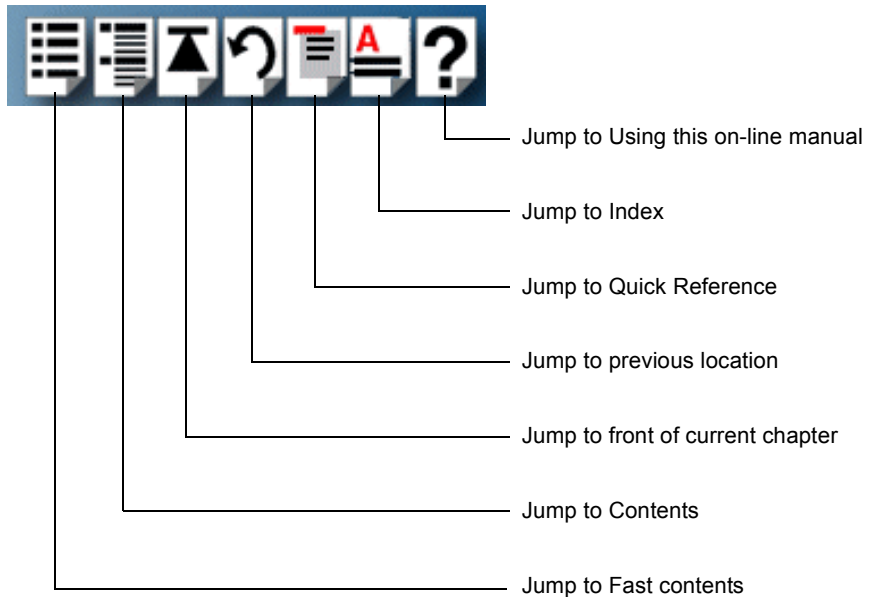

Hypertext jumps

You can also navigate around this manual by clicking on any cross reference or text in blue for example, [Hypertext jumps](#).

Note

The **Fast Contents**, **Contents** and **Index** entries are all hypertext jumps into this manual.

Revision history

Date	Part number	Description
July 2002	5500081-10	First release of Perle branded version of the IOPRINT manual

Fast Contents

<i>ABOUT THIS MANUAL</i>	<i>4</i>
<i>REVISION HISTORY</i>	<i>6</i>
<i>FAST CONTENTS</i>	<i>7</i>
<i>CONTENTS</i>	<i>8</i>
<i>CHAPTER 1 INTRODUCTION</i>	<i>19</i>
<i>CHAPTER 2 INSTALLATION AND CONFIGURATION</i>	<i>32</i>
<i>CHAPTER 3 IOPRINT+ CABLING INFORMATION</i>	<i>132</i>
<i>APPENDIX A BIADMIN MANAGEMENT PROGRAM</i>	<i>135</i>
<i>APPENDIX B PSCONFIG</i>	<i>181</i>
<i>APPENDIX C WEBADMIN</i>	<i>204</i>
<i>APPENDIX D WEB BROWSER CONFIGURATION</i>	<i>214</i>
<i>APPENDIX E WPCONFIG MANAGEMENT PROGRAM</i>	<i>230</i>
<i>APPENDIX F INTERNET PRINTING</i>	<i>237</i>
<i>APPENDIX G SNMP</i>	<i>254</i>
<i>APPENDIX H FTP (FILE TRANSFER PROTOCOL)</i>	<i>266</i>
<i>APPENDIX I TROUBLESHOOTING</i>	<i>273</i>
<i>APPENDIX J CONTACTING PERLE</i>	<i>297</i>
<i>INDEX</i>	<i>304</i>

Contents

ABOUT THIS MANUAL	4
<i>Purpose of this manual</i>	<i>4</i>
<i>Who this manual is for</i>	<i>4</i>
<i>Using this on-line manual</i>	<i>5</i>
Document navigation	5
Hypertext jumps	5
REVISION HISTORY	6
FAST CONTENTS	7
CONTENTS	8

CHAPTER 1 INTRODUCTION

19

Features	20
Year 2000 Compliance	22
Safety Instructions	23
IOPRINT+Jr	24
LED guide	25
Configuration File Format	26
IOPRINT+	27
LED Indicators	28
Configuration File Format	28
IOPRINT+Jr FAST	29
LED Indicators	30
10/100BaseT DIP Switches	30
Configuration File Format	31

CHAPTER 2 INSTALLATION AND CONFIGURATION

32

LAN Installation	33
Initial configuration	34
Windows Users	34
Configuration Procedure	35
Management	36
General Device Settings	38
AppleTalk Configuration	39
Software Requirements	40
AppleTalk Setup	40
Printing	41
Advanced Setup and Management	41
Changing the Device Configuration - Windows Software	41
Changing the Device Configuration - Macintosh Software	41
AppleTalk Settings	43
Unix - TCP/IP	45
Software Requirements	46
Device Configuration	46
IP Address Configuration	47
Other Configuration Settings	48
Logical Printers	49
Unix Host Configuration	51
Static IP Address Configuration	51
Dynamic IP Address Configuration	52
Printing Methods	54
LPD Printing Configuration	55
LPD on IBM AIX 4.15	55
LPD on System V	56
LPD on BSD	58
Printing using LPD	60
FTP (File Transfer Protocol)	61
Using FTP	61
Configuration with FTP	64
Printing using FTP	65
Other Printing Methods	66
Printing Using DSI	66
Printing Using PSfilter	67
Telnet	68
NetWare configuration	69
Operating Modes	70

Operation - Print Server Mode	70
Operation - Remote Printer Mode	70
Configuration Data - NDS & Bindery.....	71
General	71
Novell Remote Printer Mode	71
Novell Print Server Mode	72
Configuration Data - NDPS (NetWare 5)	73
Logical Printers (Ports)	74
Configuring NetWare	74
Configuring the IOPRINT+ Print Server	75
Configuration Methods.....	76
Printing - NDS & Bindery	77
Example 1	77
Example 2	77
Windows NT Server (TCP/IP)	78
Software requirements.....	79
Device configuration	79
IP address configuration	80
Other configuration settings	81
Serial Port Setup (if exists)	81
Logical printers	82
Windows NT Host Configuration.....	83
Ip address configuration	84
Preparing for tcp/ip printing	84
Windows NT 3.51	85
Windows NT 4.0	85
Adding a TCP/IP Remote Printer.....	86
Windows 3.51	86
Windows NT 4.0	87
Printing with windows NT.....	88
Windows Applications	88
Command Line	89
Telnet	89
Operation	89
Monitoring	89
Windows Peer-to-Peer - NetBEUI	91
Device Configuration.....	92
Software Installation & Configuration.....	92
Windows 95/98	93
Installing Additional Ports on Multi-port models	95
Windows NT 4.0.....	96
Installing Additional Ports on Multi-port Models	100

Windows NT 3.51.....	101
Installing Additional Ports on Multi-port models	103
Windows for Workgroups	105
Installation.....	105
Pserver Main Screen	106
Pserver Icons and Commands	106
Pserver Configuration	108
Control Panel Configuration	110
Printing	111
Windows Peer-to-peer - SMB	112
Device Configuration.....	112
Software Installation.....	113
PC Configuration.....	113
Windows 95/98/NT.....	114
Windows for Workgroups	115
Printing.....	115
Windows Peer-to-peer - TCP/IP	116
Device Configuration.....	117
Windows 95/98	118
Installing Additional Ports on Multi-port models	121
Windows NT4.....	123
Installing Additional Ports on Multi-port Models	126
Windows NT 3.51.....	128
Installing Additional Ports on Multi-port models	130

CHAPTER 3 IOPRINT+ CABLING INFORMATION 132

<i>Parallel port connector pinout</i>	133
<i>Serial Port connector pinout</i>	134
<i>Serial cable pinouts for Apple LaserWriter</i>	134

APPENDIX A BIADMIN MANAGEMENT PROGRAM 135

Introduction	136
<i>Installation</i>	<i>137</i>
<i>Main Screen</i>	<i>137</i>
<i>Icons</i>	<i>139</i>
<i>Status Icons</i>	<i>140</i>
<i>Configuration Icons</i>	<i>142</i>
<i>Other icons</i>	<i>143</i>
<i>NetBEUI Settings</i>	<i>147</i>
<i>Action Icons</i>	<i>150</i>
<i>Menu Options</i>	<i>151</i>
BiAdmin - NetWare Configuration without Client 32	154
<i>Using BiAdmin</i>	<i>155</i>
<i>Print Server Mode</i>	<i>156</i>
<i>Remote Printer Mode</i>	<i>158</i>
BiAdmin - NetWare Configuration with Client 32	159
<i>Preparation</i>	<i>160</i>
<i>Print Server Mode - Bindery</i>	<i>161</i>
<i>Print Server Mode - NDS</i>	<i>169</i>
<i>Remote Printer Mode - Bindery</i>	<i>177</i>
<i>Remote Printer Mode - NDS</i>	<i>179</i>

APPENDIX B PSCONFIG 181

Using PSConfig- NetWare Bindery Mode	182
<i>Installation</i>	<i>183</i>
<i>Using PSConfig</i>	<i>183</i>
<i>Configuration Data</i>	<i>184</i>
<i>Novell Printer Numbers (Print Server Mode)</i>	<i>184</i>
<i>Printer Assignments (Remote Printer Mode)</i>	<i>184</i>
<i>IOPRINT+ Print Server Data</i>	<i>185</i>

General	185
Novell Print Server Mode	186
Novell Remote Printer Mode	186
Configuration - Print Server Mode	187
Novell Printer Numbers	187
Procedure - NetWare V2, V3	188
Procedure NetWare V4	190
Novell Remote Printer Mode	191
Remote Printer Assignments	191
Configuration - Remote Printer Mode	191
Advanced Configuration	193
Service Additional NetWare Bindery file servers	193
Attach to more than one NetWare Print Server (Remote Printer Mode) ...	194
Using PSConfig - NDS Mode	195
Installation	196
Using psconfig	196
Configuration data	196
Printer assignments (remote printer mode)	197
IOPRINT+ Print Server data	198
General	198
Novell Print Server Mode	199
Novell Remote Printer Mode	199
Print Server Mode - Configuration Procedure	200
Remote Printer Mode - Configuration Procedure	201
Create queue objects	201
Create printer objects	201
Associate queue objects & print objects	202
Configure the IOPRINT+ Print Server	202
Unloading & Reloading NetWare Pserver	202
Advanced Configuration	203

Attach to more than one NetWare Print Server	203
--	-----

APPENDIX C WEBADMIN 204

<i>Introduction to WebAdmin</i>	<i>205</i>
<i>System Requirements</i>	<i>205</i>
<i>Server Installation</i>	<i>206</i>
<i>Running the Program</i>	<i>207</i>
<i>Status options</i>	<i>209</i>
<i>Configuration options</i>	<i>210</i>
<i>Diagnostics options</i>	<i>211</i>
<i>Settings Button</i>	<i>212</i>
<i>Checking the Printer Driver</i>	<i>213</i>

APPENDIX D WEB BROWSER CONFIGURATION 214

<i>Introduction</i>	<i>215</i>
<i>Preparation</i>	<i>215</i>
<i>Connecting to the IOPRINT+ Print Server</i>	<i>215</i>
<i>Configuration Screens</i>	<i>216</i>
<i>Appletalk screen</i>	<i>216</i>
<i>NetBEUI screen</i>	<i>217</i>
<i>NetWare screen</i>	<i>218</i>
<i>SNMP (Simple Network Management Protocol screen</i>	<i>220</i>
<i>TCP/IP screen</i>	<i>221</i>
<i>Configure Server screen</i>	<i>222</i>
<i>Server Status screen</i>	<i>223</i>
<i>Printer Ports screen</i>	<i>224</i>
<i>Serial Port Configuration screen</i>	<i>226</i>
<i>Logical Printers screen</i>	<i>227</i>
<i>Internet Printing screen</i>	<i>228</i>

APPENDIX E WPCONFIG MANAGEMENT PROGRAM 230

<i>Introduction to WPCONFIG</i>	<i>231</i>
<i>Installation</i>	<i>231</i>
<i>Using WPCONFIG</i>	<i>232</i>
<i>WPCONFIG Icons</i>	<i>233</i>
<i>Menu Options</i>	<i>235</i>

Diagnostics menu	235
.....	236

APPENDIX F INTERNET PRINTING 237

Introduction to Internet Printing	238
System Requirements	239
Mail Server.....	239
IOPRINT+ Print Server used for Internet Printing.....	239
User (Client) Requirements	239
Internet Mail Printing Configuration	240
User Software	241
Installation	242
Using the new Port	244
Checking the Printer Driver	245
Printing through the Internet	246
Cancelling a Print Job	246
Server Status screen	247
Printer Ports screen	248
Serial Port Configuration screen	250
Logical Printers screen	251
Internet Printing screen	252

APPENDIX G SNMP 254

SNMP Support	255
Preparing the IOPRINT+ Print Server for SNMP	256
SNMP Settings.....	256
Management Station Settings	257
Trap Receiving Station Settings	257
IOPRINT+ Print Server MIB	258
PSSystemConfig group.....	258
PSLogicalPrinterConfig group.....	259
PSNetwareConfig group	260
PSTcpipConfig group	261
PSAppleTalkConfig group	261
PSNetbeuiConfig group	262
PSStatus group.....	262

PSIPXStatistics	263
PSAppleTalkStatistics	263
PSTcpipStatistics.....	264
PSControl group	264
PSSerialConfig group	265
Traps	265

APPENDIX H FTP (FILE TRANSFER PROTOCOL) 266

Introduction	267
Using FTP	267
Files	268
Commands.....	269
Configuration with FTP	270
Printing using FTP	272

APPENDIX I TROUBLESHOOTING 273

Introduction	274
Hardware Problems	275
Printing problems	276
Printing - General.....	277
Printing - AppleTalk	278
Using the LaserWriter 8.1.1 Driver.....	281
Aldus Freehand 3.11	281
Aldus PageMaker 4.2a	281
Aldus Persuasion 2.1.2	281
Canvas 3.0.6	281
Informed Manager 1.3.5	281
MacDraft 2.1	281
Microsoft PowerPoint	282
Microsoft Works 3.0	282
More 3.1	282
QuarkXPress 3.11	282
Studio/8 and Studio/32	282
Internet Printing.....	283
Printing - NetWare	285
Printing - TCP/IP	292
Printing - Windows	294

<i>WebAdmin Program</i>	<i>296</i>
<i>APPENDIX J CONTACTING PERLE</i>	<i>297</i>
<i>Making a technical support query</i>	<i>298</i>
<i>Who to contact</i>	<i>298</i>
<i>Information needed when making a query</i>	<i>299</i>
<i>Making a support query via the Perle web page</i>	<i>300</i>
<i>Repair procedure</i>	<i>301</i>
<i>Website RMA (Return Material Authorisation) Form</i>	<i>301</i>
<i>Feedback about this manual</i>	<i>302</i>
<i>Contacting Perle technical support</i>	<i>303</i>
<i>INDEX</i>	<i>304</i>

Chapter 1 Introduction

You need to read this chapter if you want to...

You need to read this chapter if you want an introduction to the Perle IOPRINT+ Print server.


This chapter provides introductory information about the Perle IOPRINT+ Print server.

This chapter includes the following sections;

- [Features](#) on page [20](#)
- [Year 2000 Compliance](#) on page [22](#)
- [Safety Instructions](#) on page [23](#)
- [IOPRINT+Jr](#) on page [24](#)
- [IOPRINT+](#) on page [27](#)
- [IOPRINT+Jr FAST](#) on page [29](#)

Features

Congratulations on the purchase of your new IOPRINT+ Print Server. This device was designed to provide a simple and efficient network printing solution.

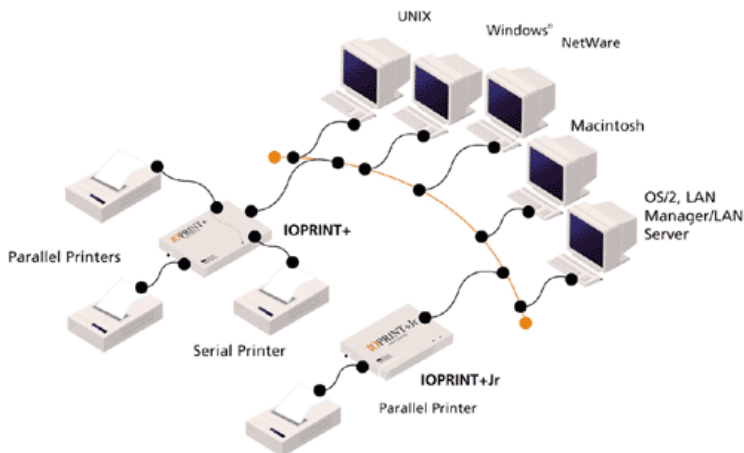

It is packed with features, including:

- **Versatility.**
The IOPRINT+ Print Server supports up to five protocols: NetWare, TCP/IP, SMB (Service Message Block), AppleTalk (EtherTalk), and NetBEUI. It features one or two Ethernet interface ports and operating system support includes Unix, Novell, and Microsoft Windows.
- **Easy Installation.**
The IOPRINT+ Print Server makes adding printers or plotters to your network simple. Depending on your model, it will support 10BaseT only, 10Base2 and 10BaseT, or 10BaseT and 100BaseT. The auto-sensing feature on the LAN interface means that there is no need to set jumpers or perform software configuration to select the network interface used.
- **Easy Setup and Management.**
A number of utility programs are supplied to simplify setup. For Windows 95/98/NT users, the BiAdmin program makes it easy to configure the Print Server for a variety of network and server configurations.
- **Web-based Interface.**
On 100BaseT models, the Web-based interface provides an easy method of configuration in TCP/IP networks.
- **Compact Size.**
This allows the IOPRINT+ Print Server to be used even where space is limited.

- Remote Management Tools.
A variety of software tools are provided. In most environments, both the IOPRINT+ Print Server and attached bi-directional printers can be configured remotely.
- SNMP Support.
The IOPRINT+ Print Server can act as a SNMP agent, with it own MIB. This allows TCP/IP users to monitor, configure and troubleshoot the IOPRINT+ Print Server using their existing SNMP management tools.
- JetAdmin Support.
If you are already using the HP JetAdmin program, you can also use this program to manage your IOPRINT+ Print Server.
- Internet Printing.
Using TCP/IP, the IOPRINT+ Print Server can be configured to allow clients, suppliers, colleagues and others to print to one of your printers from anywhere on the Internet.

Year 2000 Compliance

The IOPRINT+ Print Server does not store the date, nor does it perform date calculations. When necessary, it obtains the current date from the network or client operating system. We recommend the use of network and client operating systems which are year 2000 compliant.


Safety Instructions

For your own safety, and to protect your IOPRINT+ Print Server, please observe the following safety advice.

1. Unplug this device from its power source before cleaning. Use only a slightly dampened cloth for cleaning. Do not use liquid or aerosol cleaners.
2. Avoid using this product near water. Exposure to water poses an electric-shock hazard.
3. Do not place this device on an unstable surface. The device may fall causing serious damage to the device.
4. This device should only be used with the power supply type specified on the marking label. If you are not sure of type of your local power supply, consult your dealer or local power company.
5. Do not pinch, crimp or otherwise damage the power cord. If exposed to foot traffic, ensure that the cable is properly shielded and does not pose a tripping hazard.
6. If using an extension cord, make sure the total ampere rating of the products using the cord does not exceed the extension cord's ampere rating.
7. Do not attempt to service this device, as opening or removing casing may expose you to dangerous voltage points or other risks. Refer all servicing to qualified service personnel.
8. The device should be serviced by qualified service personnel under the following conditions:
 - The power cord is damaged or frayed.
 - Liquid has been spilled onto the product.
 - The product has been exposed to rain or water.
 - The product does not operate normally in accordance with the operating instructions.
 - The device has been dropped or the casing has been damaged.

IOPRINT+Jr

The IOPRINT+Jr is about the size of 3.5" floppy diskette. It provides one Centronic parallel port and two Ethernet interface ports (BNC and UTP).

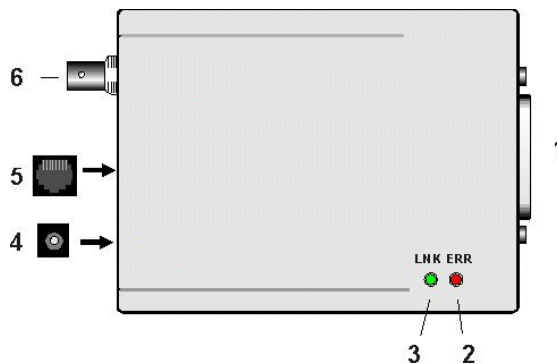

1. Parallel Port
2. Red Error LED
3. Green Link LED
4. 9V Power port.
5. 10BaseT Connector
6. 10Base2 (BNC) Connector

This section includes the following:

- [LED guide](#) on page **25**
- [Configuration File Format](#) on page **26**

LED guide

There are two LED indicators on the top on the IOPRINT+Jr

LED	Function
Green	Power/Link indicator
Red	Status/Error indicator

The LED indicator modes are described in the following table.

Green LED	Red LED	Status description
Solid Off	Solid Off	No power.
Solid On	Solid On	Hardware error.
Solid On	Solid Off	Normal operation.
Flashing	Off	Transmitting or receiving packets from the network.

Configuration File Format


For details of the CONFIG file for this model see [Introduction](#) on page [267](#).

Note

This information is provided for users who use FTP for configuration, and thus need to edit the CONFIG file directly.

IOPRINT+

The IOPRINT+ provides 1 RS-232 serial port and 2 parallel ports; all ports can be used simultaneously. Two Ethernet interface ports (BNC and UTP) are also provided.

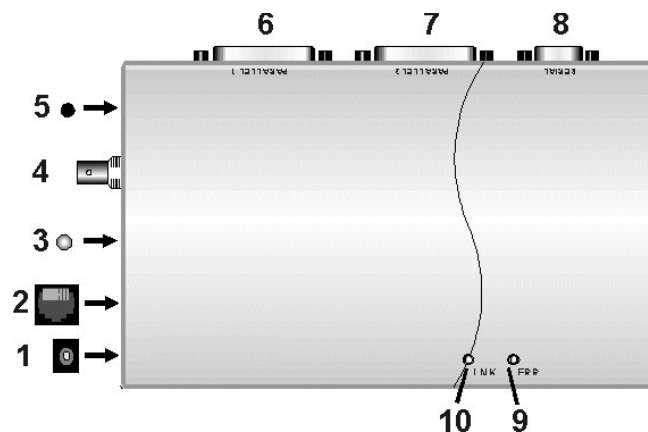

1. 9V Power port
2. 10BaseT Connector
3. 10BaseT (UTP) LED
4. 10Base2 (BNC) Connector
5. Reset Push Button
6. Parallel Port 1
7. Parallel Port 2
8. Serial Port
9. Red Error LED
10. Green Link LED

This section includes the following:

- [LED Indicators](#) on page 28
- [Configuration File Format](#) on page 26

LED Indicators

There are two LED indicators on the top on the IOPRINT+

LED	Function
Green	Power/Link indicator
Red	Status/Error indicator

The LED indicator modes are described in the following table.

Green LED	Red LED	Status description
Solid Off	Solid Off	No power.
Solid On	Solid On	Hardware error.
Solid On	Solid Off	Normal operation.
Flashing	Off	Transmitting or receiving packets from the network.

Configuration File Format


For details of the CONFIG file for this model see [Introduction](#) on page [267](#).

Note

This information is provided for users who use FTP for configuration, and thus need to edit the CONFIG file directly.

IOPRINT+Jr FAST

The IOPRINT+Jr FAST offers support for both 10BaseT and 100BaseT environments. It features one UTP connector and one bi-directional parallel port.

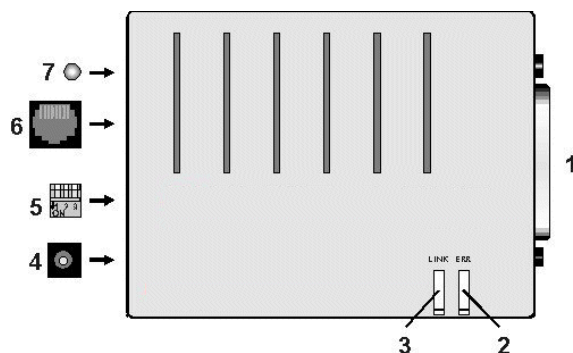

1. Parallel Port
2. Red Error LED
3. Green Link LED
4. 12V Power port
5. 10/100BaseT Switches (See DIP switch table for details.)
6. 10/100BaseT UTP Connector
7. 10/100BaseT Link LED

This section includes the following;

- [LED Indicators](#) on page 30
- [10/100BaseT DIP Switches](#) on page 30
- [Configuration File Format](#) on page 31

LED Indicators

There are two LED indicators on the top on the IOPRINT+Jr FAST

LED	Function
Green	Power/Link indicator
Red	Status/Error indicator

The LED indicator modes are described in the following table.

Green LED	Red LED	Status description
Solid Off	Solid Off	No power.
Solid On	Solid On	Hardware error.
Solid On	Solid Off	Normal operation.
Flashing	Off	Transmitting or receiving packets from the network.

10/100BaseT DIP Switches

The 2 DIP switches are used to determine the operating mode. Their function is as follows.

Switch	Function	Details
1	Auto Negotiation Switch	When ON (UP position), the device will select 10BaseT/100BaseT and Full/Half Duplex as required. The recommended position is ON; switches 2 & 3 are disabled when Auto Negotiation is ON.
2	10/100BaseT Manual Select Switch	Set UP for 100BaseT or DOWN for 10BaseT. Switch 1 must be OFF for this switch to function.
3	Full/Half Duplex Switch	Set UP for Full duplex operation or DOWN for Half Duplex operation. Switch 1 must be OFF for this switch to function.

Configuration File Format

For details of the CONFIG file for this model see [Introduction](#) on page [267](#).

Note

This information is provided for users who use FTP for configuration, and thus need to edit the CONFIG file directly.

Chapter 2 Installation and Configuration

You need to read this chapter if you want to...

You need to read this chapter if you want to install and configure your IOPRINT+ unit.

This chapter provides information about installing and configuring your IOPRINT+ unit.

This chapter includes the following sections;

- [LAN Installation](#) on page [33](#)
- [Initial configuration](#) on page [34](#)
- [Management](#) on page [36](#)
- [General Device Settings](#) on page [38](#)
- [AppleTalk Configuration](#) on page [39](#)
- [Unix - TCP/IP](#) on page [45](#)
- [NetWare configuration](#) on page [69](#)
- [Printing - NDS & Bindery](#) on page [77](#)
- [Windows NT Server \(TCP/IP\)](#) on page [78](#)
- [Windows Peer-to-Peer - NetBEUI](#) on page [91](#)
- [Windows Peer-to-peer - SMB](#) on page [112](#)
- [Windows Peer-to-peer - TCP/IP](#) on page [116](#).

LAN Installation

To install your IOPRINT+ Print Server in your LAN, follow the procedure below:

1. Find the Default IOPRINT+ Print Server Name

The default name is located on a bar code sticker attached to the bottom of the IOPRINT+ Print Server unit. It will be in the form SCxxxxxx (SC followed by 6 digits).

2. Record this name; it will be needed during configuration.

Note

During configuration you will be able to change the device name. The new name **MUST NOT** contain any spaces or blanks.

3. Connect the printer or plotter cable(s) to the appropriate port(s) on the IOPRINT+ Print Server unit. Parallel port cables should be less than 3 meters long.

Note

Leave the IOPRINT+ Print Server powered OFF while connecting it to the Printer(s) and the LAN.

4. Connect the network cable (BNC or UTP) to the proper connector on the IOPRINT+ Print Server. The IOPRINT+ Print Server will automatically recognize whichever connector is used.

Note

If your IOPRINT+ Print Server has both BNC and UTP connectors, you can use only ONE (1) of these LAN connectors.

5. Plug in the power adapter cable.
6. If your model supports 10BaseT and 100BaseT, check the 10/100BaseT link LED next to the LAN connection.
7. If the auto negotiation fails, the 10/100BaseT Link LED will not light when the device is powered up. In this case, check the cable, then press the reset button.
8. If the 10/100BaseT Link LED still does not light, disable the auto negotiation function and manually set switches 2 and 3, as described in the documentation for your model.

9. Check the Power and Status LED indicators on the top of the unit. When the Red Status indicator LED goes out and the Green Power indicator LED remains lit or flashes, the IOPRINT+ Print Server is ready.



Warning

Use only the Power Supply unit provided with the device. Power Supply units for different models are not interchangeable.

10. If desired, use Velcro adhesive strips to attach the IOPRINT+ Print Server unit to the side of a laser printer to conserve working space.

Initial configuration

This section describes how to configure your IOPRINT+ unit following installation.

The IOPRINT+ Print Server is designed to support many different platforms, and the configuration required will depend upon the environment in which it is installed. Depending upon the situation, any or all of the following may require configuration:

- IOPRINT+ Print Server device.
- LAN Server.
- Client PCs on the LAN.

Following configuration, you can use a number of utilities to perform management tasks. See [Management](#) on page 36 for details.

This section includes the following:

- [Windows Users](#) on page 34
- [Configuration Procedure](#) on page 35

Windows Users

If you are running Windows 95/98, or Windows NT, use the SETUP program in the appropriate directory on the CD-ROM.

This will allow you to install the manual and the **BiAdmin** configuration/management program.

- For details regarding configuration for your particular situation, see the list of documents below.
- For details about the **BiAdmin** utility and other management utilities provided with your IOPRINT+ Print Server, see the following *Management* section.

Configuration Procedure

Detailed instructions regarding configuration are contained in the following documents. Please refer to the appropriate document for configuration details relating to your particular situation.

- [AppleTalk Configuration](#) on page [39](#)
- [NetWare configuration](#) on page [69](#)
- [Windows NT Server \(TCP/IP\)](#) on page [78](#)
- [Windows Peer-to-Peer - NetBEUI](#) on page [91](#)
- [Windows Peer-to-peer - SMB](#) on page [112](#)
- [Windows Peer-to-peer - TCP/IP](#) on page [116](#).

Management

Following initial configuration, the following management programs or methods can be used to monitor and manage the IOPRINT+ Print Server and the printers attached to it.

Click the appropriate link for more information.

Method	Platform	Details
BiAdmin	Windows 95/98/NT (IPX/SPX, TCP/IP, NetBEUI)	Recommended program; supports all IOPRINT+ Print Server features. See Appendix A BiAdmin Management Program .
FTP	All TCP/IP networks	Using this method, the configuration file is down loaded from the IOPRINT+ Print Server, edited, then sent back. See Appendix H FTP (File Transfer Protocol) .
JetAdmin (HP) (100BaseT models only)	Windows 95/98/NT	This program is not supplied, but 100BaseT models are compatible with it. You can use this program to manage 100BaseT IOPRINT+ Print Servers and the attached printers.
PSTool	AppleTalk (EtherTalk)	Not required for basic operation. See AppleTalk Configuration .
PSConfig	DOS (IPX/SPX)	Menu-based DOS program for NetWare users. See Appendix B PSConfig .
Telnet	All TCP/IP networks	Telnet can be used only to monitor the printers attached to the IOPRINT+ Print Server. See Unix - TCP/IP on page 45 or Windows NT 4.0 on page 96 .
WebAdmin	Windows NT Server, Web Browser client (TCP/IP)	WebAdmin is installed on the NT Server, and then accessed using a Web Browser. See Appendix C WebAdmin .
Web Browser	All TCP/IP networks	Only available on 100BaseT models. Printer Configuration is not supported.
WPConfig	Windows 3.1 (IPX/SPX, TCP/IP, NetBEUI)	Not all IOPRINT+ Print Server features are available.

Note

BiAdmin is the recommended program to use for both configuration and management, if possible. This program can be installed using the SETUP program in the appropriate directory on the CD-ROM.

If supports all features of the IOPRINT+ Print Server.

General Device Settings

The following configuration settings and operations are available regardless of which Network protocol or operating system is being used.

- Get IOPRINT+ Print Server status and existing settings
- Reset (reboot) the IOPRINT+ Print Server
- Restore Default Configuration settings
- Change the device name.
- Change the device password.
- Disable/Enable network protocols.
- Get Printer Status (idle, off-line, printing)
- Set Serial port configuration (if the serial port exists):

- Baud rate
- Handshake protocol
- Stop bits
- Data bits
- Parity.

As well, there are specific settings for each supported platform. These settings are detailed in the documentation for each platform.

AppleTalk Configuration

The IOPRINT+ Print Server supports AppleTalk (EtherTalk), PAP, ATP, NBP, ZIP and DDP protocols, enabling Macintosh computers on the network to view and use the IOPRINT+ Print Server as a regular AppleTalk printer. Configuring and printing in the EtherTalk environment operates completely as usual.

The PStool program has been provided specifically for the Macintosh environment, to allow easy configuration of your IOPRINT+ Print Server.

This section includes the following:

- [Software Requirements](#) on page [40](#)
- [AppleTalk Setup](#) on page [40](#)
- [Printing](#) on page [41](#)
- [Advanced Setup and Management](#) on page [41](#)
- [AppleTalk Settings](#) on page [43](#).

Software Requirements

System 7.x OS or newer.

AppleTalk Setup

1. Click the apple icon and choose Control Panel.
2. Click Network.
3. Ensure that *EtherTalk* is selected under *AppleTalk Connection*.
4. Click *Chooser*. The Chooser panel will open.
5. Click on either the *LaserWriter 8* icon (recommended) or the *LaserWriter 7* icon.
LaserWriter 8 makes use of the fonts installed in the printer itself, so the printing response time is quicker. LaserWriter 7 uses the fonts installed in the computer, which increases network traffic and takes more printing time.
6. Select a IOPRINT+ Print Server from the printer list by clicking on the appropriate name. The IOPRINT+ Print Server's name will appear in the form of SCxxxxxx, (SC followed by 6 digits) which is recorded on the bar code label on the bottom of the IOPRINT+ Print Server.
7. Click on the *Close* box.
Configuration is now complete.

Printing

Printing with the IOPRINT+ Print Server installed in an AppleTalk network is identical to normal printing.

For example, select a document that you want to print and then select *File - Print*. Chose the desired printer.

Advanced Setup and Management

This section describes the configuration changes which can be made to your IOPRINT+ Print Server device.

Changing the Device Configuration - Windows Software

In a mixed Windows PC/Macintosh environment, you can use either WPConfig or BiAdmin to configure the IOPRINT+ Print Server.

Changing the Device Configuration - Macintosh Software

In AppleTalk, you can use **SimpleText** to edit the IOPRINT+ Print Server's CONFIG file and the supplied **PSTool** program to send it to the IOPRINT+ Print Server. The procedure is as follows:

1. Navigate to the Utility\Apple folder on the CD-ROM.
2. Copy the file "PSTool" to an appropriate folder on your hard disk.
3. Select the appropriate CONFIG file for your model, and copy it to your hard disk. The CONFIG files are as follows:
 - config.1p - Single parallel port model
 - config.2p1s - Two parallel ports, 1 serial port
 - config.3p - Three parallel ports
4. Use **Chooser** to select the desired IOPRINT+ Print Server.
5. Double click the CONFIG file, and edit it. The file should look like the example below, but may vary depending on your model. The appropriate values for each line are described in the following section.

```
begin CMD
0001 Device Name: SCxxxxxx
3000 Apple Zone : *
3001 Printer Type (P1): LaserWriter
3002 Printer Type (P2) LaserWriter
3003 Printer Type (SP): LaserWriter
3004 Printer Type (P3) LaserWriter
3101 AP_PCOMM1: No
3102 AP_PCOMM2: No
3103 AP_PCOMM3: No
3104 AP_PCOMM4: No
Serial Port Configuration
0030 Baud Rate: 9600
0031 Stop Bits: 1
0032 Parity: None
0033 Data Bits: 8
0034 Handshake: HARDWARE
9002
```

Note

Do NOT modify the following lines:
beginCMD
9002:

6. Save the file.
7. Double click the icon for **PSTool**.
8. Click the Printer submenu and choose **Download Postscript File**.
A panel will appear with a list of files.
9. Click the CONFIG file. Then click **Download**.

AppleTalk Settings

When editing the CONFIG file, only the *parameter* should be changed. The *parameter* is the last part of the line, after the colon (:). Ensure that you use only valid *parameters*.

Parameter	Details
0001 Device Name: SCxxxxxx	The default name will be in the form SC followed by 6 digits. This can be changed, but the new name MUST NOT exceed 19 characters in length.
3000 Apple Zone: *	The default value "*" allows all AppleTalk zones to access the IOPRINT+ Print Server's printers. To restrict access to a particular zone, enter the zone name here.
3001 Printer Type (P1): LaserWriter 3002 Printer Type (P2): LaserWriter 3003 Printer Type (SP): LaserWriter 3004 Printer Type (P3): LaserWriter	These are text fields, used to describe the printer driver used for each port. P1, P2, P3 refer to the parallel ports, while SP refers to the Serial Port. The name can be up to 19 characters long.

Parameter	Details
3101 AP_PCOMM1: No 3102 AP_PCOMM2: No 3103 AP_PCOMM3: No 3104 AP_PCOMM4: No	<p>These settings determine whether the port uses ASCII or Binary Communication Protocol. Enter NO for ASCII or YES for Binary. The lines refer to the following ports.</p> <p>3101 AP_PCOMM1: Parallel Port 1 3102 AP_PCOMM2: Parallel Port 2 3103 AP_PCOMM3: Serial Port 3104 AP_PCOMM4: Parallel Port 3</p> <p>In choosing which Protocol to use, consider the following points.</p> <p>Binary communication is twice as fast as ASCII ASCII communication is more reliable The computer, IOPRINT+ Print Server and printer MUST all be configured to use the SAME protocol. Check your printer manual for details of printer configuration, and use the <i>Print</i> menu to configure your computer, so that they use the same settings as the IOPRINT+ Print Server.</p>
Serial Port Configuration	<p>Check your serial device to see what settings should be used. The following options are available.</p> <p>Setting Options</p> <p>0030 Baud Rate 300, 600, 1200, 2400, 4800, 9600, 19200, 38400 (bps)</p> <p>0031 Stop Bits 1 or 2.</p> <p>0032 Parity None, Odd, Even.</p> <p>0033 Data Bits 7 or 8.</p> <p>0034 Handshake Hardware, XON/XOFF, None, Both (Hardware & XON/XOFF)</p>

Unix - TCP/IP

- [Software Requirements](#) on page **46**
- [Device Configuration](#) on page **46**
- [Unix Host Configuration](#) on page **51**
- [Printing Methods](#) on page **54**
- [Printing Methods](#) on page **54**
- [LPD Printing Configuration](#) on page **55**
- [FTP \(File Transfer Protocol\)](#) on page **61**
- [Other Printing Methods](#) on page **66**
- [Telnet](#) on page **68**

Software Requirements

- TCP/IP protocol, FTP (Optional: - BOOTP, Rarp, Telnet)
- LPD printing system (for LPD printing)
- C Compiler (for PSfilter proprietary printing system only).

Device Configuration

Configuration of your IOPRINT+ Print Server can be done by any of the following methods. Follow each link for more details.

Method	Description
BiAdmin	This is the recommended program for configuration and management of the IOPRINT+ Print Server. It is used by the main SETUP program on the CD-ROM, and can also be installed using SETUP. BiAdmin requires Window 95/98 or Windows NT. BiAdmin can be used to assign an IP Address to the IOPRINT+ Print Server. See Appendix A BiAdmin Management Program .
FTP	Command-line FTP (File Transfer Protocol) clients are supported. FTP can be used to assign an IP Address to the IOPRINT+ Print Server, provided that the procedures in Unix Host Configuration on page 51 have been completed. See Appendix H FTP (File Transfer Protocol) .
Web Browser	100BaseT models incorporate a HTTP server, allowing configuration with a Web Browser. This method can be used to assign an IP Address to the IOPRINT+ Print Server, provided that the procedures in Unix Host Configuration on page 51 have been completed. See Appendix D Web Browser configuration .

IP Address Configuration

The IOPRINT+ Print Server requires the following IP Addresses to be entered.
(The entry in brackets shows the line number and token in the device's configuration file. This information is for people using FTP.)

Item	Description
IP Address (4000 IP_ADDR)	Device IP Address. See the following section.
Gateway Address (4001 GATEWAY)	If your network segment has a router, enter the router address here. If there is no router, leave the address as 0.0.0.0.
Subnet Mask (4002 MASK)	If the Gateway Address above is 0.0.0.0 the Subnet Mask should also be left at 0.0.0.0. If you have a router, enter the Subnet mask for the segment to which the IOPRINT+ Print Server is attached.

Device IP Address Normally, the IOPRINT+ Print Server is assigned a static IP Address. If you leave its IP Address at the default value of 0.0.0.0, its sequence for finding an IP Address dynamically is as follows:
DHCP, BOOTP, RARP.
See [Dynamic IP Address Configuration](#) on page 52 for more details.

Other Configuration Settings

When assigning the IP Addresses, you should also check the following configuration settings.

Item	Description
Device Name (0001 BOX_NAME)	The default name will be in the form SCxxxxxx (SC followed by 6 numbers). This can be changed. The new name MUST NOT exceed 19 characters, nor include any spaces.
TCP Session Retry Interval (4010 TCP_INT)	Sets how long the IOPRINT+ Print Server should wait before retrying a TCP/IP connection which is lost. Allowable values are from 0 to 255 seconds, with 2 as the default.
TCP Session Retry Count (4011 TCP_CNT)	Sets how many attempts at reconnection will be made. After that, the TCP/IP session will be terminated. Allowable values are from 0 to 255, with 254 as the default.

Serial Port Setup (if exists)

Item	Description
Baud Rate (bps) (0030 BAUDRATE)	Allowable values are 300, 600, 1200, 2400, 4800, 9600, 19200, 38400
Stop bits (0031 STOPBITS)	Allowable values are 1 or 2
Parity (0032 PARITY)	Allowable values are NONE, ODD, EVEN
Data bits (0033 DATABITS)	Allowable values are 7 or 8
Handshake (0034 HANDSHAK)	Allowable values are NONE, HARDWARE, XON/XOFF, BOTH

Logical Printers

Logical Printers can be used to create a "Virtual" printer. For example, to create a Landscape printer, you could define a Logical Printer as follows:

Item	Description
Pre-string	Printer Control codes to switch the printer to Landscape mode
Post-string	Printer Control codes to reset the printer, restoring the default settings.

Another logical printer could be used to print Unix-format text files for a DOS printer, by converting Unix-style LF (Line Feeds) to DOS-style LF/CR (Line Feed, Carriage Return) pairs.

IOPRINT+ Print Server models with 1 parallel port support 3 Logical Printers, otherwise they support 8 Logical Printers. The names (L1..L8) cannot be changed. Each Logical Printer has 4 settings as shown below.

Logical Printer Setup Data

Item	Description
Physical Port (0100 L1_PROUT)	IOPRINT+ Print Server Port to which the printer is attached (P1 to P3 for parallel ports and SP for the serial port).
String Before Job (0101 L1_PREST)	The printer control string (in hex) to be sent to the printer before each print job.
String After Job (0102 L1_POSTR)	The printer control string (in hex) to be sent to the printer after each print job.
Convert LF to CR+LF (0103 L1_CHGLF)	If ON, LF (line feed) characters are changed to CR+LF (carriage return + line feed). If OFF, no conversion is done.

Note

The maximum size of a printer control string is 15 characters. Printer control strings must be entered in HEX.

The line numbers in the IOPRINT+ Print Server's CONFIG file are listed in the next table. This information is useful if you use FTP for configuration.

Logical Printer	Line Numbers
L1	0100 to 0103
L2	0120 to 0123
L3	0140 to 0143
L4	0160 to 0163
L5	0180 to 0183
L6	0200 to 0203
L7	0220 to 0223
L8	0240 to 0243

Unix Host Configuration

The IOPRINT+ Print Server must be provided with a IP Address so that it will be a valid device on the LAN. This can be done using either *Static* or *Dynamic* IP Address configuration.

Static IP Address Configuration

1. Determine the **Physical Address** of the IOPRINT+ Print Server from the *default name* shown on a sticker on the base of the unit.
 - The default name is in the form SCxyyzz (SC followed by 6 numbers).
 - The **Physical Address** of the device is formed by joining "00:c0:02:" to the digits in the default name.
For example, a name of SC123456 means the physical address is 00:c0:02:12:34:56.
2. Login to the UNIX host as root.
3. Add the IOPRINT+ Print Server to the /etc/hosts file by adding the following line to the file:

```
IP_Address NAME # comment
```

Where:

IP_Address is the IP address for the IOPRINT+ Print Server. This address **must match** the address stored in the device.

NAME is the IOPRINT+ Print Server's name. This **must match** the name stored in the device.

comment. Add the *Default Name* as a comment.

Example:

```
192.10.2.54 PS_Rm203 #Default name SC123456
```

In the example above, SC123456 is assigned the IP address 192.10.2.54 and the name "PS_Rm203".

4. Associate the physical address with the IP address of the IOPRINT+ Print Server, by using the **arp** command as follows:

```
arp -s NAME 00:c0:02:xx:yy:zz
```

Where:

NAME is the name assigned to the device

00:c0:02:xx:yy:zz is the physical address of the IOPRINT+ Print Server, as determined from the default name.

Example:

```
arp -s PS_Rm203 00:c0:02:12:34:56
```

5. Check the IP Address using the **ping** command:

```
ping NAME
```

You should receive a response. If you get a *Timeout* message, the above procedure has failed.

6. If the IOPRINT+ Print Server is not configured yet, you can now connect and configure it using FTP.

Dynamic IP Address Configuration

If the device's IP Address is left at 0.0.0.0 it will try to obtain a dynamic IP Address by using the following methods in sequence: DHCP, BOOTP, RARP.

Using DHCP

Using DHCP is only possible if you have DHCP management software which allows you to take advantage of this feature. Otherwise, the IOPRINT+ Print Server's IP Address will be unknown, and connection to it will be impossible. In this case, configure the IOPRINT+ Print Server for a static IP Address.

Using BOOTP

1. Perform steps **1.** to **3.** for assigning a static IP Address.
2. Add the following entry to the Boot Table /etc/boottab

```
NAME:ht=ether:vm=rfc1024::ha=PA:ip=IP:sm=SM:gw=GW
```

Where

NAME is the IOPRINT+ Print Server's name

PA is the physical address of the IOPRINT+ Print Server

IP is the IOPRINT+ Print Server's IP Address

SM is the Subnet Mask

GW is the Gateway IP Address

3. If it is not running, start the bootp daemon (the usual command is `bootpd`) and then reset the IOPRINT+ Print Server. It should then acquire an IP Address using bootp.
4. If the IOPRINT+ Print Server is not configured yet, you can now configure it using FTP. Otherwise, check with the ping command:

```
ping NAME
```

You should receive a response. If you get a *Timeout* message, the above procedure has failed.

Using RARP

1. Perform steps 1. to 3. for assigning a static IP Address.
2. If the rarp daemon is not running, start it with the command:
`rarpd -a`

3. Add a line to the Ethernet Address table /etc/ethers

```
00:c0:02:xx:yy:zz NAME
```

Where

00:c0:02:xx:yy:zz is the physical address of the IOPRINT+ Print Server

NAME is the name of the IOPRINT+ Print Server.

4. Reset the IOPRINT+ Print Server. When it reboots, it should acquire an IP Address from rarp.
5. If the IOPRINT+ Print Server is not configured yet, you can now configure it using FTP. Otherwise, check the Address with the ping command:

```
ping NAME
```

You should receive a response. If you get a *Timeout* message, the above procedure has failed.

Printing Methods

There are 4 printing methods to choose from. All are explained in the following table. Select whichever is the most convenient in your environment.

Printing method	Description
LPD	<p>LPD is a standard print method for most UNIX systems. The benefit of this method is that it eliminates the need to install additional software on the host.</p> <p>The problem is that in most cases the LPD protocol sends out the data file before the control file. The IOPRINT+ Print Server will print the data file immediately, ignoring any print options set in the control file. To solve this problem, use PSfilter instead.</p>
PSfilter	<p>PSfilter is a proprietary print method provided with the IOPRINT+ Print Server. The benefit of this method is that it provides many print options such as banner print, copies, and so on. To use PSfilter, a C compiler must be installed on every UNIX host so that the PSfilter source code can be compiled into executable code and installed on the UNIX host.</p>
FTP (File Transfer Protocol)	<p>FTP is also a standard print method in most UNIX systems, but it is NOT recommended except as a test and back-up method of printing.</p> <p>LPD and PSfilter work well with a large number of users because they both employ print queue processes.</p> <p>FTP does not implement a print queue. If the printer is busy, the print command will fail, creating an error situation.</p>
Direct Socket Interface	<p>The Direct Socket Interface (DSI) is a Unix-based method of providing a "direct" connection between a host computer and a printer. The host and the IOPRINT+ Print Server establish a TCP connection, using a special socket number. All data sent over this connection is treated as print data, and sent transparently to a logical printer defined on the IOPRINT+ Print Server.</p>

LPD Printing Configuration

LPD is a built-in printing protocol for most UNIX systems, and is also supported in Windows NT 3.5 or later.

LPD on IBM AIX 4.15

Before proceeding, ensure that the IOPRINT+ Print Server has been assigned an IP Address. To setup your AIX system for LPD printing, perform the following steps.

1. Add the IOPRINT+ Print Server to **/etc/hosts.lpd**, using the name you assigned to the IOPRINT+ Print Server.
2. Start the LPD daemon if it is not running, using the following command:

```
start src -s qdaemon
```
3. Start the system administration tool **smit** and select *Print Spooling*
4. Create the required number of queues (one for each logical printer) by selecting:
 - Add a Print Queue
 - Remote (Printer attached to Remote Host)
 - Standard Processing
5. Use the following information:

Field	Entry
Name of queue to add	Use a single-word queue name which indicates which printer is attached.
Hostname for remote server	IOPRINT+ Print Server name as used in /etc/hosts.lpd.
Name of queue on remote server	Logical printer number (L1..L3 or L1..L8) to service this queue.
Type of print spooler on remote server.	Use default value (AIX Version xxx)

6. Ensure that the logical printers are configured in the IOPRINT+ Print Server. Refer to [Logical Printers](#) on page 49
7. Print using the following command:

```
lp -d printer_queue file_name
```

Where

printer_queue is one of the entries used in *Name of queue to add*.

file_name is the file you wish to print.

LPD on System V

Before beginning LPD Setup, ensure that an IP Address has been assigned to the IOPRINT+ Print Server. Keep the following points in mind:

- The **remote host name** is the name of the IOPRINT+ Print Server.
- The **remote printer name** is the print queue name for the Logical Printer. Logical printers also need to be configured on the IOPRINT+ Print Server itself. (See page 4).
- If your UNIX asks for the LPD type, be sure to identify the service type as BSD. The IOPRINT+ Print Server's LPD protocol meets BSD system standards.
- In the sample commands shown, *printer_name* is the name of the Print Queue serviced by the IOPRINT+ Print Server, and *Spooler_directory* is the name of the directory used to spool the print jobs.

Procedure

Action	Sample Command
Stop Print Services	<code>/usr/lib/lpshut</code>
Add a System Printer	<code>/usr/lib/lpadmin -p <i>printer_name</i> -v /dev/null</code>
Restart the Print Services	<code>/usr/lib/lpsched</code>
Enable printing to the new printer device	<code>enable <i>printer_name</i></code>
Start accepting jobs for the new printer device	<code>accept <i>printer_name</i></code>
Create a spooling directory	<code>mkdir /usr/spool/<i>Spooler_directory</i></code>
Make spooling daemon the owner of this directory	<code>chown daemon /usr/spool/<i>Spooler_directory</i></code>
Create read/write permissions	<code>chmod 775 /usr/spool/<i>Spooler_directory</i></code>
Give permissions to LPD processes.	<code>chgrp daemon /usr/spool/<i>Spooler_directory</i></code>
Add remote printer(s)	See Adding Remote Printers on page 57.

Adding Remote Printers

A remote printer is added by inserting the following line in the /etc/printcap file.

The entry is really one line, but can be entered as shown.
Use a TAB character where shown.

```
printer_name|Remote_Printer_Alias:\
[TAB] :lp=: \
[TAB] :rm=PS_NAME:\
[TAB] :rp=Logical_Printer_name:\
[TAB] :sd=Spooler_directory:\
[TAB] :mx#0:
```

Where:

printer_name is the Print Queue name used to store jobs for the corresponding logical printer

PS_NAME is the IOPRINT+ Print Server name defined in /etc/hosts

Logical_Printer_name is the logical printer name on the IOPRINT+ Print Server (L1..L3 or L1..L8, depending on your model)

Spooler_directory is the directory you created in Step 6.

Example:

```
Marketing|RP1_SC123456:\
[TAB] :lp=: \
[TAB] :rm=PS_Rm203:\
[TAB] :rp=L1:\
[TAB] :sd=/usr/spool/Marketing:\
[TAB] :mx#0:
```

Repeat this process for each Logical Printer/Print Queue combination that you wish to create.

LPD on BSD

Before continuing, ensure that an IP Address has been assigned to the IOPRINT+ Print Server. Remember the following:

- The **remote host name** is the name of the IOPRINT+ Print Server.
- The **remote printer name** is the logical printer (L1..L3, or L1..L8) on the IOPRINT+ Print Server.
- If asked for the LPD type, enter the service type as BSD.
- In the sample commands shown, *printer_name* is the Print Queue serviced by the logical printer on the IOPRINT+ Print Server, and *Spooler_dir* is the name of the directory used to spool the print jobs.

Procedure

Action	Sample Command
Create a spooling directory	<code>mkdir /usr/spool/Spooler_dir</code>
Set spooling daemon as owner of this directory.	<code>chown daemon /usr/spool/Spooler_dir</code>
Create read/write permissions.	<code>chmod 775 /usr/spool/Spooler_dir</code>
Give permissions to LPD processes.	<code>chgrp daemon /usr/spool/Spooler_dir</code>
Add remote printer(s)	See below.
Start lpc print mechanism	<code>lpc start printer_name</code>

Adding Remote Printers

A remote printer is added by inserting the following line in the /etc/printcap file.

The entry is really one line, but can be entered as shown.
Use a TAB character where shown.

```
printer_name|Remote_Printer_Alias:\
[TAB] :lp=: \
[TAB] :rm=PS_NAME:\
[TAB] :rp=Logical_Printer_name:\
[TAB] :sd=Spooler_directory:\
[TAB] :mx#0:
```

Where:

printer_name is the Print Queue name used to store jobs for the corresponding logical printer

PS_NAME is the IOPRINT+ Print Server name defined in /etc/hosts

Logical_Printer_name is the logical printer name on the IOPRINT+ Print Server (L1..L3 or L1..L8, depending on your model)

Spooler_directory is the directory you created in Step 6.

Example:

```
Marketing|RP1_SC123456:\
[TAB] :lp=: \
[TAB] :rm=PS_Rm203:\
[TAB] :rp=L1:\
[TAB] :sd=/usr/spool/Marketing:\
[TAB] :mx#0:
```

Repeat this process for each Logical Printer/Print Queue combination that you wish to create.

Printing using LPD

For LPD printing instructions, refer to your UNIX manual. The following example is for a BSD system:

`lpr -P printer_name filename` Where:
printer_name is the name of the Print Queue defined on the Unix host.
filename is the name of the file you wish to print.

Example:

```
lpr -P Marketing /etc/hosts
```

In the above example, the `/etc/hosts` file is sent to the printer queue `Marketing`. It will then be sent to the logical printer associated with this queue.

FTP (File Transfer Protocol)

FTP (File Transfer Protocol) allows a user to log-on to a remote host, and manipulate files on the host. The IOPRINT+ Print Server can act as a FTP host, allowing FTP to be used for both configuration and printing. However, the following limitations apply:

- Only one FTP user can connect to the IOPRINT+ Print Server.
- Only "command line" FTP programs can be used. FTP programs which attempt to "browse" the file system are NOT supported.

Using FTP

1. Configure the IOPRINT+ Print Server so that it has a valid IP Address. Configure the Unix host as described in [Unix Host Configuration](#) on page 51 .
2. Start your FTP client from the command prompt (GUI interface FTP clients are NOT supported) and connect to the IOPRINT+ Print Server using its IP Address.

e.g. ftp 203.70.212.155

If your system has been configured as described in [Windows NT Host Configuration](#) on page 83, you can connect using the IOPRINT+ Print Server's name, rather than the IP Address.

3. The IOPRINT+ Print Server will respond with "Print Server Ready" and prompt for "Name", as shown below:

```
Connected to 203.70.212.45
#220 Print Server Ready
Name (203.70.212.45:root):
```

4. Enter the name for this device. If you have not assigned a name, you must use the "Default name" shown on the sticker on the base of the unit. The "Default name" is in the form SCxxxxxx (SC followed by 6 digits).
5. You will then be prompted for the password. If no password has been set, just press ENTER.
6. From the resulting prompt, you can manipulate the following files, and use the following commands.

Files

The following files will appear on the IOPRINT+ Print Server when it is acting as an FTP host.

Filename	Purpose	Mode
CONFIG	Configuration file	Read/Write (get, put)
DEFAULTC	Reset device to default configuration	Read (get)
PSINF	Device information	Read (get)
PASSRESE T	Clear password	Read (get)
RESET	Reset device	Read (get)
SETIP	Save current IP address	Read (get)

Commands

Only the following commands are implemented. Commands are usually case sensitive. Where the command requires a parameter, the parameter is shown in *italics*.

Command	Description
dir	List files (as shown in the previous table).
get FILENAME	Retrieve a file. The only files that can be retrieved are CONFIG and PSINF. Using GET with the other "files" will activate a command, as follows:
get DEFAULTC	Set the IOPRINT+ Print Server back to its default configuration.
get RESET	Reset the IOPRINT+ Print Server. This also terminates the current connection.
get PASSRESET	Clear password (no password).
get SETIP	Set the current IP address as a static IP address. Note Do NOT use the SETIP command if the device has an IP Address assigned by a DHCP server. This will cause an Address conflict.
put CONFIG	Copy the file CONFIG to the device, overwriting the existing CONFIG file. Details of the format of CONFIG files are contained in <i>Appendix B - Configuration File Format</i> . After using the put CONFIG command to write a new configuration file to the device, you should issue a get RESET command.
put PASSWORD	Copy the file PASSWORD to the IOPRINT+ Print Server, giving it a new password. Passwords can be up to 19 bytes in length.
put filename Ln	Copy the file <i>filename</i> to the printer connected to Logical Port <i>n</i> , where <i>n</i> is a Logical Port number. This will print the file.
quit	Terminate the current FTP session.
Other FTP Commands	The other FTP commands are not implemented, and will usually return the error message <i>Invalid command</i> .

Configuration with FTP

1. Configure the Unix host as described in [Unix Host Configuration](#) on page 51 so that the IOPRINT+ Print Server is recognized as a valid device on the LAN.
2. Connect to the IOPRINT+ Print Server with the following command.
ftp NAME
3. You will be prompted for *Name*, as shown below:

```
Connected to 203.70.212.45
#220 Print Server Ready
Name (203.70.212.45:root):
```

4. Enter the name for this device. If you have not assigned a name, you must use the "Default name" shown on the sticker on the base of the unit. The "Default name" is in the form SCxxxxxx (SC followed by 6 digits).
5. You will then be prompted for the password. If no password has been set, just press ENTER.
6. Copy the configuration file **CONFIG**, to your system, then quit.

```
ftp>get CONFIG
ftp>quit
```

7. Edit the CONFIG file to set parameters in the following four lines in the file.

```
0001 BOX_NAME:Name
4000 IP_ADDR:x.x.x.x
4001 GATEWAY:y.y.y.y
4002 MASK:z.z.z.z
```

Where

New_Name is the IOPRINT+ Print Server's name.

x.x.x.x is the IP Address assigned to the IOPRINT+ Print Server.

y.y.y.y is the IP Address of your router, if you have one.

z.z.z.z is the network mask, if assigned.

Note

You can set any configuration options by editing the CONFIG file. Refer to the *Configuration File Format* for your particular model for a detailed description of the CONFIG file.

8. Copy the CONFIG file back to the IOPRINT+ Print Server, reset, and quit:

```
ftp NAME
ftp>put CONFIG
ftp>get RESET
ftp>quit
```


Printing using FTP

Connect to the IOPRINT+ Print Server, then use the following syntax:

```
ftp>put FileName Ln
```

Where:

FileName is the file to be printed.

n is the number of the logical printer you wish to print to.

Example:

```
#ftp Marketing  
ftp>put /etc/hosts L2
```

This example would print the file `/etc/hosts` to logical printer 2 on the IOPRINT+ Print Server named Marketing.

Printing using FTP is NOT recommended, because:

- There can be only 1 FTP connection, so at any time only one user can print, even on multi-port models.
- Print jobs are not spooled (queued).

Other Printing Methods

The IOPRINT+ Print Server supports 2 other printing methods:

- DSI (Direct Socket Interface). See [Printing Using DSI](#) on page 66.
- PSfilter (Proprietary print method). See [Printing Using DSI](#) on page 66.

Printing Using DSI

Logical printers must be configured on the IOPRINT+ Print Server as explained in *Logical Printers*. Your model may support 8 logical Printers. However, DSI on the IOPRINT+ Print Server supports only 3 Logical Printers
Socket numbers are defined as follows:

Logical Printer No.	Socket No.
1	4010
2	4020
3	4030

Printing Using PSfilter

PSfilter is a proprietary printing system which provides many print options. To use PSfilter, a C compiler and Socket Library must exist on the host so that psfilter.c can be compiled to an executable file.

The PSfilter program is shipped in source code as *psfilter.c*. Detailed instructions for installing, configuring, and using PSfilter are provided in the following files. These files, along with PSfilter.c, are stored on the CD-ROM in the following directories:

`\driver\lpti\lpsource` (text format `\driver\lpti\tar` (tar format)

Operating System	Filename
SCO UNIX System V Release 3	SCO.TXT
HP UXIX on HP workstation	HP.TXT
Sun 5.x on Sun SPARC workstation	SUN5.TXT
Sun 4.x on Sun SPARC workstation	SUN4.TXT
AT&T UNIX SV Release 4	SVR4.TXT
DEC/OSF1	DECOSF1.TXT
IBM AIX	AIX.TXT
UNIXWare	UNIXWARE.TXT

Note

If your system is not listed above, do not attempt to use the PSfilter method of printing.

Telnet

Telnet can be used to monitor the status of the printers attached to the IOPRINT+ Print Server.

Operation

Establish a connection to the IOPRINT+ Print Server, by starting your Telnet program and providing the IP Address of the IOPRINT+ Print Server. (No port number is required.) It will respond with "Welcome to Print Server".

From the resulting prompt, 3 commands are possible:

- **Help:** Show brief help
- **Monitor:** show printer status
- **Exit:** leave telnet

Monitoring

The "Monitor" command will show the status of the printer, on each port, as shown in the following example.

```
(P1)STATE: Idle
TYPE: Parallel
PRINTER STATUS: Out Of Paper
```

```
(P2)STATE: Printing
TYPE: Parallel
PRINTER STATUS: On-Line
BYTES SERVICED: 75264
OCCUPIED BY: LPD
```

```
(SP)STATE: Idle
TYPE: Serial
PRINTER STATUS: Offline
```

The display is updated once per second.

NetWare configuration

This section describes how the IOPRINT+ Print Server functions in the Novell NetWare environment. The IOPRINT+ Print Server fully supports both Bindery and NDS Novell systems, and be configured as either a NetWare *Printer Server* or NetWare *Remote Printer*. Novell Distributed Printing Services (NDPS) under NetWare 5 is also supported.

- [Operating Modes](#) on page [70](#)
- [Configuration Data - NDS & Bindery](#) on page [71](#)
- [Configuration Data - NDPS \(NetWare 5\)](#) on page [73](#)
- [Logical Printers \(Ports\)](#) on page [74](#)
- [Configuration Methods](#) on page [76](#)
- [Printing - NDS & Bindery](#) on page [77](#).

Operating Modes

With either Bindery or NDS, two (2) NetWare operating modes are possible -*Print Server* and *Remote Printer*.

- **Print Server** mode is faster and uses fewer resources than Remote Printer mode but occupies a user login slot. This mode should be used if possible.
- **Remote Printer** mode has the advantage that it does not use a login slot.

Operation - Print Server Mode

The IOPRINT+ Print Server emulates NetWare PSERVER. When the unit is activated, it will perform the following operations:

- Login to specified NetWare file server(s)
- Poll the specified print queues.
- If there are print jobs in the print queues, then the IOPRINT+ Print Server will send them to the printer(s).

Operation - Remote Printer Mode

The IOPRINT+ Print Server emulates a NetWare Remote Printer. After the unit is activated, it will perform the following operations:

- Connect to NetWare PSERVER
- Receive the print jobs sent by PSERVER
- Convert the packet format to a acceptable printer format, and send the data to the printer.

Configuration Data - NDS & Bindery

The IOPRINT+ Print Server requires the following "General" data, and the data for the mode (Print Server or Remote Printer) you are using.

This section includes the following:

- [General](#) on page 71
- [Novell Remote Printer Mode](#) on page 71
- [Novell Print Server Mode](#) on page 72

General

Item	Description
Device Name	The default name is shown on a sticker on the base of the device, in the form SCxxxxxx (SC followed by 6 digits). Change this if you wish. The new name MUST NOT exceed 19 characters, nor contain any spaces.
Device Password	Default is NULL (no password).
NetWare Mode	<i>Print Server or Remote Printer.</i>
Frame Type	Select the frame types used by your network. (Ethernet 802.2, Ethernet 802.3, Ethernet SNAP, and Ethernet II) By default, all frame types are enabled.

Novell Remote Printer Mode

Item	Description
Novell Printer Server for P1	NetWare print server to service the IOPRINT+ Print Server's parallel port 1
Novell Printer Server for P2, P3 & SP (if exist)	NetWare print server to service the IOPRINT+ Print Server's parallel port 2 (P2), parallel port 3 (P3), or Serial port (SP), if fitted.

Novell Print Server Mode

Item	Description
NDS Tree Name	Not applicable. (NetWare NDS mode only)
Print Server NDS Context	Not applicable. (NetWare NDS mode only)
Master file server (Bindery mode only)	Name of the IOPRINT+ Print Server's master file server.
Polling Queue Interval	Defines how often the IOPRINT+ Print Server will poll the queues to be serviced.
Job Notification by Connection ID	Set to Yes to receive a job notification at only the workstation where the print job originated, No to receive a job notification at all workstations that you have logged on.
NetWare Password	The password on the NetWare Print Server. The device needs this password to connect to the NetWare server.

Configuration Data - NDPS (NetWare 5)

If using DNPS (Novell Distributed Printing Services), the IOPRINT+ Print Server must be configured for use in a TCP/IP environment. The following information is required.

Parameter	Details
IP Address	<p>The IOPRINT+ Print Server must have a valid IP Address.</p> <p>The IP Address can be obtained dynamically, using DHCP, or use a static IP Address which you assign. Using a static address is more common.</p> <p>Because of the support for dynamic IP Addresses, the IOPRINT+ Print Server ships with an IP Address of 0.0.0.0.</p>
Gateway Address	<p>If your network segment has a router, enter the router address. If there is no router, leave the address as 0.0.0.0.</p>
Subnet Mask	<p>If the Gateway Address above is 0.0.0.0 the Subnet Mask should also be left at 0.0.0.0.</p> <p>If you have a router, enter the Subnet mask for the segment to which the IOPRINT+ Print Server is attached.</p>
TCP Session Retry Interval	<p>Sets how long the IOPRINT+ Print Server should wait before retrying a TCP/IP connection which is lost. Allowable values are from 0 to 255 seconds, with 2 as the default.</p>
TCP Session Retry Count	<p>Sets how many attempts at reconnection will be made. After that, the TCP/IP session will be terminated. Allowable values are from 0 to 255, with 254 as the default.</p>

Logical Printers (Ports)

Logical Printers can be used to create a "Virtual" printer. For example, to create a Landscape printer, you could define a Logical Printer as follows:

Item	Description
Pre-string	Printer Control codes to switch the printer to Landscape mode
Post-string	Printer Control codes to reset the printer, restoring the default settings.

Another logical printer could be used to print Unix-format text files properly, by converting Unix-style LF (Line Feeds) to DOS-style LF/CR (Line Feed, Carriage Return) pairs. In the NetWare Print Server mode, the IOPRINT+ Print Server supports 3 logical printers for models with 1 parallel port, and 8 logical printers for other models.

Configuring NetWare

PCONSOLE must be used to create new (logical) printers and assign print queues to the printers. When creating logical printers, be sure to select printer numbers greater than 7 from the *Configured Printer* listing. In NetWare, all printer numbers greater than 7 are logical printers.

Remember that selecting printer 8 corresponds to Logical printer L1, selecting printer 9 corresponds to Logical printer L2, and so on up to printer 15 which corresponds to Logical printer L8.

Configuring the IOPRINT+ Print Server

On the IOPRINT+ Print Server, logical Printers are numbered from L1 to L3 for models with a single parallel port, and L1 to L8 for other models).

The IOPRINT+ Print Server requires the following data, if logical printers are going to be used.

Item	Description
Physical Port	Select the physical port for this Logical Printer (P1 to P3 for parallel ports, SP for the serial port).
String Before Job	The printer control string (in Hex) to be sent to the printer before each print job.
String After Job	The printer control string (in Hex) to be sent to the printer after each print job.
Convert LF to CR+LF	If ON, LF (line feed) characters are changed to CR+LF (carriage return + line feed). If OFF, no conversion is done.

Configuration Methods

To support the widest possible range of users, the IOPRINT+ Print Server is supplied with the following utilities.

Item	Description
BiAdmin	If possible, you should use the supplied BiAdmin utility for configuration. BiAdmin is a powerful, user-friendly program which runs under Windows 95/98/NT. If you have Novell NetWare Client 32 for Windows installed, BiAdmin also allows you to configure the NetWare server for Bindery and NDS operation.
Quickset	QUICKSET is a DOS-based command-line program, designed for the fastest possible setup of both the NetWare server and the IOPRINT+ Print Server. Both Bindery and NDS are supported. The QUICKSET program will configure the IOPRINT+ Print Server and the current Novell server in a single operation. However, it provides few options.
PSConfig	PSConfig is a DOS-based, menu-driven program. It uses the IPX/SPX protocol to connect to the IOPRINT+ Print Server, so your PC must load the IPX/SPX drivers before PSConfig can be used. PSConfig can only configure the IOPRINT+ Print Server itself. You must use the NetWare's PCONSOLE or NWAdmin to configure the NetWare server. To create or modify NetWare printer objects and printer queues, and allow user groups to access those queues, use PCONSOLE.

For information on using each of these methods, select the desired document from the list below.

- [Appendix A BiAdmin Management Program](#)
- [Printing - NDS & Bindery](#)
- [Appendix B PSConfig](#)

For information on Server and Client configuration for NDPS, and using NDPS for printing, see the following document. [Printing - NDS & Bindery](#).

Printing - NDS & Bindery

To print a job to the IOPRINT+ Print Server SCxxxxxx, you can use NetWare's standard utilities: **CAPTURE**, **NPRINT**, or **P_CONSOLE**.

On-line help for these commands is obtained by typing `/?` after the command.

(e.g. `CAPTURE /? [ENTER]`)

In the following examples, print queue P1 is serviced by IOPRINT+ Print Server SCxxxxxx.

To print, the file is sent to print queue P1.

Example 1

To use **NPRINT** to print the file `c:\config.sys` to SCxxxxxx, using the queue "P1", use the command:

```
NPRINT c:\config.sys /Q=P1 /NOTI /T=4 /NFF /NB
```

For NPRINT usage and options, see your NetWare documentation.

Example 2

To use **CAPTURE** to print the file `c:\config.sys` to the , use the commands:

```
CAPTURE /L=1 /Q=P1 /NOTI /NT /FF /NB  
COPY c:\config.sys LPT1
```

In this example, output destined for LPT1 is redirected to Print Queue P1.

- Normally, the **CAPTURE** command is used within a Login script, so that users will gain automatic access the IOPRINT+ Print Server's printers.
- For **CAPTURE** usage and options, see your NetWare documentation.

Windows NT Server (TCP/IP)

This section explains how to configure and use the IOPRINT+ Print Server in the Windows NT Server TCP/IP environment.

- [Software requirements](#) on page **79**
- [Device configuration](#) on page **79**
- [Windows NT Host Configuration](#) on page **83**
- [Adding a TCP/IP Remote Printer](#) on page **86**
- [Printing with windows NT](#) on page **88**

Software requirements

- Windows NT3.51 or later
- TCP/IP network protocol
- TCP/IP remote printing system (provided with Windows NT; configuration is described in this chapter).

Device configuration

Note:

The device should be configured FIRST.

Configuration of your IOPRINT+ Print Server can be done by any of the following methods. Follow each link for more details.

Method	Description
BiAdmin	This is the recommended program for configuration and management of the IOPRINT+ Print Server. It is used by the main SETUP program on the CD-ROM, and can also be installed using SETUP. BiAdmin requires Window 95/98 or Windows NT. BiAdmin can be used to assign an IP Address to the IOPRINT+ Print Server. See Appendix A BiAdmin Management Program .
FTP	Command-line FTP (File Transfer Protocol) clients are supported. FTP can be used to assign an IP Address to the IOPRINT+ Print Server, provided that the Windows NT Host Configuration has been completed. See Appendix H FTP (File Transfer Protocol) .
WebAdmin	This runs on an NT Server and is accessed by a WEB browser. Details on installing and using this program are in this document. See Appendix C WebAdmin .
Web Browser	100BaseT models incorporate a HTTP server, allowing configuration with a Web Browser. This method can be used to assign an IP Address to the IOPRINT+ Print Server, provided that the Windows NT Host Configuration has been completed. See Appendix D Web Browser configuration .

IP address configuration

In the TCP/IP environment, IP addresses are essential. The IOPRINT+ Print Server requires the following IP Addresses to be entered. (The entry in brackets shows the line number and token in the device's configuration file.)

Item	Description
IP Address (4000 IP_ADDR)	Device IP Address. See the following section.
Gateway Address (4001 GATEWAY)	If your network segment has a router, enter the router address here. If there is no router, leave the address as 0.0.0.0.
Subnet Mask (4002 MASK)	If the Gateway Address above is 0.0.0.0 the Subnet Mask should also be left at 0.0.0.0. If you have a router, enter the Subnet mask for the segment to which the IOPRINT+ Print Server is attached.
Device IP Address	Normally, the IOPRINT+ Print Server is assigned a static IP Address, using either BiAdmin or WebAdmin. If you leave the device IP Address at the default value of 0.0.0.0, its sequence for finding an address is as follows: DHCP BOOTP RARP
Using DHCP	Using DHCP is only possible if you have DHCP management software which allows you to take advantage of this feature. Otherwise, the IOPRINT+ Print Server's IP Address will be unknown, and connection to it will be impossible. In this case, configure the IOPRINT+ Print Server for a static IP Address.
Using BOOTP or RARP	Neither of these systems are normally used with Windows NT

Other configuration settings

When assigning the IP Addresses, you should also check the following configuration settings.

Device Name	The default name will be in the form SCxxxxxx (SC followed by 6 numbers). This can be changed. The new name MUST NOT exceed 19 characters, nor include any spaces.
TCP Session Retry Interval	Sets how long the IOPRINT+ Print Server should wait before retrying a TCP/IP connection which is lost. Allowable values are from 0 to 255 seconds, with 2 as the default.
TCP Session Retry Count	Sets how many attempts at reconnection will be made. After that, the TCP/IP session will be terminated. Allowable values are from 0 to 255, with 254 as the default.

Serial Port Setup (if exists)

Baud Rate (bps)	Allowable values are 300, 600, 1200, 2400, 4800, 9600, 19200, 38400
Stop bits	Allowable values are 1 or 2
Parity	Allowable values are NONE, ODD, EVEN
Data bits	Allowable values are 7 or 8
Handshake	Allowable values are NONE, HARDWARE, XON/XOFF, BOTH

Logical printers

Logical Printers can be used to create a "Virtual" printer. For example, to create a Landscape printer, you could define a Logical Printer as follows:

Pre-string	Printer Control codes to switch the printer to Landscape mode
Post-string	Printer Control codes to reset the printer, restoring the default settings.

Another logical printer could be used to print Unix-format text files for a DOS printer, by converting Unix-style LF (Line Feeds) to DOS-style LF/CR (Line Feed, Carriage Return) pairs.

IOPRINT+ Print Server models with 1 parallel port support 3 Logical Printers, otherwise they support 8 Logical Printers. The names (L1..L8) cannot be changed. Each Logical Printer has 4 settings as shown below.

Logical Printer Setup Data

Physical Port	IOPRINT+ Print Server Port to which the printer is attached (P1 to P3 for parallel ports and SP for the serial port).
String Before Job	The printer control string (in hex) to be sent to the printer before each print job.
String After Job	The printer control string (in hex) to be sent to the printer after each print job.
Convert LF to CR+LF	If ON, LF (line feed) characters are changed to CR+LF (carriage return + line feed). If OFF, no conversion is done.

The maximum size of a printer control string is 15 characters.

Note:
Printer control strings must be entered in HEX.

Windows NT Host Configuration

This section covers configuration of a Windows NT host. The IOPRINT+ Print Server should be configured first. For Windows NT configuration in a Peer-to-Peer environment, see [Windows Peer-to-peer - TCP/IP](#) on page [116](#).

Ip address configuration

To have the IOPRINT+ Print Server recognized as a valid device, first configure it, then follow this procedure.

1. Add an entry for the IOPRINT+ Print Server to the hosts file:
\\SYSTEM32\\DRIVERS\\ETC\\HOSTS

The entry consists of the following line:

```
xxx.xxx.xxx.xxx Name
```

Where:

xxx.xxx.xxx.xxx is the IP Address you assigned to the IOPRINT+ Print Server.

Name is the IOPRINT+ Print Server's name. If you have not changed the name, use the default name shown on a sticker on the base of the device. The default name is in the form SCxxxxxx (SC followed by 6 digits).

2. Add an entry to the ARP table by entering the following commands:

```
arp -s IP_address 00:c0:02:xx:yy:zz
```

Where:

IP_address is the IP Address used in step 1.

00:c0:02:xx:yy:zz is the physical address of the IOPRINT+ Print Server, as determined from the default name. Example:

```
arp -s 168.192.1.40 00:c0:02:12:34:56
```

3. Check the IP Address using the **ping** command:

```
ping Name
```

Where *Name* is the value used in step 1. You should receive a response. If you get a *Timeout* message, the above procedure has failed.

Preparing for tcp/ip printing

To create a TCP/IP remote printer Microsoft TCP/IP printing support must be installed. The procedure is as follows.

Windows NT 3.51

1. Start the *Network* option in Control Panel. When the Network Settings dialog box appears, click the *Add Software* button to display the *Add Network Software* dialog box.
2. Select *TCP/IP Protocol And Related Components* in the Network Software list box, and then click the *Continue* button.
3. In the *Windows NT TCP/IP Installation Options* dialog box, check the *TCP/IP Network Printing Support* option.
4. Click the *OK* button. Windows NT Setup will display a message asking for the full path to the Windows NT distribution files. Provide the appropriate location and click the *Continue* button. All necessary files will be copied to your hard disk.
5. If you did not check the *Enable Automatic DHCP Configuration* option in the *Windows NT TCP/IP Installation Options* dialog box, you must complete all the required TCP/IP configuration procedures manually.
6. After you finish configuring TCP/IP, the *Network Settings* dialog box will reappear, click the *Close* button and then restart your computer for the changes to take effect.

Windows NT 4.0

1. Go to *Start-Settings-Control Panel-Network*.
2. Click the *Service* option and ensure that **Simple TCP/IP Service** and **Microsoft TCP/IP Printing** are enabled. If they are not enabled, select the *Add* option and enable them as usual.
3. If you added services in step 2, reboot the computer for the changes to take affect.

Adding a TCP/IP Remote Printer

Windows 3.51

1. From the Printer menu in Print Manager, choose Create Printer
2. In the resulting dialog box, enter data as follows:

Printer Name	Enter a name (up to 32 characters). This name appears in the title bar of the printer window.
Driver	Select the appropriate driver for the attached printer.
Description	Enter a printer description for other network users to reference.
Print To	Select <i>Other</i> .
3. A *Print Destinations* dialog box will appear after selecting *Other*. In the *Available Print Monitor* list, select *LPR Port*, then *OK*.
4. An *Add LPR compatible printer* window will appear. Enter data in the fields as follows:

Name Or Address Of Host Providing LPD	Enter the IP address of the IOPRINT+ Print Server
Name Of Printer On That Machine	Enter the appropriate logical printer number (e.g. L1)
5. When the *Create Printer* dialog box reappears, check the *Share This Printer On The Network* option.
6. In the *Share Name* box, Printer Manager creates a MS-DOS compatible resource name, which you can change if you wish.
In the *Location* box, you can enter information concerning the printer location. Network users will see this information when browsing to find this printer.
7. Complete any other configuration information in the *Create Printer* dialog box.

Windows NT 4.0

1. Go to *Start-Settings-Printer* and invoke the *Add Printer* wizard.
2. When prompted with *This printer will be managed by*, select **My Computer** and click **Next**.
3. Select **Add Port...**, then select **LPR Port** and click **New Port**.
4. In the *Name of Address of server providing lpd:* dialog box, enter the IOPRINT+ Print Server's IP address.
5. In the *Name of printer or print queue on that server* dialog box, enter the appropriate logical printer number (L1..L3, or L1..L8, depending on the model) as previously configured on the IOPRINT+ Print Server.
6. Click **OK**. When returned to the *Printer Ports* window, simply elect **Close** and then install your printer driver as usual.
7. When prompted whether or not the printer will be shared, select the **Sharing** radio button.
8. In the *Shared* dialog box, enter the shared printer name. The shared name is how other users will see this printer.

Printing with windows NT

Windows Applications

The IOPRINT+ Print Server's printers will appear as *Network Printers* to users on the LAN.

- To install the printer on each PC, use the *Add Printer* wizard. Select *Network Printer* when prompted, and then select the appropriate destination.
- To print a file from a application, select the remote printer as the destination, and print the file as usual.

Command Line

To print a file from the command prompt, type:

```
lpr -S NT_Host -P printer_name file_name
```

Where:

NT_Host is the name of the NT host on which the remote printer is configured.

printer_name is the name assigned to the remote printer

file_name is the name of the file you wish to print.

To check the print status, type:

```
lpq -S NT_Host -P printer_name
```

Telnet

Telnet can be used to monitor the status of the printers attached to the IOPRINT+ Print Server.

Operation

Establish a connection to the IOPRINT+ Print Server, by starting your Telnet program and providing the IP Address of the IOPRINT+ Print Server. (No port number is required.) It will respond with "Welcome to Print Server".

From the resulting prompt, 3 commands are possible:

- **Help:** Show brief help
- **Monitor:** show printer status
- **Exit:** leave telnet

Monitoring

The "Monitor" command will show the status of the printer, on each port, as shown in the following example.

```
(P1)STATE: Idle  
TYPE: Parallel  
PRINTER STATUS: Out Of Paper
```

```
(P2)STATE: Printing  
TYPE: Parallel  
PRINTER STATUS: On-Line  
BYTES SERVICED: 75264  
OCCUPIED BY: LPD
```

```
(SP)STATE: Idle  
TYPE: Serial  
PRINTER STATUS: Offline
```

The display is updated once per second.

Windows Peer-to-Peer - NetBEUI

In a peer-to-peer environment, each PC communicates directly with the IOPRINT+ Print Server. This usually requires that software be installed and configured on each PC. In the NetBEUI Peer-to-Peer environment, the IOPRINT+ Print Server supports the following operating systems.

- Windows 95/98
- Windows NT 3.51 or 4.0
- Windows for Workgroups

This section includes the following:

- [Device Configuration](#) on page [92](#)
- [Software Installation & Configuration](#) on page [92](#)
- [Windows 95/98](#) on page [93](#)
- [Windows NT 4.0](#) on page [96](#)
- [Windows NT 3.51](#) on page [101](#)
- [Windows for Workgroups](#) on page [105](#)

Device Configuration

If you are using the NetBeui protocol, no device configuration is necessary.

Software Installation & Configuration

Software installation must be carried out on every PC requiring access to the printer or printers attached to the IOPRINT+ Print Server.

Windows 95/98

The setup program will do the following:

- Create the following icons: Readme and UnInstall.
- Add the driver, prtserv.dll, to the Windows\System directory.
- Add the Uninstall program to the Windows directory.
- Add Uninstall information files and the Readme file to the installation directory.


Before proceeding, check the following:

- IOPRINT+ Print Server is installed and ON.
- Printer(s) connected to the IOPRINT+ Print Server, and on-line.
- LAN is operational and using the NetBeui protocol.

To run SETUP, proceed as follows:

1. Run the **SETUP** program in the Driver\ptp_95nt folder on the CD-ROM.
2. At the *Select Components* window, select the *NetBeui* protocol.


The *Configure Print Server* window will appear.

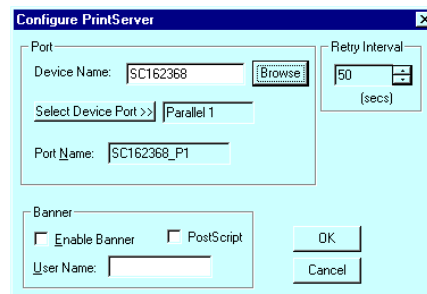

Items shown on this screen are as shown in the next table.

Item	Description
Device Name	Click <i>Browse</i> and select the correct IOPRINT+ Print Server. The name shown will be in the form SCxxxxxx (SC followed by 6 digits), as shown on a label on the base of the IOPRINT+ Print Server. The name can be changed if you wish, but it is only visible when configuring the device.
Select Device Port	Select the IOPRINT+ Print Server port that the printer is connected to (e.g. Parallel port 1).
Port Name	On multi-port devices, each port must have a unique name (8 alpha-numeric characters). The Port Name will be shown in the Printer's properties. Use a name which indicates the port used (e.g. Par_1)
Enable Banner	Select this option to enable a banner page.
PostScript	If using a PostScript Printer, check this box.
User Name	The name to be printed on the banner page.
Retry Interval	Sets how often Windows will poll the IOPRINT+ Print Server to establish a connection when the printer is busy. Values range from 40-110 seconds.

3. Configure the Printer to use this new port:
 - a. Go to *Start-Settings-Printers*. Invoke the *Add Printer Wizard*.
 - b. Select the **Local printer** option.
 - c. Choose the Printer which is attached to the first port on the IOPRINT+ Print Server.
 - d. In the *Available Ports* screen, shown below, select the *Port Name* (from step 3) as the port to use.
 - e. If you click the **Configure Port** button, the *Configure Print Server* screen appears.

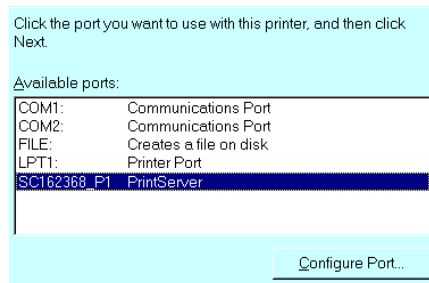


4. Follow the on-screen instructions to finish adding a printer as normal.
5. You can now print using this printer.


Installing Additional Ports on Multi-port models

If you are installing a multiple port IOPRINT+ Print Server, you must add additional ports and printers. To do so, use the following procedure.

1. Go to the Printers folder and click on the printer just added. Then select *File-Properties*. The *Properties* screen will appear.
2. Select the **Details** tab and the following screen will appear:

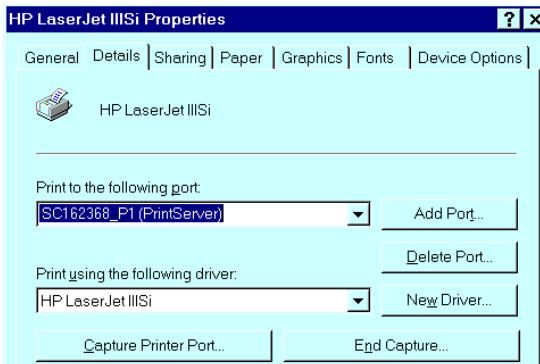


3. Select **Add Port** to see the following *Add Port* screen:

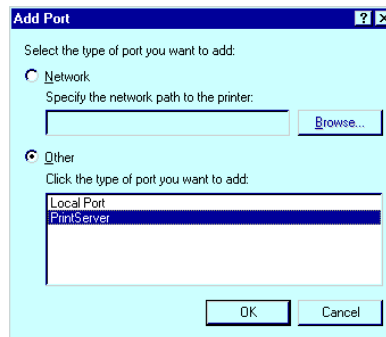

4. Select **Other** as the type of port you want to add and select the IOPRINT+ Print Server's port. (**PrintServer** is used in the example above.)
5. Then click **OK** and the *Configure PrintServer* window will appear.
6. Enter the configuration information as for the first port. Ensure that you select a different IOPRINT+ Print Server port each time, and assign a unique name to that port (e.g. pserv_2 for parallel port 2).
7. Repeat steps 3. to 6. until all IOPRINT+ Print Server ports have been added.

8. Install the correct printer for each port. When prompted with the following screen, ensure that you select the port to which the printer is connected.

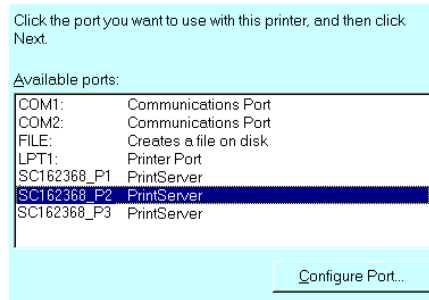

Configuration is now complete; you can now print using the printers attached to the IOPRINT+ Print Server.

Windows NT 4.0

The setup program will do the following:


- Create the following icons: Readme and UnInstall.
- Add the driver, prtsev.dll, to the Windows\System32 directory.
- Add the Uninstall program to the Windows directory.
- Add Uninstall information files and the Readme file to the installation directory.

Before proceeding, check the following:

- * IOPRINT+ Print Server is installed, and ON.
- * Printer(s) connected to the IOPRINT+ Print Server, and on-line.
- * LAN is operational and using the NetBEUI protocol.

To run the SETUP program proceed as follows;

1. Run the **SETUP** program in the Driver\ptp_95nt folder on the CD-ROM.
2. At the *Select Components* window, select the *NetBeui* protocol.
3. The *Configure Print Server* window, like the example below, will appear.

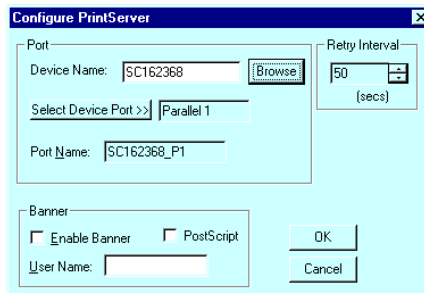

The 'Configure PrintServer' dialog box contains the following fields and controls:


- Port Section:**
 - Device Name: SC162368 (with a 'Browse' button)
 - Select Device Port >>: Parallel 1
 - Port Name: SC162368_P1
- Retry Interval:**
 - Value: 50 (secs)
- Banner Section:**
 - ☐ Enable Banner
 - ☐ PostScript
 - User Name: (empty text field)
- Buttons:** OK, Cancel

Items shown on this screen are as shown in the next table:

Item	Description
Device Name	Click <i>Browse</i> and select the correct IOPRINT+ Print Server. The name shown will be in the form SCxxxxxx (SC followed by 6 digits), as shown on a label on the base of the IOPRINT+ Print Server. The name can be changed if you wish, but it is only visible when configuring the device.
Select Device Port	Select the IOPRINT+ Print Server port that the printer is connected to (e.g. Parallel port 1).
Port Name	On multi-port devices, each port must have a unique name (8 alpha-numeric characters). The Port Name will be shown in the Printer's properties. Use a name which indicates the port used (e.g. Par_1)
Enable Banner	Select this option to enable a banner page.
PostScript	If using a PostScript Printer, check this box.
User Name	The name to be printed on the banner page.
Retry Interval	Sets how often Windows will poll the IOPRINT+ Print Server to establish a connection when the printer is busy. Values range from 40-110 seconds.

4. Configure the Printer to use this new port

- Go to *Start-Settings-Printers*. Start the *Add Printer Wizard*.
- When prompted for which computer will manage the printer, select the **My Computer** option.
- Choose the *Printer Model* matching the printer attached to the IOPRINT+ Print Server's first port.
- Select the *Port Name* as the port in the *Select Port* screen. Ensure that **ONLY** this port is selected, as shown in the next example.
- If you click the **Configure Port** button, you will see the *Configure Print Server* screen again.

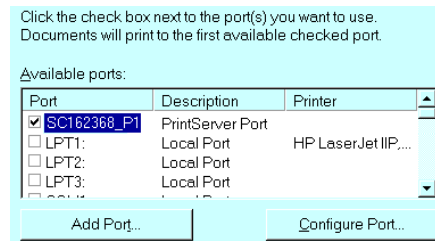


- Follow the on-screen instructions to finish adding a printer as normal. Do **NOT** enable sharing on this printer.

6. You can now print using this printer.


Installing Additional Ports on Multi-port Models

If you are installing a multiple port IOPRINT+ Print Server, you must add additional ports and printers. To do so, use the following procedure.

1. Go to the Printers folder and click on the printer just added. Select *Properties*, then the *Ports* tab as shown below.

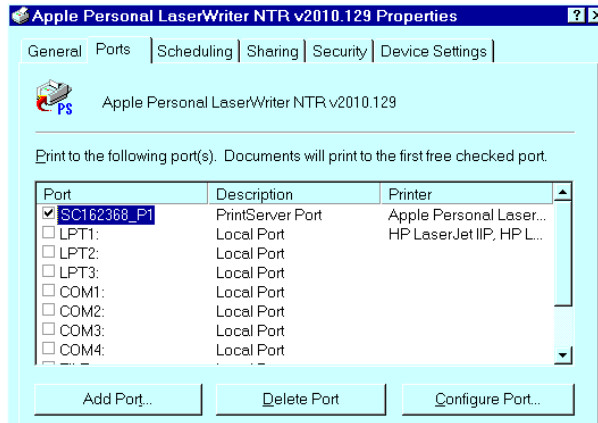

2. Select **Add Port** and select the IOPRINT+ Print Server's port as the port to add.
3. Enter the configuration information as for the first port. Ensure that you select a different IOPRINT+ Print Server port each time, and assign a unique name to that port.
4. Repeat steps 2. and 3. until all IOPRINT+ Print Server ports have been added.
5. Install the correct printer for each port. When prompted with the following screen, ensure that you select the port to which the printer is connected.

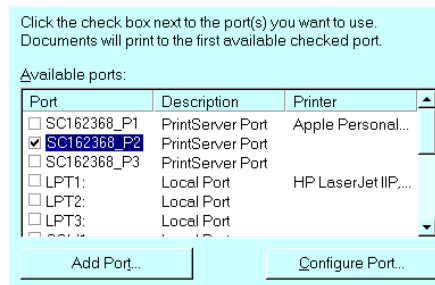

Configuration is now complete. You can now print using the printers attached to the IOPRINT+ Print Server.

Windows NT 3.51

The setup program will do the following:


- Create the following icons: Readme and UnInstall.
- Add the driver, prtserv.dll, to the Windows\System32 directory.
- Add the Uninstall program to the Windows directory.
- Add Uninstall information files and the Readme file to the installation directory.

Before proceeding, check the following:

- IOPRINT+ Print Server is installed, and ON.
- Printer(s) connected to the IOPRINT+ Print Server, and on-line.
- LAN is operational and using the NetBEUI protocol.

To use the SETUP program proceed as follows;

1. Run the **SETUP** program in the Driver\ptp_95nt folder on the CD-ROM.
2. At the *Select Components* window, select the *NetBeui* protocol.
3. The *Configure Print Server* window, like the example below, will appear.

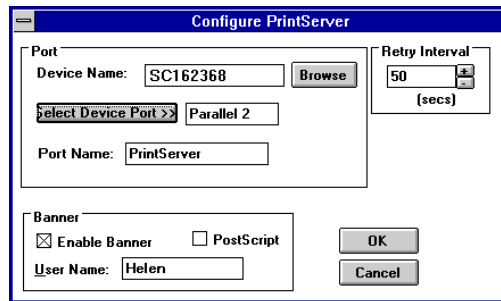

Items shown on this screen are as follows.


Item	Description
Device Name	Click <i>Browse</i> and select the correct IOPRINT+ Print Server. The name shown will be in the form SCxxxxxx (SC followed by 6 digits), as shown on a label on the base of the IOPRINT+ Print Server. The name can be changed if you wish, but it is only visible when configuring the device.
Select Device Port	Select the IOPRINT+ Print Server port that the printer is connected to (e.g. Parallel port 1).
Port Name	On multi-port devices, each port must have a unique name (8 alpha-numeric characters). The Port Name will be shown in the Printer's properties. Use a name which indicates the port used (e.g. Par_1)
Enable Banner	Select this option to enable a banner page.
PostScript	If using a PostScript Printer, check this box.
User Name	The name to be printed on the banner page.
Retry Interval	Sets how often Windows will poll the IOPRINT+ Print Server to establish a connection when the printer is busy. Values range from 40-110 seconds.

1. Configure the Printer to use this new port
 - a. Go to *Printer Manager*. Select *Printer- Create Printer*.
 - b. Select the appropriate printer driver for the printer connected to the first port on the IOPRINT+ Print Server.
 - c. In the *Print to* dialogue box, select the port name you assigned to the IOPRINT+ Print Server port previously in this procedure.
 - d. If you click on *Settings*, you will see the *Configure Print Server* window again.
2. Follow the on-screen instructions to finish adding a printer as normal. Do NOT click the *Share This* checkbox for this printer.
3. You can now print using this printer.


Installing Additional Ports on Multi-port models

If you are installing a multiple port IOPRINT+ Print Server, you must add additional ports and printers. To do so, use the following procedure.


1. Select the newly added printer using *Printer Manager*. Then, on the *Printer* menu, select *Properties*. The following *Printer Properties* screen will appear.

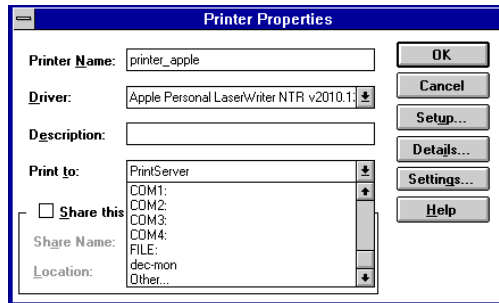

2. In the *Print to* dialogue box, select **Other...** and click OK. The *Print Destinations* screen will appear:

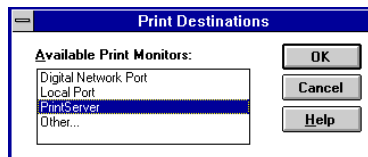

3. Select the port name you assigned to the IOPRINT+ Print Server (**PrintServer** in the example above) and click **OK**. The *Configure PrintServer* window shown previously will appear.
4. Enter the configuration information as for the first port. Ensure that you select a different IOPRINT+ Print Server port each time, and assign a unique name to that port (e.g. `pserv_2`, `pserv_3`).
5. Repeat steps 2. to 4. until all ports have been added.
6. Install the correct printer for each port. When prompted with the following *Create Printer* screen, ensure that the appropriate **Print to** option is selected for each printer.

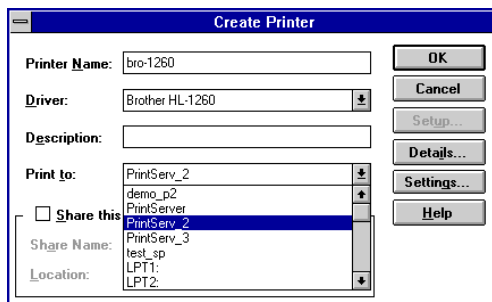

Configuration is now complete. You can now print using the printers attached to the IOPRINT+ Print Server.

Windows for Workgroups

The following procedure will install the **Pserver** program. This program is required on every Windows for Workgroups system requiring access to the printer or printers attached to the IOPRINT+ Print Server.

Pserver will transfer the print job through the network to the IOPRINT+ Print Server and then to the printer. The process is as follows:

- A print queue is created for each port during configuration.
- When a user prints, the job is sent to Windows Print Manager.
- When Print Manager is finished spooling the print file, Pserver fetches the print job and stores it in the appropriate queue, using a name generated by Pserver.
- Pserver sends the print job to the correct IOPRINT+ Print Server printer when the printer is free.

Note


Before printing, both Pserver and Window Control Panel must be configured.

Installation






 
 
1. Run the **Setup** program in the Driver\Ptp_wfw directory on the CD-ROM.
2. Follow the on-screen instructions to complete the installation. It is not necessary to reboot your system.
3. The Setup program will:
 - Copy all program files to the installation directory.
 - Copy Uninstall information files and UNINST16.EXE to the installation directory.
 - Create a Program Group, *Print Server*, containing an icon for the Pserver program.
4. Because the Pserver program needs to be loaded to access the IOPRINT+ Print Server's printers, it is recommended that you copy the Pserver icon to your *Start Up* group. It will then be loaded every time you start Windows.

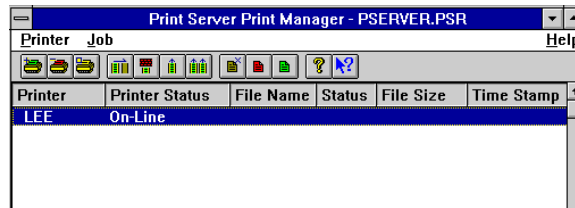


Pserver Main Screen

Pserver must be loaded prior to printing via the IOPRINT+ Print Server. Therefore, it is recommended that you add Pserver to the Windows Start Up group. When started, the Pserver Status window will appear, and will list all connected printers, and any print jobs in each printer's queue. An example screen is shown below.



Pserver Icons and Commands

Icon	Description
	Add Printer Create and configure a printer. See the following section <i>Pserver</i> for more details.
	Remove Printer Delete all configuration data for the current printer, including any print job files, and the queue.
	Update Modify the configuration data for the current printer.
	Clear Print Queue Remove ALL print jobs in the current printer's queue.
	Pause Print Queue Pause the printing of all print jobs in the current printer's queue. This should only be used if the printer requires attention.
	Resume Print Queue Resume printing the current printer's queue.
	Resume All Print Queues Execute this command to resume the printing of all paused queues.


Icon	Description
	Delete Job Delete the selected print job.
	Pause Job (red) Pause the selected print job. This makes the printer unavailable for other users.
	Resume Job (green) Resume a paused print job.

Pserver Configuration

Before you can print using the printers connected to your IOPRINT+ Print Server, both Pserver and Windows must be configured. To configure Pserver, following the instructions below.

1. Start the Pserver program and then select the Printer Menu and choose **Add**.

The **Add Printer** screen, like the example below, will appear.

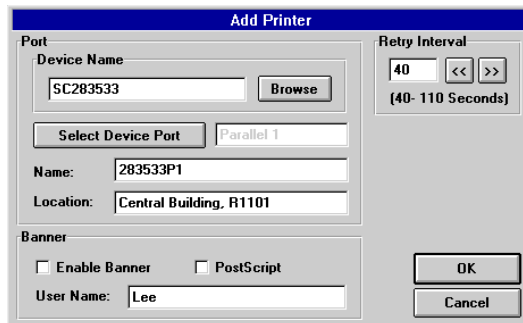


2. Enter the configuration data:

Item	Description
Device Name	Click <i>Browse</i> and select the correct IOPRINT+ Print Server. The name shown will be in the form SCxxxxxx (SC followed by 6 digits), as shown on a label on the base of the IOPRINT+ Print Server. The name can be changed if you wish, but it is only visible when configuring the device.
Select Device Port	Select the IOPRINT+ Print Server port that the printer is connected to (e.g. Parallel port 1).
Port Name	On multi-port devices, each port must have a unique name (8 alpha-numeric characters). The Port Name will be shown in the Printer's properties. Use a name which indicates the port used (e.g. Par_1)
Location	Enter the location of the IOPRINT+ Print Server.
Enable Banner	Select this option to enable a banner page.
PostScript	If using a PostScript Printer, check this box.
User Name	The name to be printed on the banner page.
Retry Interval	Sets how often Windows will poll the IOPRINT+ Print Server to establish a connection when the printer is busy. Values range from 40-110 seconds.


3. Upon clicking OK, the Pserver utility will automatically create a print queue for the port just added.
4. Repeat steps [1.](#) to [3.](#) for each printer. Ensure that you select a different IOPRINT+ Print Server port each time, and that each port has a unique name.

Control Panel Configuration

1. Go to Control Panel and invoke the **Printers** icon. The following Printer dialogue box will appear:

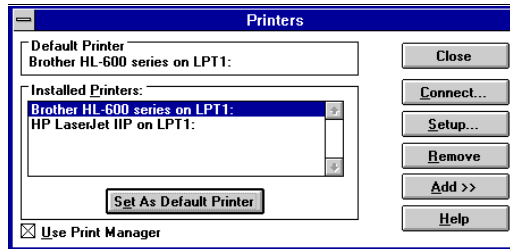


2. Follow the normal process to add each printer that is attached to the Print Server.
3. The printers must be associated with the print queue they will service. Click the **Connect** button and the following *Connect* dialogue box will appear:

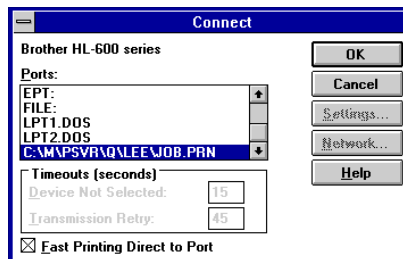

4. From the **Ports** list, select the queue which services the IOPRINT+ Print Server port to which the printer is connected.
5. Repeat steps 3. to 4. to associate each printer with a queue.

Setup is complete. In Windows **Print Setup**, the printer and its associated queue will appear in the printer list as shown in the example below.

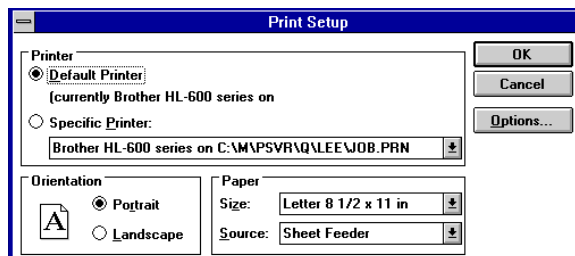

Printing

Once configured, printing to the printers attached to the IOPRINT+ Print Server is the same as printing with the printer attached directly to your local LPT port. Simply select File-Print. When the *Print* screen appears, select the appropriate printer and options and click *OK*.

Note

In Windows for Workgroups, use **Pserver** to manage your print jobs, rather than Windows Print Manager.

Windows Peer-to-peer - SMB

In a peer-to-peer environment, each PC communicates directly with the IOPRINT+ Print Server. This usually requires that software be installed and configured on each PC. In the Peer-to-Peer environment, the IOPRINT+ Print Server supports the following operating systems.

- Windows 95/98
- Windows NT 3.51 or 4.0
- Windows for Workgroups

This section includes the following:

- [Device Configuration](#) on page [112](#)
- [Software Installation](#) on page [113](#)
- [PC Configuration](#) on page [113](#)
- [Windows 95/98/NT](#) on page [114](#)
- [Windows for Workgroups](#) on page [115](#)
- [Printing](#) on page [115](#)

Device Configuration

If you are using Windows SMB, no device configuration is required. Simply install the IOPRINT+ Print Server in your LAN, and connect the printer(s). Ensure that both the IOPRINT+ Print Server and the printer(s) are powered ON while performing the PC configuration.

Software Installation

No software installation is required.

However, you may wish to install either WPCONFIG (for Windows 3.1) or BiAdmin (for Windows 95/98/NT). This will enable you to:

- Insert a *Workgroup Name* in the IOPRINT+ Print Server's NetBEUI data. If a name is not inserted, the device may not appear on a network "Browse".
- Change the name of the IOPRINT+ Print Server, set the network protocols in use, configure the serial port (if it exists) and perform other management tasks.
- Monitor the attached printers.
- If using BiAdmin with bi-directional printers, configure the attached printer(s).

Refer to [Appendix A BiAdmin Management Program](#) or [Appendix E WPCONFIG management program](#) for details on installing and using these programs.

PC Configuration

Use Control Panel - Network to check that your PC has the NetBEUI protocol installed; use the Add function to add the NetBEUI protocol if necessary.

Before printing using the printer connected to the IOPRINT+ Print Server is possible, the printer must be created or added in the Windows environment, as explained in the following sections.

Windows 95/98/NT

1. Start the "Add Printer" Wizard.
2. When prompted, "How is the printer attached to your computer?", select "Network Printer".
3. When prompted for "Network path or Queue name", enter the name and port of the IOPRINT+ Print Server in the following form:

\\Name\Port

Where:

Name is the name of the IOPRINT+ Print Server device. If you have not changed the name, use the default name shown on the base. The default name is in the form SCxxxxxx (SC followed by 6 digits).

Port is the port on the IOPRINT+ Print Server to which the printer is attached. The port must be P1 (parallel port 1), P2 (parallel port 2) or P3 (parallel port 3, or the serial port).

e.g.

\\SC123456\P1

Note

The "Browse" button can be used ONLY IF the IOPRINT+ Print Server has a "Workgroup Name" (in the NetBEUI configuration) which is the same as your computer's "Workgroup name".

4. Select the printer connected to the port on the IOPRINT+ Print Server.
5. Finish installing the printer as usual. In Windows NT, do NOT enable sharing on this printer.

If your IOPRINT+ Print Server has multiple ports, install the other printers in the same manner, but using a different IOPRINT+ Print Server port.

Configuration is now complete. You will be now able to print to the printer attached to the IOPRINT+ Print Server by selecting the printer you just installed.

Windows for Workgroups

1. Start *Control Panel- Printers*.
2. From the list of *Installed Printers*, select the printer driver for the printer attached to the first port on the IOPRINT+ Print Server.
If the printer driver is not installed, click **Add>>** to install a new driver.
3. If desired, click "Set As Default Printer".
4. Click "Connect..." to open the Connect dialog box.
5. Click "Network..."
6. In the *Path* field, enter the name and port of the IOPRINT+ Print Server in the following form:

\\Name\Port

Where:

Name is the name of the IOPRINT+ Print Server device. If you have not changed the name, use the default name shown on the base. The default name is in the form SCxxxxxx (SC followed by 6 digits).

Port is the port on the IOPRINT+ Print Server to which the printer is attached. The port must be P1 (parallel port 1), P2 (parallel port 2) or P3 (parallel port 3, or the serial port).

e.g.

\\SC123456\P1

7. Check the **Reconnect at Startup** box, then click **OK** to close the *Connect Network Printer* dialog box.
8. Click "OK" to close the *Connect* dialog box.
9. Repeat steps 2 to 8 for any additional ports on the IOPRINT+ Print Server. Close the Printer Dialog when you are finished.

Configuration is now complete. You will be able to print to the printer attached to the IOPRINT+ Print Server by selecting the printer you just installed.

Printing

Once configured, printing to the printers attached to the IOPRINT+ Print Server is the same as printing with the printer attached directly to your local LPT port.

Simply select *File-Print*. When the *Print* screen appears, select the appropriate printer and options and click **OK**.

Windows Peer-to-peer - TCP/IP

- [Device Configuration](#) on page [117](#)
- [Windows 95/98](#) on page [118](#)
- [Windows NT4](#) on page [123](#)
- [Windows NT 3.51](#) on page [128](#)

In a peer-to-peer environment, each PC communicates directly with the IOPRINT+ Print Server. This usually requires that software be installed and configured on each PC. In the TCP/IP Peer-to-Peer environment, the IOPRINT+ Print Server supports the following operating systems.

- Windows 95/98
- Windows NT 3.51 or 4.0

Note that Windows for Workgroups (Windows 3.11) is NOT supported.

Device Configuration

The IOPRINT+ Print Server must be configured with the following IP Addresses before it will be recognized as a valid device on your LAN.

Item	Description
Device IP Address	Assign a unique IP Address to the IOPRINT+ Print Server. The address must be from the same address range as PCs on your LAN.
Gateway IP Address	Use the same <i>Gateway Address</i> as your PC.
Subnet Mask	Use the same <i>Subnet Mask</i> as your PC.

Note

You can start the WINIPCFG program from the *Run* dialog to check the IP Address, Gateway Address, and Subnet Mask on your PC.

Procedure

When you install the software and select *TCP/IP* as the protocol, you will have the option of installing a program called SETBOX. This program can be used to assign the above IP Addresses to the IOPRINT+ Print Server, as follows:

1. If SETBOX is installed, it will automatically run.
2. Select your IOPRINT+ Print Server. It will be shown in the form SCxxxxxx (SC followed by 6 digits). This name is on a label on the base of the device.
3. Enter and save the IP Addresses listed above.


This procedure only needs to be done ONCE. When installing on other PCs, do NOT install SETBOX.

Windows 95/98

Software installation must be carried out on every PC requiring access to the printer or printers attached to the IOPRINT+ Print Server.

The setup program will do the following:

- Create the following icons: Readme and UnInstall.
 - Add the driver, prtserv.dll, to the Windows\System directory.
 - Add the Uninstall program to the Windows directory.
 - Add Uninstall information files and the Readme file to the installation directory.
1. Before proceeding, check the following:
 - IOPRINT+ Print Server is installed and ON.
 - Printer(s) connected to the IOPRINT+ Print Server, and on-line.
 - LAN is operational and using the TCP/IP protocol.
 2. Run the **SETUP** program in the Driver\ptp_95nt folder on the CD-ROM.
 3. At the *Select Components* window, select the *TCP/IP* protocol.
 4. Once TCP/IP is selected, the *Select Components* screen will present 2 options:
 - Install Device Driver
 - Install SETBOX Program
 5. Select **Device Driver**. This needs to be installed on all workstations. (Select SETBOX only if you need this program to assign IP Addresses to the IOPRINT+ Print Server.)
 6. The *Configure Print Server* window will appear. An example screen is shown below.

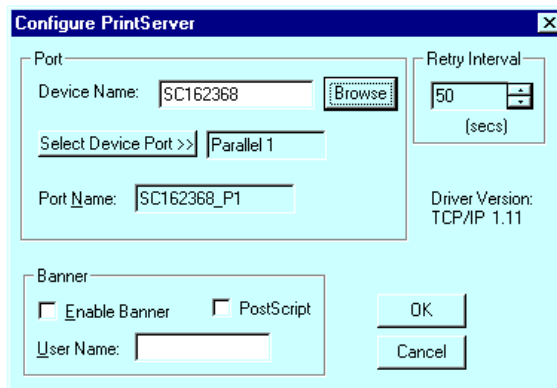


The screenshot shows the 'Configure PrintServer' dialog box with the following fields and controls:

- Port section:**
 - Device Name: SC162368 (with a 'Browse...' button)
 - Select Device Port >>: Parallel 1
 - Port Name: SC162368_P1
- Retry Interval section:**
 - Value: 50 (secs)
- Driver Version:** TCP/IP 1.11
- Banner section:**
 - ☐ Enable Banner
 - ☐ PostScript
 - User Name: (empty text field)
- Buttons:** OK and Cancel

Items shown on this screen are as shown in the next table.

Item	Description
Device Name	Click <i>Browse</i> and select the correct IOPRINT+ Print Server. The name shown will be in the form SCxxxxxx (SC followed by 6 digits), as shown on a label on the base of the IOPRINT+ Print Server. The name can be changed if you wish, but it is only visible when configuring the device.
Select Device Port	Select the IOPRINT+ Print Server port that the printer is connected to (e.g. Parallel port 1).
Port Name	On multi-port devices, each port must have a unique name (8 alpha-numeric characters). The Port Name will be shown in the Printer's properties. Use a name which indicates the port used (e.g. Par_1)
Enable Banner	Select this option to enable a banner page.
PostScript	If using a PostScript Printer, check this box.
User Name	The name to be printed on the banner page.
Retry Interval	Sets how often Windows will poll the IOPRINT+ Print Server to establish a connection when the printer is busy. Values range from 40-110 seconds.

7. Change the port name if you wish, and set the banner options.
8. Configure the Printer to use this new port:
 - a. Go to *Start-Settings-Printers*. Invoke the *Add Printer Wizard*.
 - b. Select the **Local printer** option.
 - c. Choose the Printer which is attached to the first port on the IOPRINT+ Print Server.
 - d. In the *Available Ports* screen, shown below, select the *Port Name* (from step 5) as the port to use.
 - e. If you click the **Configure Port** button, you will see the *Configure Print Server* screen again.

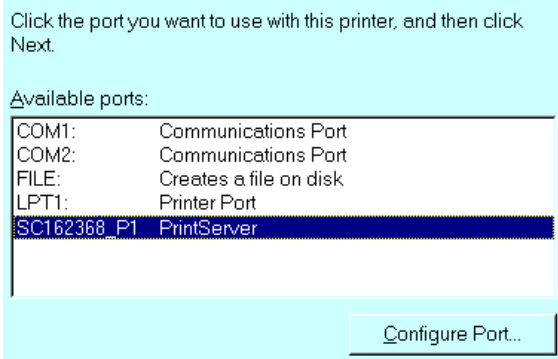


9. Follow the on-screen instructions to finish adding a printer as normal.
10. You can now print using this printer.


Installing Additional Ports on Multi-port models

If you are installing a multiple port IOPRINT+ Print Server, you must add additional ports and printers. To do so, use the following procedure.


1. Go to the Printers folder and click on the printer just added. Then select *File-Properties*. The *Properties* screen will appear.
2. Select the **Details** tab and the following screen will appear:

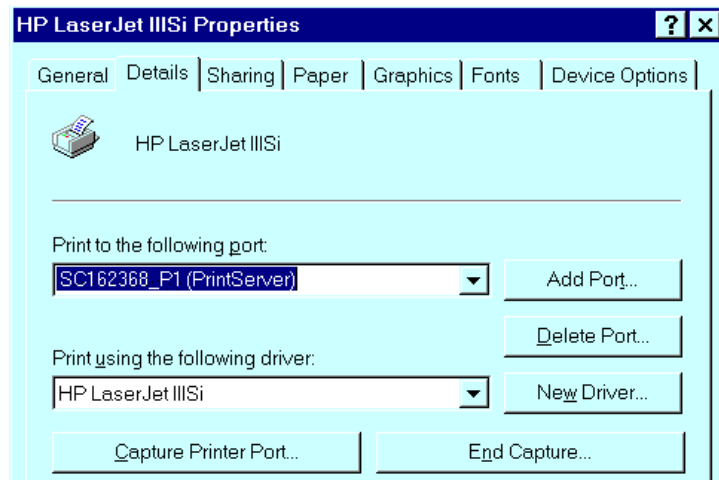

3. Select **Add Port** to see the following *Add Port* screen:

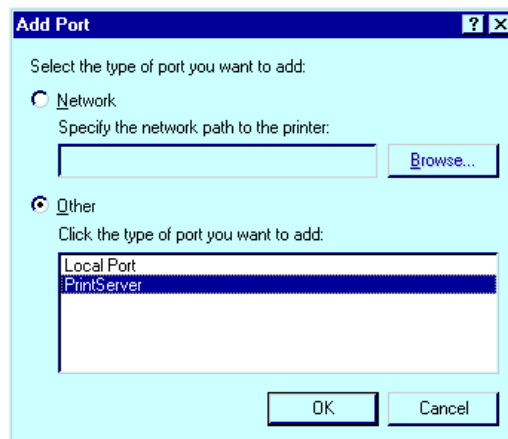

4. Select **Other** as the type of port you want to add and select the IOPRINT+ Print Server's port.
5. Then click **OK** and the *Configure PrintServer* window will appear.
6. Enter the configuration information as for the first port. Ensure that you select a different IOPRINT+ Print Server port each time, and assign a unique name to that port (e.g. pserv_2 for parallel port 2).
7. Repeat steps 3. to 6. until all IOPRINT+ Print Server ports have been added.
8. Install the correct printer for each port. When prompted with the following screen, ensure that you select the port to which the printer is connected.

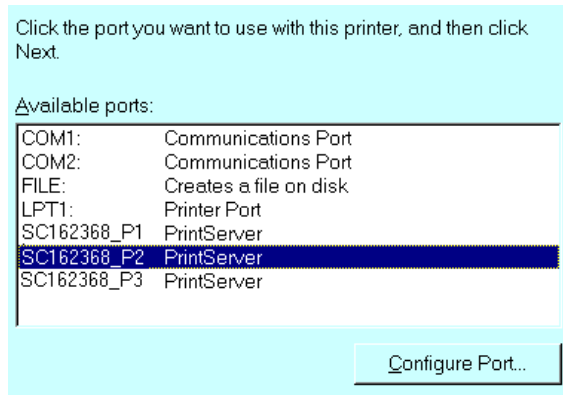


Configuration is now complete; you can now print using the printers attached to the IOPRINT+ Print Server.

Windows NT4

The setup program will do the following:

Create the following icons: Readme and UnInstall.


- Add the driver, prtsev.dll, to the Windows\System32 directory.
 - Add the Uninstall program to the Windows directory.
 - Add Uninstall information files and the Readme file to the installation directory.
1. Before proceeding, check the following:
 - IOPRINT+ Print Server is installed, and ON.
 - Printer(s) connected to the IOPRINT+ Print Server, and on-line.
 - LAN is operational and using the TCP/IP protocol.
 2. Run the **SETUP** program in the Driver\ptp_95nt folder on the CD-ROM.
 3. At the *Select Components* window, select the *TCP/IP* protocol.
 4. Once TCP/IP is selected, the *Select Components* screen will present 2 options:
 - Install Device Driver
 - Install SETBOX Program
 5. Select **Device Driver**. This needs to be installed on all workstations. (Select SETBOX only if you need this program to assign IP Addresses to the IOPRINT+ Print Server.)
 6. The *Configure Print Server* window will appear. An example screen is shown below.

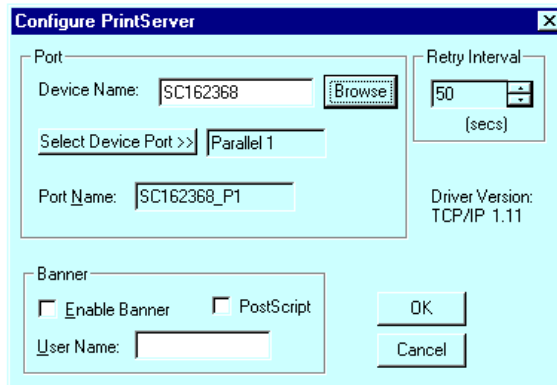

Items shown on this screen are as follows.

Item	Description
Device Name	Click <i>Browse</i> and select the correct IOPRINT+ Print Server. The name shown will be in the form SCxxxxxx (SC followed by 6 digits), as shown on a label on the base of the IOPRINT+ Print Server. The name can be changed if you wish, but it is only visible when configuring the device.
Select Device Port	Select the IOPRINT+ Print Server port that the printer is connected to (e.g. Parallel port 1).
Port Name	On multi-port devices, each port must have a unique name (8 alpha-numeric characters). The Port Name will be shown in the Printer's properties. Use a name which indicates the port used (e.g. Par_1)
Enable Banner	Select this option to enable a banner page.
PostScript	If using a PostScript Printer, check this box.
User Name	The name to be printed on the banner page.
Retry Interval	Sets how often Windows will poll the IOPRINT+ Print Server to establish a connection when the printer is busy. Values range from 40-110 seconds.

7. Change the port name if you wish, and set the banner options.
8. Configure the Printer to use this new port
 - a. Go to *Start-Settings-Printers*. Start the *Add Printer Wizard*.
 - b. When prompted for which computer will manage the printer, select the **My Computer** option.
 - c. Choose the *Printer Model* matching the printer attached to the IOPRINT+ Print Server's first port.
 - d. Select the *Port Name* (from step 3) as the port in the *Select Port* screen. Ensure that **ONLY** this port is selected, as shown in the example below.
 - e. If you click the **Configure Port** button, you will see the *Configure Print Server* screen again.

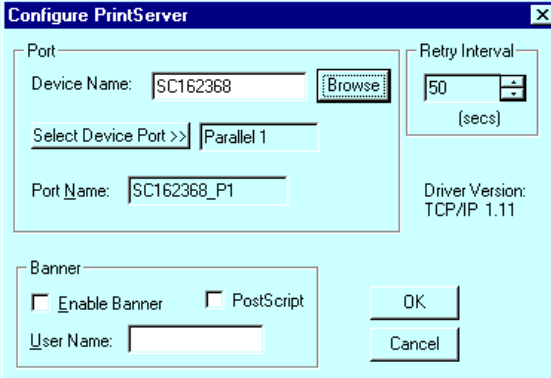

The 'Configure PrintServer' dialog box is shown with the following fields and controls:


- Port section:**
 - Device Name: SC162368 (with a 'Browse' button)
 - Select Device Port >> Parallel 1
 - Port Name: SC162368_P1
- Retry Interval:** 50 (secs)
- Driver Version:** TCP/IP 1.11
- Banner section:**
 - ☐ Enable Banner
 - ☐ PostScript
 - User Name: (empty text box)
- Buttons:** OK, Cancel

9. Follow the on-screen instructions to finish adding a printer as normal. Do NOT enable sharing on this printer.
10. You can now print using this printer.


Installing Additional Ports on Multi-port Models

If you are installing a multiple port IOPRINT+ Print Server, you must add additional ports and printers. To do so, use the following procedure.

1. Go to the Printers folder and click on the printer just added. Select *Properties*, then the *Ports* tab as shown below.

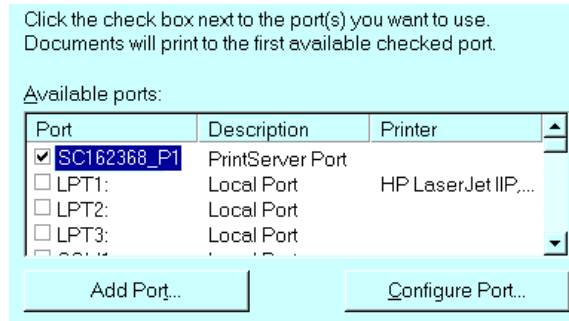

2. Select **Add Port** and select the IOPRINT+ Print Server's port as the port to add.
3. Enter the configuration information as for the first port. Ensure that you select a different IOPRINT+ Print Server port each time, and assign a unique name to that port (e.g. pserv_2 for parallel port 2).
4. Repeat steps 2. and 3. until all IOPRINT+ Print Server ports have been added.
5. Install the correct printer for each port. When prompted with the following screen, ensure that you select the port to which the printer is connected.

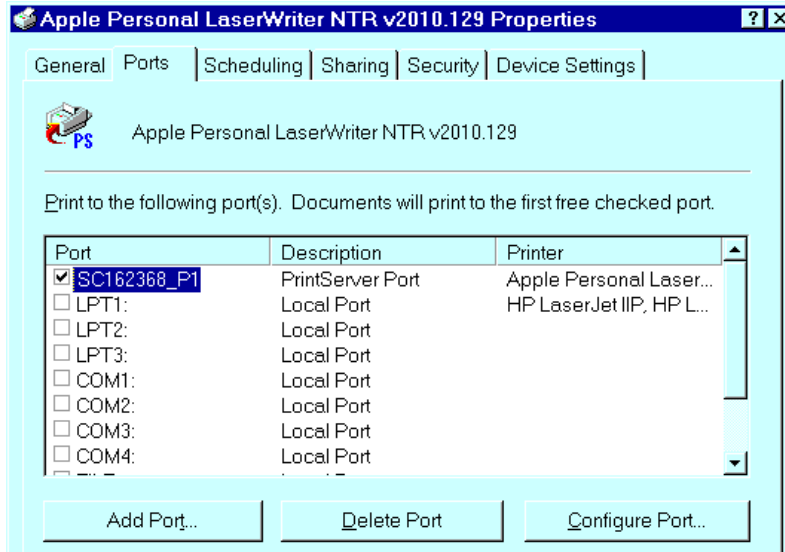


Configuration is now complete. You can now print using the printers attached to the IOPRINT+ Print Server.

Windows NT 3.51

The setup program will do the following:

- Create the following icons: Readme and UnInstall.
 - Add the driver, prtserv.dll, to the Windows\System32 directory.
 - Add the Uninstall program to the Windows directory.
 - Add Uninstall information files and the Readme file to the installation directory.
1. Before proceeding, check the following:
 - IOPRINT+ Print Server is installed, and ON.
 - Printer(s) connected to the IOPRINT+ Print Server, and on-line.
 - LAN is operational and using the TCP/IP protocol.
 2. Run the **SETUP** program in the Driver\ptp_95nt folder on the CD-ROM.
 3. At the *Select Components* window, select the *TCP/IP* protocol.
 4. Once TCP/IP is selected, the *Select Components* screen will present 2 options:
 - Install Device Driver
 - Install SETBOX Program
 5. Select **Device Driver**. This needs to be installed on all workstations. (Select SETBOX only if you need this program to assign IP Addresses to the IOPRINT+ Print Server.)
- The *Configure Print Server* window will appear. An example screen is shown below.

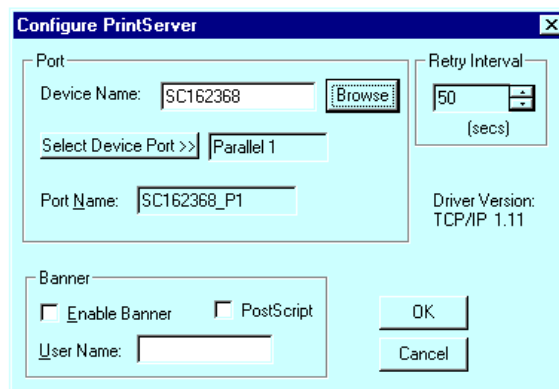

Items shown on this screen are as follows.


Item	Description
Device Name	Click <i>Browse</i> and select the correct IOPRINT+ Print Server. The name shown will be in the form SCxxxxxx (SC followed by 6 digits), as shown on a label on the base of the IOPRINT+ Print Server. The name can be changed if you wish, but it is only visible when configuring the device.
Select Device Port	Select the IOPRINT+ Print Server port that the printer is connected to (e.g. Parallel port 1).
Port Name	On multi-port devices, each port must have a unique name (8 alpha-numeric characters). The Port Name will be shown in the Printer's properties. Use a name which indicates the port used (e.g. Par_1)
Enable Banner	Select this option to enable a banner page.
PostScript	If using a PostScript Printer, check this box.
User Name	The name to be printed on the banner page.
Retry Interval	Sets how often Windows will poll the IOPRINT+ Print Server to establish a connection when the printer is busy. Values range from 40-110 seconds.

6. Change the port name if you wish, and set the banner options.
7. Set the Printer to use this new port
 - a. Go to *Printer Manager*. Select *Printer- Create Printer*.
 - b. Select the appropriate printer driver for the printer connected to the first port on the IOPRINT+ Print Server.
 - c. In the *Print to* dialogue box, select the port name you assigned to the IOPRINT+ Print Server port in step 3.
 - d. If you click on *Settings*, you will see the *Configure Print Server* window again.
8. Follow the on-screen instructions to finish adding a printer as normal. Do NOT click the *Share This* checkbox for this printer.
9. You can now print using this printer.


Installing Additional Ports on Multi-port models

If you are installing a multiple port IOPRINT+ Print Server, you must add additional ports and printers. To do so, use the following procedure.

1. Select the newly added printer using *Printer Manager*. Then, on the *Printer* menu, select *Properties*. The following *Printer Properties* screen will appear.

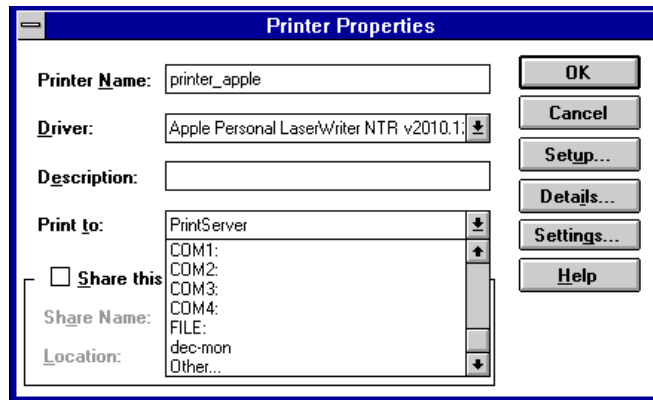

2. In the Print to dialogue box, select **Other...** and click OK. The *Print Destinations* screen will appear:

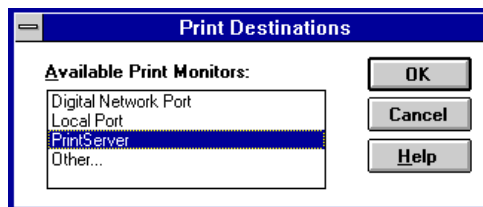

3. Select the port name you assigned to the IOPRINT+ Print Server (**PrintServer** in the example above) and click **OK**.
4. The *Configure PrintServer* window shown previously will appear. Enter the configuration information as for the first port. Ensure that you select a different IOPRINT+ Print Server port each time, and assign a unique name to that port.
5. Repeat steps 2. to 4. until all ports have been added.
6. Install the correct printer for each port. At the following *Create Printer* screen, ensure that the appropriate **Print to** option is selected for each printer.

Create Printer

Printer Name:

Driver:

Description:

Print to:

PrintServ_2
↓

demo_p2
↑

PrintServer

PrintServ_2

PrintServ_3

test_sp

LPT1:

LPT2:
↓

☐ **Share this**

Share Name:

Location:

Configuration is now complete. You can now print using the printers attached to the IOPRINT+ Print Server.

Chapter 3 IOPRINT+ Cabling information

You need to read this chapter if you want to...

You need to read this chapter if you want cabling information for the Perle IOPRINT+ unit.

This chapter provides cabling and connector pinout information for the Perle IOPRINT+ range.

This chapter includes the following sections;

- [Parallel port connector pinout](#) on page **133**
- [Serial Port connector pinout](#) on page **134**
- [Serial cable pinouts for Apple LaserWriter](#) on page **134**.


Parallel port connector pinout

Pin	Signal Name	Direction
1	-Strobe	To printer
2	+Data 0	To printer
3	+Data 1	To printer
4	+Data 2	To printer
5	+Data 3	To printer
6	+Data 4	To printer
7	+Data 5	To printer
8	+Data 6	To printer
9	+Data 7	To printer
10	- ACK	To Server
11	+ Busy	To Server
12	+ Paper End	To Server
13	+ Select	To Server
14	- Auto Feed	To printer
15	- Error	To Server
16	- Init	To printer
17	- Select In	To printer
18-25	GND	Ground

Serial Port connector pinout

Pin	Purpose	Direction
1	Carrier Detect (CD)	To server
2	Receive (Rx)	To server
3	Transmit (Tx)	To printer
4	Data Terminal Ready	To printer
5	Signal Ground (GND)	None
6	Data Set Ready (DSR)	To server
7	Request to Send (RTS)	To printer
8	Clear to Send (CTS)	To server
9	Ring Indicator (RI)	To server

Serial cable pinouts for Apple LaserWriter

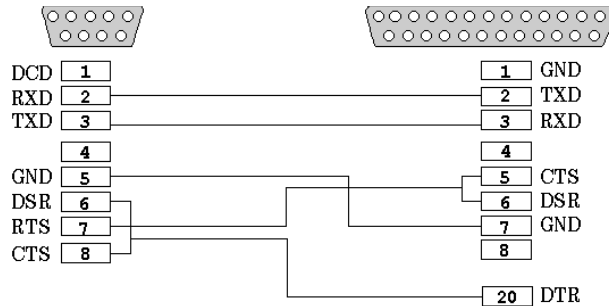

Appendix A BiAdmin Management Program

You need to read this chapter if you want to...

You need to read this chapter if you want to use the BIADMIN management software with your IOPRINT+ unit.

This chapter provides information about using the BIADMIN software for management purposes with your IOPRINT+ unit.

This chapter includes the following sections;

- [Introduction](#) on page [136](#)
- [BiAdmin - NetWare Configuration without Client 32](#) on page [154](#)
- [BiAdmin - NetWare Configuration with Client 32](#) on page [159](#)

Introduction

This section describes the installation and operation of the BiAdmin Configuration & Management program. This program requires:

- Windows 95 or Windows 98
- Windows NT 3.51, Windows NT 4.0
- Additional Recommendations:

Screen resolution of 800 * 600 or greater.

If using Novell NetWare, installation of Novell's *Client 32 for Windows* is strongly recommended. This will greatly enhance the ability to BiAdmin to work with NetWare servers.

This section includes the following:

- [Installation](#) on page [137](#)
- [Main Screen](#) on page [137](#)
- [Icons](#) on page [139](#)
- [NetBEUI Settings](#) on page [147](#)
- [Menu Options](#) on page [151](#)


Installation

BiAdmin can be installed using the main SETUP program on the CD-ROM. If Autorun is enabled, SETUP will run automatically. Otherwise, start the SETUP program in the root directory.

Select *Utilities - Install BiAdmin* from the options available, and follow the on-screen prompts to complete the installation.

Main Screen

Start the program by using the icon created by the setup program. When run, the program searches the network for all active IOPRINT+ Print Servers, then lists them on screen, as shown by the example screen below.

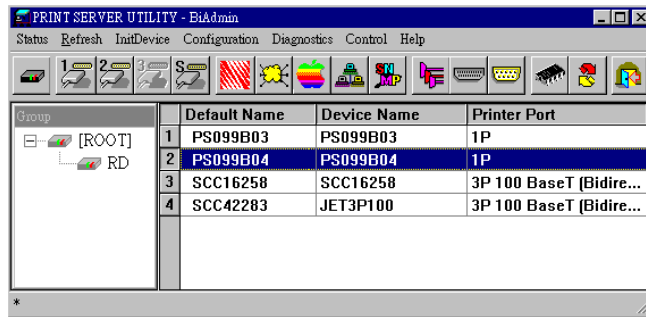

See [Groups](#) on page 138 and [Device List](#) on page 138 for more detail.

Groups

On the left side of the screen is a column for *Groups*. Each IOPRINT+ Print Server may be placed in a group, using the *Configuration-System Configuration-Groups* menu option.


If a group is selected, only IOPRINT+ Print Servers in that group will be listed on the right side of the screen.

By default, all IOPRINT+ Print Servers will appear in the [ROOT] group.

A IOPRINT+ Print Server can only be a member of one (1) group, and will always be a member of a group

Use the *Configuration-System Configuration-Groups* menu option to select a group for the current IOPRINT+ Print Server.

To create a new Group and add the current IOPRINT+ Print Server to it, just enter a group name in the dialog. (See example screen below)

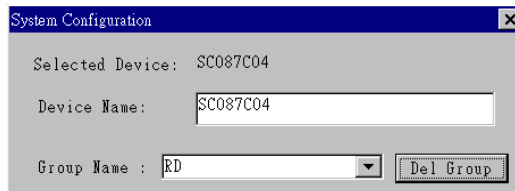

Device List

On the right side of the screen is a list of all IOPRINT+ Print Servers found on the network. For each device, the following data is shown:

- **Default Name.** The *Default Name* is shown on a sticker on the base of the device.
- **Device Name.** If you have not changed the name, this will be the same as the *Default Name*.
- **Port information.** The number and type of ports is shown in the right column.

If the desired device is not listed, try the following:

1. Check that the device is installed and ON, then *Refresh* the list.
2. Use the *InitDevice - Find* menu option to search for the IOPRINT+ Print Server. You need to know the *Default name* of the IOPRINT+ Print Server. The *Default name* is shown on a sticker on the base of the device.
3. If the IOPRINT+ Print Server is on another LAN segment, use the *InitDevice - Attach Remote* menu option to locate and display the IOPRINT+ Print Server.
4. For networks using ONLY TCP/IP, IOPRINT+ Print Servers without an IP Address will not appear. Use the *InitDevice - Set IP Address* menu option to assign an IP Address, then *Refresh* the list. You need to know the *Default Name* of the unlisted device in order to assign an IP Address. The *Default name* is shown on a sticker on the base of the device.

Icons

Once a IOPRINT+ Print Server has been selected, the Icons become active. Note that the icons provide status information as well as access to the selected IOPRINT+ Print Server settings. If an icon is greyed out, that option is or protocol is unavailable. The icons are arranged in 3 groups:

Status (left)



Use these to check the status of the selected IOPRINT+ Print Server, and the printer ports on the IOPRINT+ Print Server.

Configuration (middle)



Use these to configure the selected IOPRINT+ Print Server.

Actions (right)







These allow you to upgrade the firmware, refresh the list of IOPRINT+ Print Servers, view help for each of the other icons, or exit the program.

The following sections provide full details of each icon.

- [Status Icons](#) on page [140](#)
- [Configuration Icons](#) on page [142](#)
- [Other icons](#) on page [143](#)
- [Action Icons](#) on page [150](#)

Status Icons

The following icons are located on the left side of the screen.

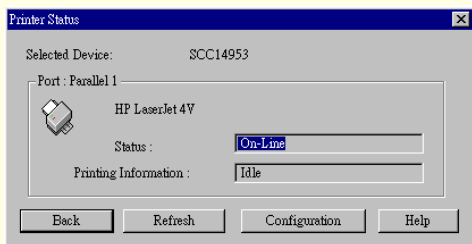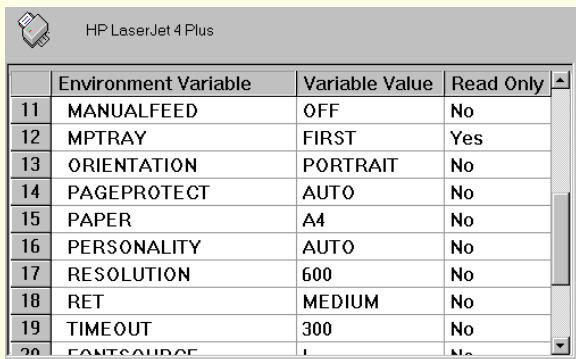Icon	Description																																												
	<p>Device Information</p> <p>Menu equivalent: Status - Device Information</p> <p>This option allows you to view all of the device settings in a scrollable list. The data can not be changed.</p>																																												
	<p>Port Status</p> <p>Menu equivalent: Status - Port Status</p> <p>There are 4 icons - one for each parallel port, and one for the serial port. Non-existent ports are greyed out. Selecting an icon will result in a screen like the following example.</p> <div data-bbox="317 514 793 756"><p>The Printer Status dialog box shows the selected device as SCC14953 and the port as Parallel 1. The printer is an HP LaserJet 4V. The status is On-Line and the printing information is Idle. Buttons at the bottom include Back, Refresh, Configuration, and Help.</p></div> <p>If the printer is Bi-directional, and is not busy, the <i>Configuration</i> button will be available, allowing you to change the configuration of the attached printer. This button will be greyed out if the printer does not support this option, or if the printer is busy printing.</p> <p>If available, clicking the <i>Configuration</i> button in the <i>Printer Status</i> window will reveal a window like the following example.</p> <div data-bbox="317 926 898 1284"><table><thead><tr><th></th><th>Environment Variable</th><th>Variable Value</th><th>Read Only</th></tr></thead><tbody><tr><td>11</td><td>MANUALFEED</td><td>OFF</td><td>No</td></tr><tr><td>12</td><td>MPTRAY</td><td>FIRST</td><td>Yes</td></tr><tr><td>13</td><td>ORIENTATION</td><td>PORTRAIT</td><td>No</td></tr><tr><td>14</td><td>PAGEPROTECT</td><td>AUTO</td><td>No</td></tr><tr><td>15</td><td>PAPER</td><td>A4</td><td>No</td></tr><tr><td>16</td><td>PERSONALITY</td><td>AUTO</td><td>No</td></tr><tr><td>17</td><td>RESOLUTION</td><td>600</td><td>No</td></tr><tr><td>18</td><td>RET</td><td>MEDIUM</td><td>No</td></tr><tr><td>19</td><td>TIMEOUT</td><td>300</td><td>No</td></tr><tr><td>20</td><td>SOURCE</td><td>1</td><td>No</td></tr></tbody></table></div> <p>Environment Variable</p> <p>This list of printer configuration variables will vary from printer to printer.</p> <p>Variable Value</p> <p>Displays the current setting. To change the Variable Value (if <i>Read Only</i> is NO) double click the line you wish to change, then enter or select a new value.</p> <p>Read Only</p> <p>Indicates whether or not the environment variable is adjustable</p>		Environment Variable	Variable Value	Read Only	11	MANUALFEED	OFF	No	12	MPTRAY	FIRST	Yes	13	ORIENTATION	PORTRAIT	No	14	PAGEPROTECT	AUTO	No	15	PAPER	A4	No	16	PERSONALITY	AUTO	No	17	RESOLUTION	600	No	18	RET	MEDIUM	No	19	TIMEOUT	300	No	20	SOURCE	1	No
	Environment Variable	Variable Value	Read Only																																										
11	MANUALFEED	OFF	No																																										
12	MPTRAY	FIRST	Yes																																										
13	ORIENTATION	PORTRAIT	No																																										
14	PAGEPROTECT	AUTO	No																																										
15	PAPER	A4	No																																										
16	PERSONALITY	AUTO	No																																										
17	RESOLUTION	600	No																																										
18	RET	MEDIUM	No																																										
19	TIMEOUT	300	No																																										
20	SOURCE	1	No																																										

Configuration Icons

To configure a IOPRINT+ Print Server, click on it once with your mouse to highlight it. The program will ask for password confirmation. If no password is assigned, click **OK**. Otherwise, enter the password and click **OK**.

Once a IOPRINT+ Print Server is selected, the following Icons (or the equivalent menu selection) can be used to select configuration options.


Standard buttons Most screens contain the following buttons.


- **Set to Default** - Replace the on-screen values with the default values. These are NOT saved until you click the *Save to Device* button.


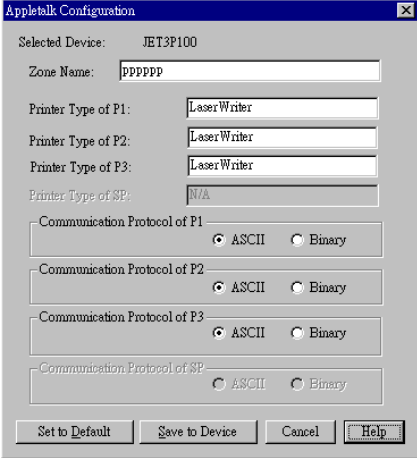

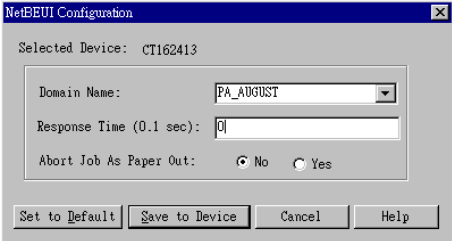
To set ALL device values to the default, use the menu option *InitDevice - Restore Factory Default*.

- **Save to Device** - Save the values shown on screen to the selected IOPRINT+ Print Server. You should then use the *InitDevice* menu option to *Reset* the device to ensure the changes take effect. If you have changed the name or IP Address of the IOPRINT+ Print Server, you should also *Refresh* the device list.
- **Help** - Display context sensitive help.
- **Cancel** - Discard any changes not already saved, and close the Window.

Other icons

Icon	Description
	<p>NetWare</p> <p>Menu equivalent: Configuration - NetWare</p> <p>Select this icon to configure the IOPRINT+ Print Server for use with Novell NetWare servers. You need to be logged into the NetWare servers with ADMIN rights.</p> <p>The screens you will see, and the operations which can be performed, depend on whether or not you have Novell NetWare Client 32 installed.</p> <p>If Novell NetWare Client 32 is installed on your PC, BiAdmin allows you to configure both the IOPRINT+ Print Server and the NetWare server from within BiAdmin.</p> <p>If this Novell NetWare Client 32 is NOT installed, you can configure only the IOPRINT+ Print Server itself, not the NetWare server.</p> <p>For more information, select the appropriate link below:</p> <p>BiAdmin - NetWare Configuration with Client 32 on page 159</p> <p>BiAdmin - NetWare Configuration without Client 32 on page 154</p>

Icon	Description
	<p>TCP/IP Configuration</p> <p>Menu equivalent: Configuration - TCP/IP</p> <p>Selecting this icon will allow configuration for both TCP/IP and Internet Printing. The top section of the screen is shown below.</p> <div data-bbox="459 419 1069 754"> <p>TCP/IP Configuration</p> <p>Selected Device: PS888888</p> <p><input checked="" type="radio"/> Dynamic IP Address(DHCP,Bootp,rarp)</p> <p><input type="radio"/> Fixed IP Address</p> <p>IP Address: <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/></p> <p>Gateway Address: <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/></p> <p>Subnet Mask: <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/></p> <p>TCP session retry interval: <input type="text"/> (sec.)</p> <p>TCP session retry count: <input type="text"/></p> <p>Set to Default</p> <p>Save to Device</p> <p>Cancel</p> <p>Help</p> </div> <p>Enter TCP/IP Configuration data on the top half of this screen. For details of the required data, see Chapter 2 Installation and Configuration</p> <p>If the IOPRINT+ Print Server supports Internet Printing, the bottom section of the screen allows configuration of the Internet Printing function. An example screen is shown below.</p> <div data-bbox="459 926 978 1195"> <p>Internet Mail Printing Configuration</p> <p>Mail Server IP Address: <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/></p> <p>Mail Account: <input type="text"/></p> <p>Password: <input type="password"/></p> <p>Confirm Password: <input type="password"/></p> <p>Check mail interval: <input type="text"/> : <input type="text"/> (hour : min.)</p> <p>Redirect Mail Account: <input type="text"/></p> <p>Default Printer Number: <input type="text"/></p> <p><input type="checkbox"/> Print every email</p> <p><input checked="" type="checkbox"/> Banner Printing</p> <p><input checked="" type="checkbox"/> Activate Response mail</p> <p>Printer Model string: <input type="text"/></p> </div> <p>For details of the required data, refer to Appendix F Internet printing.</p>

Icon	Description
	<p>AppleTalk Configuration</p> <p>Menu equivalent: Configuration - AppleTalk</p> <p>Selecting this icon will cause the following screen to appear.</p>  <p>Refer to the AppleTalk Configuration on page 39 document for details of these settings.</p>
	<p>NetBEUI Configuration</p> <p>Menu equivalent: Configuration - NetBEUI</p> <p>Selecting this icon leads to the following screen.</p> 


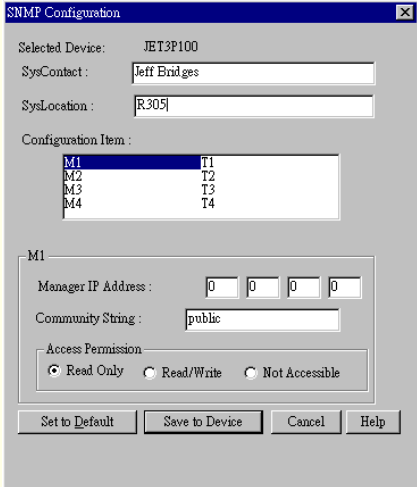
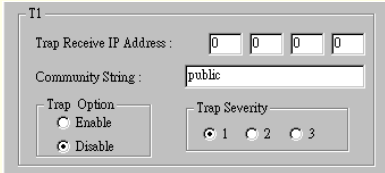

NetBEUI Settings


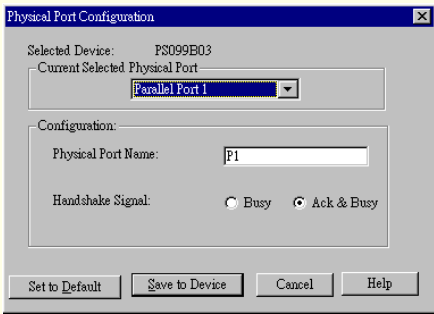

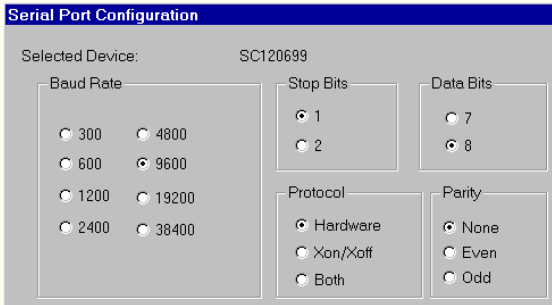
Item	Description
Domain name	Enter the designated work group to be serviced by the IOPRINT+ Print Server. Using only UPPER CASE is recommended, because the IOPRINT+ Print Server is not case sensitive, and will ignore case.
Response Time	Sets how fast jobs are sent to the printer. The default value of zero (0) delay should be increased only if your printer cannot cope with no delay.
Abort Job As Paper Out	YES will terminate the current print job when a printing error is encountered. NO (default) will try to continue but may cause print errors. If errors occur, try setting this value to YES.

Note

Normally, there should be no need to adjust these settings.


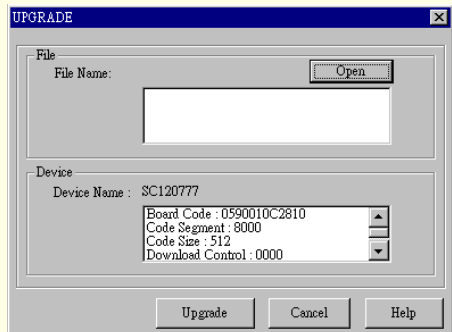


Icons

Icon	Description
	<p>SNMP Configuration</p> <p>Menu equivalent: Configuration - SNMP</p> <p>After clicking this icon, the screen will look like the following.</p>  <p>Note that the bottom part of the screen will change if a Trap (T1..T4) is selected. In that case, the bottom part of the screen will look like the following.</p>  <p>Refer to the Appendix G SNMP document for details of these settings.</p>
	<p>Logical Port Configuration</p> <p>Menu equivalent: Configuration - Logical Port</p> <p>Logical port (printers) can be used in the NetWare and Unix environments. Refer to the appropriate document for details of these settings:</p> <p>NetWare configuration on page 69</p>

Icon	Description
	<p>Physical Port Configuration</p> <p>Menu equivalent: Configuration - Physical Port</p> <p>After selecting the port, you will see the following screen.</p>  <p>Current Selected Physical Port Select the desired port</p> <p>Physical Port Name If desired, enter a name for this port.</p> <p>Handshake Signal</p> <p>Select <i>Busy</i> or <i>Ack & Busy</i>. (Acknowledge and Busy). The default is <i>Ack & Busy</i>. This should only be changed if advised to do so by technical support staff.</p>
	<p>Serial Port Configuration</p> <p>Menu equivalent: Configuration - Serial Port</p> <p>Check your serial printer to see what settings should be used. Selecting this option will show the following screen.</p> 

Action Icons

The following icons are located on the right side of the screen.


Icon	Description
	<p>Upgrade</p> <p>Menu Equivalent: None</p> <p>This option allows you to upgrade the firmware for the selected IOPRINT+ Print Server. Before using this option, you need to obtain the file for the firmware upgrade. Selecting this option will reveal the following screen.</p>  <p>Click the <i>Open</i> button to browse for firmware upgrade files. These files have a.BIN extension.</p> <p>Click <i>Upgrade</i> to send the file in the upper window to the device shown in the lower window. The file will be checked to see if it the correct type for the selected device. Follow the instructions on screen to complete the upgrade. You will be required to <i>Reset</i> (reboot) the IOPRINT+ Print Server after completing the download.</p>
	<p>Refresh</p> <p>Menu Equivalent: Refresh</p> <p>Select this icon to update the IOPRINT+ Print Server device listing after changing the name or IP Address.</p>
	<p>Exit</p> <p>Menu Equivalent: Help - Exit</p> <p>Exit the BiAdmin program. This does not save any changes you have made; you must Save on each screen.</p>

Menu Options


Status Menu

Menu option	Description
Device Info	Same as <i>Device</i> button. Display all the configuration and status information about the selected IOPRINT+ Print Server. The data is presented in a scrolling, read-only window.
Port	Same as <i>Port Status</i> buttons. Select the desired port, to view a screen similar to Printer Status.

InitDevice Menu

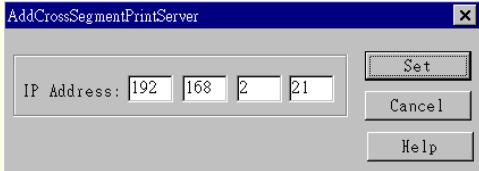Menu option	Description
Attach Remote	<p>This is used to connect to a IOPRINT+ Print Server device on another LAN segment. You will see the screen below.</p>  <p>Enter the IP address of the remote device. If found, the IOPRINT+ Print Server will then appear in the device list.</p>
Connected Protocol	This option allows you to designate which LAN protocol will be used for communication between the selected device and this application. You should select ONE protocol only.
Find	Use this option to locate a IOPRINT+ Print Server on the LAN. Simply enter the <i>Default Name</i> (as shown on a sticker on the base, in the form SCxxxxxx) for the IOPRINT+ Print Server you wish to locate.
Reset Device	This will cause the device to reboot. This should be done after making any configuration changes, or if the device stops responding after some problem.

Configuration Menu

Menu option	Description
System	<p>Selecting this option will reveal the following screen.</p>  <p>Device Name Enter a new name for the selected IOPRINT+ Print Server if you wish.</p> <p>Group Name If a group name is entered, the group name is shown on the left side of the screen, and clicking the group name will list only devices in that group.</p> <p>Protocols</p> <p>Any protocols not used on your LAN may be disabled.</p> <p>Note By default, all protocols are enabled. This allows operation in any environment, but degrades performance.</p> <p>The Configuration Menu also contains selections for each of the following. These have the same effect as the corresponding Icon.</p> <ul style="list-style-type: none"> • NetWare • TCP/IP • AppleTalk • NetBEUI • Logical Port • SNMP

Diagnostics menu

Menu option	Description
Print Test Page	Use this option to print a test sheet from the selected IOPRINT+ Print Server port. The test print out will include status information.

Control Menu

Menu option	Description
Abort Mail Print Job	This option allows you to cancel a print job which has been received though the Internet Printing feature, and is currently printing. This can be used to terminate a print job which is not printing correctly.


BiAdmin - NetWare Configuration without Client 32

Thus section includes the following;

- [Using BiAdmin](#) on page [155](#)
- [Print Server Mode](#) on page [156](#)
- [Remote Printer Mode](#) on page [158](#).


Using BiAdmin

1. Start BiAdmin
2. Select a IOPRINT+ Print Server from the list. If password has been assigned, you will be prompted to enter the password.
3. Select the NetWare icon
4. From the resulting screen, shown below:
 - a. Disable any frame types which are not used on your Network.
 - b. Select the operating mode to match your NetWare server, and click *Configure*.

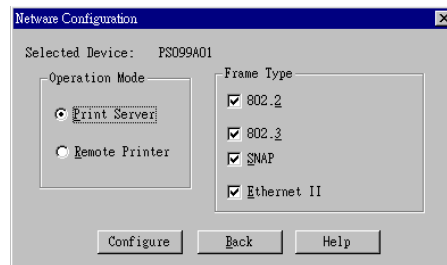

Print Server Mode

If *Print Server* is selected above, then clicking *Configure* will reveal the following screen.

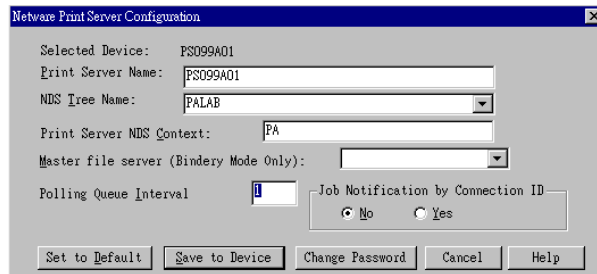

The dialog box titled "Netware Print Server Configuration" contains the following fields and controls:

- Selected Device:** PS099A01
- Print Server Name:** PS099A01
- NDS Tree Name:** PALAB (dropdown menu)
- Print Server NDS Context:** PA
- Master file server (Bindery Mode Only):** (dropdown menu)
- Polling Queue Interval:** 1
- Job Notification by Connection ID:** Radio buttons for No (selected) and Yes
- Buttons:** Set to Default, Save to Device, Change Password, Cancel, Help

Field descriptions


Field	Description
Selected Device	The name of the current IOPRINT+ Print Server
Print Server Name	For convenience, you can change the name of the IOPRINT+ Print Server on this screen, by entering a new name in this field. This becomes the NetWare log-in name for this device.
NDS Tree Name (NDS Mode only)	The File Server's NDS tree name (root name). Select from the drop-down list.
Print Server NDS Context (NDS Mode only)	Path to the NDS Context. This does not include the Context itself, and each OU should be separated by a period. e.g. department . company
Master File Server (Bindery Mode only)	Name of the IOPRINT+ Print Server's master file server (NetWare server). Select from the drop-down list.
Polling Queue Interval	Defines how often the IOPRINT+ Print Server will poll the queues to be serviced.
Job Notification by Connection ID	Set to Yes to receive a job notification at only the workstation where the print job originated, No to receive a job notification at all workstations that you have logged on.
NetWare Password	The password on the NetWare Print Server. The device needs this password to connect to the NetWare server.
Polling Queue Interval	Defines how often the IOPRINT+ Print Server will poll the queues to be serviced.
Job Notification by Connection ID	Set to Yes to receive a job notification at only the workstation where the print job originated, No to receive a job notification at all workstations that you have logged on.

Buttons

Button	Description
Set to Default	Restore default values, clearing all NetWare server information.
Save to Device	Save any changes you have made to the IOPRINT+ Print Server.
Change Password	Enter the password required to connect to the NetWare Server into the resulting dialog box. The IOPRINT+ Print Server will use this password to log-in to the NetWare Server.
Cancel	Cancel any changes not already saved, and close the screen.
Help	View the help file.

Remote Printer Mode

If **Remote Printer** mode was selected, the following screen will be displayed.

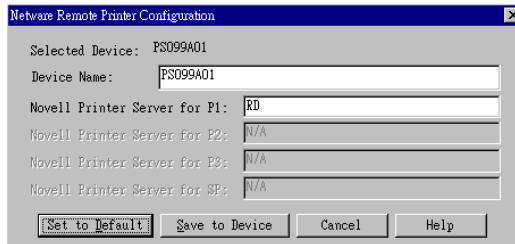

The dialog box titled "NetWare Remote Printer Configuration" contains the following fields and buttons:

- Selected Device: PS099A01
- Device Name: PS099A01
- Novell Printer Server for P1: KD
- Novell Printer Server for P2: N/A
- Novell Printer Server for P3: N/A
- Novell Printer Server for SP: N/A
- Buttons: Set to Default, Save to Device, Cancel, Help

Field descriptions

Field	Description
Selected Device	The name of the current IOPRINT+ Print Server
Print Server Name	For convenience, you can change the name of the IOPRINT+ Print Server on this screen, by entering a new name in this field.
Novell Printer Server for P1	NetWare print server to service the IOPRINT+ Print Server's parallel port 1
Novell Printer Server for P2, P3 & SP (if exist)	NetWare print server to service the IOPRINT+ Print Server's parallel port 2 (P2), parallel port 3 (P3), or Serial port (SP), if fitted.

Buttons

Button	Description
Set to Default	Retrieve default values. These are not saved until you click "Save".
Save to Device	Save any changes you have made to the IOPRINT+ Print Server.
Cancel	Cancel any changes not already saved, and close the screen.
Help	View the help file.


BiAdmin - NetWare Configuration with Client 32

With NetWare Client 32 installed on your PC, BiAdmin's NetWare capabilities are enhanced. As well as configuring the IOPRINT+ Print Server, you can configure the NetWare Server or Servers.

- [Preparation](#) on page [160](#)
- [Print Server Mode - Bindery](#) on page [161](#)
- [Print Server Mode - Bindery](#) on page [161](#)
- [Print Server Mode - NDS](#) on page [169](#)
- [Remote Printer Mode - Bindery](#) on page [177](#)
- [Remote Printer Mode - NDS](#) on page [179](#)

Preparation


1. Ensure that you are logged into the NetWare server(s) you wish to use. You need to have ADMIN rights so you have permission to create printer objects and queues.
2. Start BiAdmin
3. Select a IOPRINT+ Print Server from the list.
4. Select the NetWare icon
5. From the resulting screen, shown below, select the operating mode to match your NetWare server, and click *Configure*.

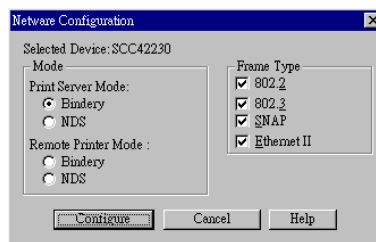

6. Depending on your selection, you will see one of the following screens.

Print Server Mode - Bindery

If **Bindery Print Server Mode** is selected, the following screen will appear:

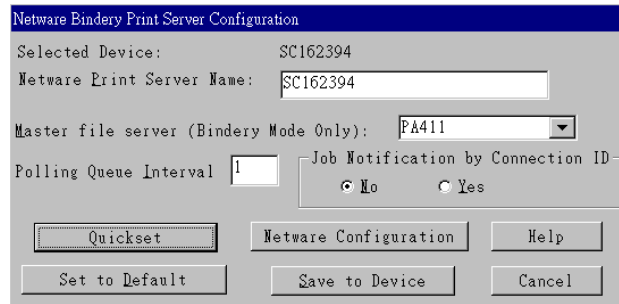

The dialog box is titled "Netware Bindery Print Server Configuration". It contains the following fields and controls:

- Selected Device:** SC162394
- Netware Print Server Name:** SC162394 (text input)
- Master file server (Bindery Mode Only):** PA411 (drop-down menu)
- Polling Queue Interval:** 1 (text input)
- Job Notification by Connection ID:** Radio buttons for ☒ No and ☐ Yes
- Buttons:** Quickset, Netware Configuration, Help, Set to Default, Save to Device, Cancel

Field Descriptions


Field	Description
Print Server Name	Change the name of the selected IOPRINT+ Print Server if you wish. (This field is also on the <i>Configuration-System</i> menu.)
Master File Server	Name of the IOPRINT+ Print Server's master file server (NetWare server). Select from the drop-down list.
Polling Queue Interval	Defines how often the IOPRINT+ Print Server will poll the queues to be serviced. The default is 1 second.
Job Notification by Connection ID	Set to Yes to receive a job notification at only the workstation where the print job originated, No to receive a job notification at all workstations that you have logged on.

Buttons - overview

Button	Description
Quickset	This option will configure the NetWare server using default values. See below for details.
NetWare Configuration	Use this to configure the NetWare server. See below for details. See the following section for details
Help	View context-sensitive help.
Set to Default	Replace the on-screen values with the default values. These are NOT saved until you click <i>Save to Device</i> . (No changes are made to the NetWare server.)
Save to Device	Save any changes you have made to the IOPRINT+ Print Server
Cancel	Ignore any changes made since the last Save operation; close the window.

Quickset button

The **Quickset** button on the previous screen will configure the NetWare server using default values, as shown on the following example.

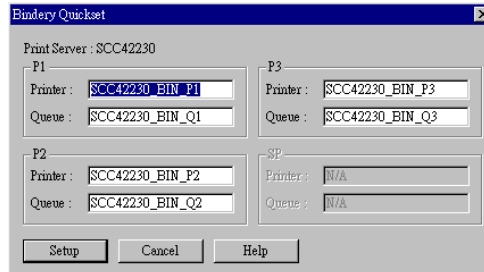

This screen displays the name the selected IOPRINT+ Print Server, and the following information for each port:

Printer - the NetWare printer object which will be created on the current server.


Queue - the NetWare queue associated with the Printer Object. This queue will be serviced by the current IOPRINT+ Print Server, with print jobs being sent to the port shown.

Change the default values if you wish, then click *Setup* to create these objects on the NetWare server.

**NetWare
Configuration
Button (Bindery)**

Clicking the **NetWare Configuration** button will reveal one of the following screens:


If you have multiple File Servers: You will see this screen:

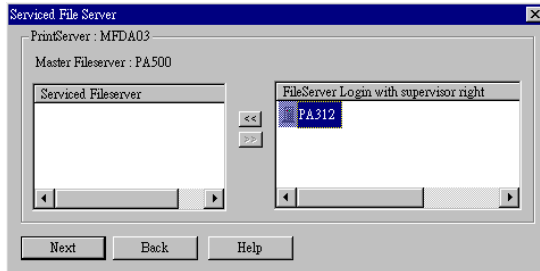

This screen allows you to set the IOPRINT+ Print Server to service additional file servers. Normally, the IOPRINT+ Print Server will service only the *Master File Server*. The right column lists any available servers. Note that to be available, you must be logged into the Server with Supervisor rights. Use the "<<" and ">>" buttons to move file servers to and from the *Serviced Fileserver* list on the left. When completed, click *Next*. This will create a NetWare Print Server object on the *Serviced Fileserver* if it does not yet exist. The NetWare Print Server will have the same name as the NetWare Print Server on the *Master File Server*. After clicking *Next*, you will see the screen below.

If you have a single File Server:

Clicking the **NetWare Configuration** button will reveal the following screen:

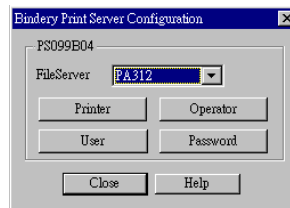

The NetWare Print Server name is shown at the top of the screen. If more than 1 NetWare server is used, this name is the same on every NetWare server.

The options available are :

- **File Server** - This drop-down list will be operational only if you have assigned more than 1 file server to be serviced by the IOPRINT+ Print Server.
- **Printer** - Create Printer Objects, assign Print Queues, and assign users to Print Queues (Required). See the following section for details.
- **Operator** - Assign Operators to the NetWare Print Server object. (Optional)
These operators will then have permission to manage the NetWare Print Server object. The screen is identical to *Assign Operator to Queue (Bindery)*.
- **User** - Assign Users to the NetWare Print Server object. (Optional)
These users will then be able to view the status of the NetWare Print Server object. The screen is identical to *Assign Users to Queue (Bindery)*.
- **Password** - Change the login password used by the IOPRINT+ Print Server when it connects to the NetWare server. By default, there is no password.

Printer button


1. After selecting **Printer** above, the NetWare printer objects (1 for each port on the IOPRINT+ Print Server) will be created if they do not yet exist.
2. The next screen (shown below) allows you to select the desired port on the IOPRINT+ Print Server. This also selects the printer object. You can NOT change the printer object associated with the port.



3. After selecting the desired port, you will see a screen like the following example.

Assigning Printer Queues (Required)


Use this screen to assign queue(s) to the printer object associated with the selected port.

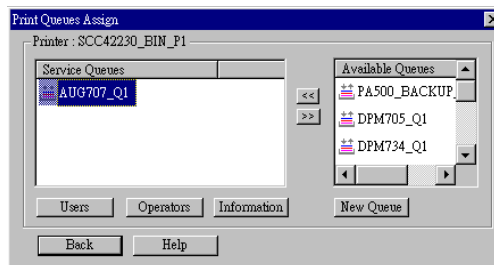

This screen displays the name of the NetWare Printer on the top of the screen. Queues serviced by this NetWare printer are listed on the left, and other queues on the right.

- Create a new queue by clicking **New Queue**. Enter the name in the dialog.
- Assign an existing queue by selecting a queue on the right, and clicking the "<<" button.
- Stop servicing a queue by selecting it from the list on the left, and clicking the ">>" button.
- When a Queue on the left is selected, the *Users*, *Operators*, and *Information* buttons become available.

To Assign Users to Queues (Required) Select the queue, then click **Users** on the screen above to see the following screen. The current queue name is shown on the top of the screen.

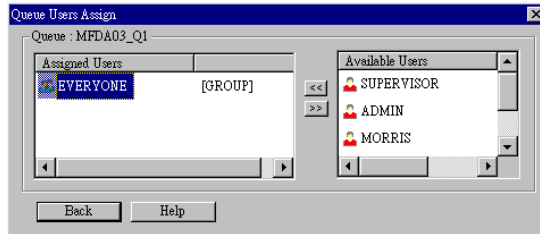


Assign a user or group by selecting them on the right, and clicking the "<<" button.

Remove an assignment by selecting the user or group from the list on the left, and clicking the ">>" button.

To assign operators to Queues (Optional)

Select **Operators** from *Assign Queues* to view the following screen.

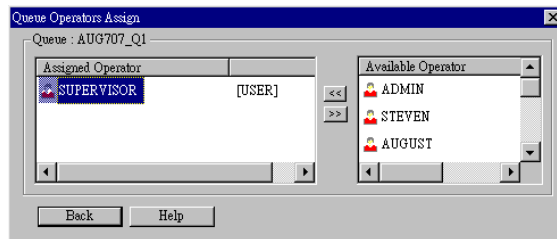


Assign an operator by selecting them on the right, and clicking the "<<" button.

Remove an assignment by selecting the operator from the list on the left, and clicking the ">>" button.

Password

Clicking the **Password** button on the screen shown in Configure NetWare Server (Bindery PS mode) allows you to simultaneously change the NetWare password for the *Master File Server*, and the NetWare login password stored in the IOPRINT+ Print Server. (The IOPRINT+ Print Server must be able to login to the NetWare server.)

You will see a screen like the example below.

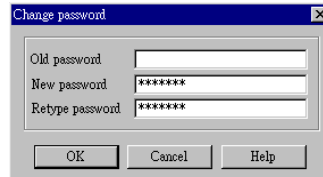

A screenshot of a 'Change password' dialog box. It has a title bar with the text 'Change password' and a close button. Inside the dialog, there are three text input fields: 'Old password', 'New password', and 'Retype password'. The 'New password' and 'Retype password' fields contain asterisks (*****). At the bottom of the dialog, there are three buttons: 'OK', 'Cancel', and 'Help'.


Enter the old (NetWare) password, and enter the new password in both fields provided.

If the printer object has been created by BiAdmin, the *Old Password* will be blank. In that case, leave this field empty.

The new password will be saved both on the NetWare server and the IOPRINT+ Print Server.

Print Server Mode - NDS

If **Print Server - NDS Mode** was chosen, the following screen will appear.

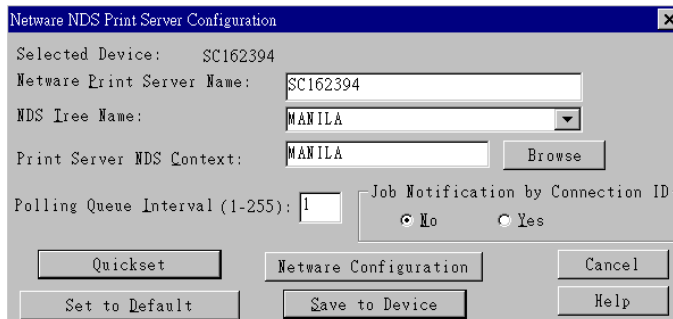

The image shows a Windows-style dialog box titled "Netware NDS Print Server Configuration". It contains the following fields and controls:

- Selected Device:** SC162394
- Netware Print Server Name:** SC162394 (text input)
- NDS Tree Name:** MANILA (dropdown menu)
- Print Server NDS Context:** MANILA (text input) with a **Browse** button to its right.
- Polling Queue Interval (1-255):** 1 (text input)
- Job Notification by Connection ID:** Radio buttons for **No** (selected) and **Yes**.
- Buttons at the bottom:**
 - Quickset** (left)
 - Netware Configuration** (middle)
 - Cancel** (right)
 - Set to Default** (bottom left)
 - Save to Device** (bottom middle)
 - Help** (bottom right)

Field descriptions


Field	Description
Print Server Name	Change the name of the selected IOPRINT+ Print Server if you wish. (This field is also on the <i>Configuration-System</i> menu.)
NDS Tree Name	Select the File Server's NDS tree name (root name)
Print Server NDS Context	Select <i>Browse</i> to view the NDS tree and select the appropriate Context.
Polling Queue Interval	Defines how often the IOPRINT+ Print Server will poll the queues to be serviced.
Job Notification by Connection ID	Set to <i>Yes</i> to receive a job notification at only the workstation where the print job originated, <i>No</i> to receive a job notification at all workstations that you have logged on.

Buttons

Button	Description
NetWare Configuration	Use this to configure the NetWare server. See the following section for details.
Quickset	This option will configure the NetWare server using default values. See below for details.
Help	View context-sensitive help.
Set to Default	Replace the on-screen values with the default values. These are NOT saved until you click <i>Save to Device</i> . (No changes are made to the NetWare server.)
Save to Device	Save any changes you have made to the IOPRINT+ Print Server
Cancel	Ignore any changes made since the last <i>Save</i> operation; close the window.

Quickset button

The **Quickset** button on the screen above will configure the NetWare server with default values. You will see a screen like the following example.

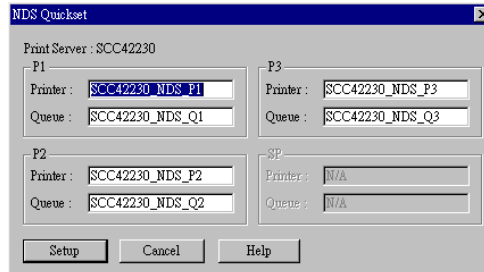


The NDS Quickset dialog box is titled "NDS Quickset". It contains fields for configuring four printer objects (P1, P2, P3, SP). For P1, P2, and P3, the Printer field is set to "SCC42230_NDS_P1", "SCC42230_NDS_P2", and "SCC42230_NDS_P3" respectively, and the Queue field is set to "SCC42230_NDS_Q1", "SCC42230_NDS_Q2", and "SCC42230_NDS_Q3" respectively. For SP, the Printer and Queue fields are set to "N/A". At the bottom, there are buttons for "Setup", "Cancel", and "Help".

Change the default values if you wish, then click **Setup** to create these objects on the NetWare server.

The configuration data will be saved to the NetWare server and the IOPRINT+ Print Server.

Clicking this button will reveal the following screen.

NetWare Configuration Button (NDS)

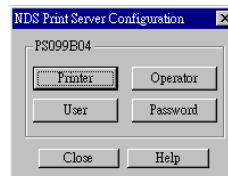

The NDS Print Server Configuration dialog box is titled "NDS Print Server Configuration". It shows the Print Server name "PS099B04". Below the name are four buttons: "Printer", "Operator", "User", and "Password". At the bottom, there are buttons for "Close" and "Help".

The NetWare Print Server name is shown at the top of the screen.

The options available are :

- **Printer** - Create Printer Objects, assign Printer Queues, and assign users to Queues (Required). See the following section for details.
- **Operator** - Assign Operators to the NetWare Print Server object. (Optional)
These operators will then have permission to manage the NetWare Print Server object. The screen is identical to *Assign Operators to Queue (NDS PS mode)*.

Note


Operator assignment has no effect on the IOPRINT+ Print Server. This facility is provided only for the convenience of NetWare administrators.

- **User** - Assign Users to the NetWare Print Server object. (Optional)
These users will then be able to view the status of the NetWare Print Server object. This is optional; printing requires only that users be assigned to queues, not to the NetWare Print Server. The screen for assigning users to a NetWare Print Server is identical to *Assign Users to Queue (NDS PS mode)*.

- **Password** - Change the login password used by the IOPRINT+ Print Server when it connects to the NetWare server. By default, there is no password.


Printer button

1. After selecting **Printer** above, the NetWare printer objects (1 for each port on the IOPRINT+ Print Server) will be created if they do not yet exist.
2. The next screen (shown below) allows you to select the desired port on the IOPRINT+ Print Server. This also selects the printer object. You can NOT change the printer object associated with the port.

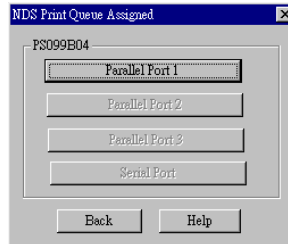

3. After selecting the desired port, you will see a screen like the following example. Use this screen to assign queue(s) to the printer object associated with the selected port.

Assigning Printer Queues (Required)

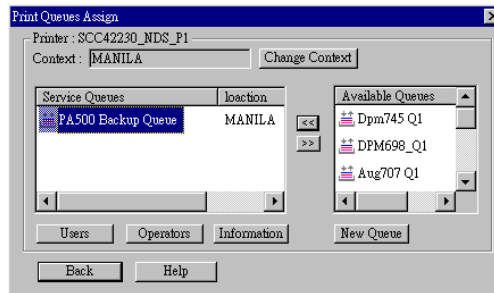

This screen displays the current NetWare Printer Object at the top of the screen. Queues serviced by the current Printer Object are listed on the left, and other queues (in the current context) on the right.

Use the *Change Context* button to change the current context. The *Available Queues* list on the right will then change to show the queues available in that context.


Create a new queue by clicking **New Queue**. Enter the new name, and select the desired context.

Assign an existing queue by selecting a queue on the right, and clicking the "<<" button.

Stop servicing a queue by selecting it from the list on the left, and clicking the ">>" button.

When a Queue on the left is selected, the *Users*, *Operators*, and *Information* buttons become available.

To Assign Users to Queues (Required) Select on queue on the screen above, then click **Users** to see the following screen.

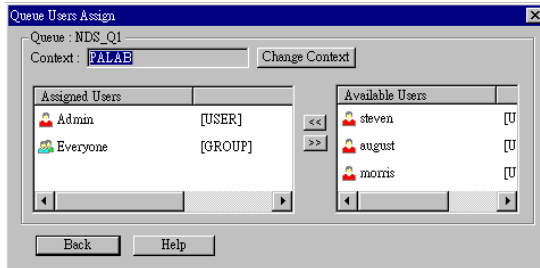

The screen allows you to assign users to the current queue. The current queue is displayed on the top of the screen.

Use the *Change Context* button to change the current context. The *Available Users* list on the right will then change to show the users available in that context.

Assign a user or group by selecting them on the right, and clicking the "<<" button.


Remove an assignment by selecting the user or group from the list on the left, and clicking the ">>" button.

Note

If you select *User* from *NetWare Configuration (NDS PS mode)*, you will see a similar screen, which allows you to assign users to the Printer Object, rather than the Printer Queue.

To assign operators to the Print Queue (Optional)

To assign Operators to the selected queue, select **Operators** from *Assign Queues (NDS PS mode)*. This step is optional; operator assignment has no effect on operation of the IOPRINT+ Print Server.

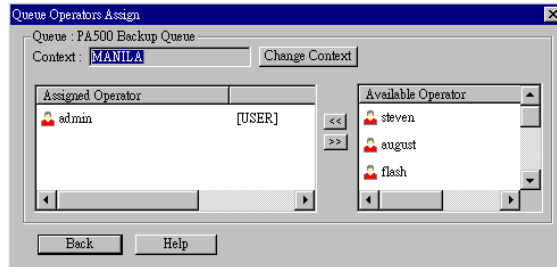

The current Queue and Context are displayed at the top of the screen.

Use the *Change Context* button to change the current context. The *Available Operators* list on the right will then change to show the queues available in that context.

Assign an operator by selecting them on the right, and clicking the "<<" button.


Remove an assignment by selecting the operator from the list on the left, and clicking the ">>" button.

Note

If you select *Operator* from *NetWare Configuration (NDS PS mode)*, you will see a similar screen, which allows you to assign users to the Printer Object, rather than the Printer Queue.

Password (NDS) button


Clicking the **Password** button on the screen shown in *NetWare Configuration (NDS PS mode)* allows you to simultaneously change the NetWare password for the *Master File Server*, and the NetWare login password stored in the IOPRINT+ Print Server. (The IOPRINT+ Print Server must be able to login to the NetWare server.) You will see a screen like the example below.

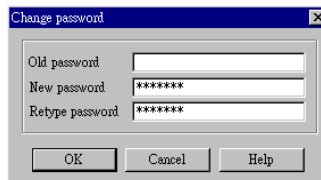

Enter the old (NetWare) password, and enter the new password in both fields provided. If the printer object has been created by BiAdmin, the *Old Password* will be blank. In that case, leave this field empty. The new password will be saved both on the NetWare server and the IOPRINT+ Print Server.

Remote Printer Mode - Bindery

If *Remote Printer Mode - Bindery* was chosen, you will see the following screen.

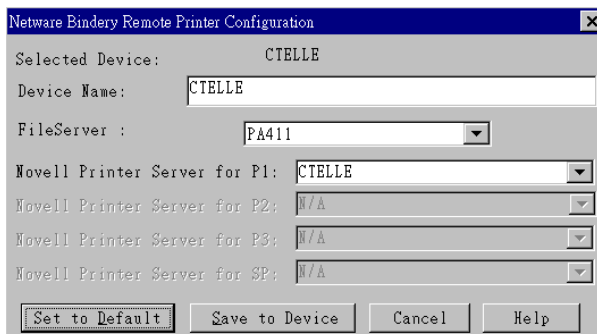

The dialog box is titled "Netware Bindery Remote Printer Configuration". It contains the following fields and controls:

- Selected Device:** CTELLE
- Device Name:** CTELLE (text input)
- FileServer :** PA411 (dropdown menu)
- Novell Printer Server for P1:** CTELLE (dropdown menu)
- Novell Printer Server for P2:** N/A (dropdown menu)
- Novell Printer Server for P3:** N/A (dropdown menu)
- Novell Printer Server for SP:** N/A (dropdown menu)
- Buttons:** Set to Default, Save to Device, Cancel, Help

Field descriptions


Field	Description
Device Name	Change the name of the selected IOPRINT+ Print Server if you wish. (This field is also on the <i>Configuration-System</i> menu.)
File Server	Select the NetWare File Server to service each port.
Novell Printer Server for P1 (Parallel port 1)	Select the NetWare print server to service the IOPRINT+ Print Server's parallel port 1.
Novell Printer Server for P2, P3 & SP (if exist)	Select the NetWare print server to service the IOPRINT+ Print Server's parallel port 2 (P2), parallel port 3 (P3), or Serial port (SP), if fitted.

Buttons

Button	Description
Set to Default	Replace the on-screen values with the default values. These are NOT saved until you click <i>Save to Device</i> . (No changes are made to the NetWare server.)
Save to Device	Save any changes you have made to the IOPRINT+ Print Server
Cancel	Ignore any changes made since the last Save operation; close the window.
Help	View context-sensitive help.

Remote Printer Mode - NDS

If *Remote Printer Mode - NDS* was chosen, you will see the following screen.

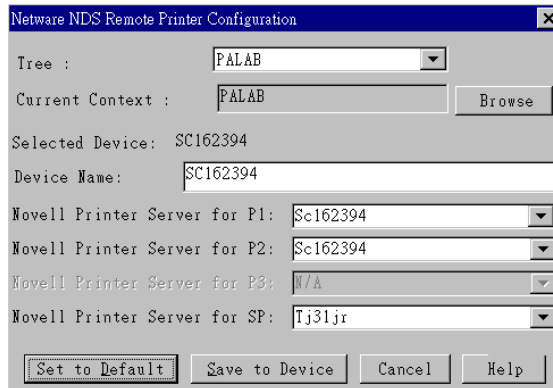

The dialog box is titled "Netware NDS Remote Printer Configuration". It contains the following fields and controls:

- Tree :** A dropdown menu showing "PALAB".
- Current Context :** A text field showing "PALAB" and a "Browse" button.
- Selected Device:** A label followed by the text "SC162394".
- Device Name:** A text field showing "SC162394".
- Novell Printer Server for P1:** A dropdown menu showing "Sc162394".
- Novell Printer Server for P2:** A dropdown menu showing "Sc162394".
- Novell Printer Server for P3:** A dropdown menu showing "N/A".
- Novell Printer Server for SP:** A dropdown menu showing "Tj31jr".
- At the bottom, there are four buttons: "Set to Default", "Save to Device", "Cancel", and "Help".

Field descriptions

Field	Descriptions
Device Name	Change the name of the selected IOPRINT+ Print Server if you wish. (This field is also on the <i>Configuration-System</i> menu.)
NDS Tree Name	Select the NDS tree
Current Context	Select <i>Browse</i> to view the NDS tree and select the appropriate Context.
Novell Printer Server for P1 (Parallel port 1)	Select the NetWare print server to service the IOPRINT+ Print Server's parallel port 1.
Novell Printer Server for P2, P3 & SP (if exist)	Select the NetWare print server to service the IOPRINT+ Print Server's parallel port 2 (P2), parallel port 3 (P3), or Serial port (SP), if fitted.

Buttons

Button	Descriptions
Set to Default	Replace the on-screen values with the default values. These are NOT saved until you click <i>Save to Device</i> . (No changes are made to the NetWare server.)
Save to Device	Save any changes you have made to the IOPRINT+ Print Server
Cancel	Ignore any changes made since the last <i>Save</i> operation; close the window.
Help	View context-sensitive help.

Appendix B PSConfig

You need to read this chapter if you want to...

You need to read this Appendix if you want to use the PSConfig software with your IOPRINT+ unit.

This Appendix provides information about the PSConfig software for use with your IOPRINT+ unit.

This Appendix includes the following sections;

- [Using PSConfig- NetWare Bindery Mode](#) on page [182](#)
- [Using PSConfig - NDS Mode](#) on page [195](#)

Using PSConfig- NetWare Bindery Mode

PSConfig is a DOS-based, menu-driven program. It uses the IPX/SPX protocol to connect to the IOPRINT+ Print Server, so your PC must load the IPX/SPX drivers before PSConfig can be used.

PSConfig can only configure the IOPRINT+ Print Server itself. You must use the NetWare PCONSOLE program to configure the NetWare server. To create or modify NetWare printer objects and printer queues, and allow user groups to access those queues, use PCONSOLE.

Note

If possible, use the *BiAdmin* management utility instead. BiAdmin will allow you to configure both the IOPRINT+ Print Server and the NetWare server. *BiAdmin* requires Windows 95/98/NT.

- [Installation](#) on page **183**
- [Using PSConfig](#) on page **183**
- [Configuration Data](#) on page **184**
- [IOPRINT+ Print Server Data](#) on page **185**
- [Configuration - Print Server Mode](#) on page **187**
- [Novell Remote Printer Mode](#) on page **191**
- [Printer assignments \(remote printer mode\)](#) on page **197**
- [Configuration - Remote Printer Mode](#) on page **191**
- [Advanced Configuration](#) on page **193**

Installation

Simply copy the file PSCONFIG.EXE file from the \Utility\Dos directory on the CD-ROM to your workstation's hard disk.

Using PSConfig

To use PSConfig to change IOPRINT+ Print Server settings, follow this procedure:

1. Run PSConfig. A list of IOPRINT+ Print Server units will appear.
2. Select the IOPRINT+ Print Server you want to setup, then press **Enter**.
3. Select **Change Configuration**. A list of category configurations will appear.
4. Select the category you want to edit, then press **Enter**.
5. Select the item you want to edit and press **Enter**. If you are prompted to enter a character string, enter a string.
6. Change any other items you wish. The **Esc** key will return you to main menu to select another category if you wish.
7. Select **Execute Change** and press **Enter** to save the configuration changes.

Configuration Data

This sections explains the configuration data required by the IOPRINT+ Print Server, and how this data is linked to the NetWare server configuration.

Novell Printer Numbers (Print Server Mode)

In NetWare Print Server mode, NetWare printer numbers match IOPRINT+ Print Server ports as follows.

Novell Printer Number	IOPRINT+ Print Server Device Port
Printer number 0	Parallel Port 1
Printer number 1	Parallel port 2
Printer number 2	Parallel port 3 OR the serial port.

Printer Assignments (Remote Printer Mode)

In remote printer mode the following assignments should be used, where SCxxxxxx is the device name.

Device Port	NetWare Printer Type	Printer Name
Parallel 1	Remote Parallel, LPT1	SCxxxxxx
Parallel 2	Remote Parallel, LPT2	SCxxxxxx_P2
Parallel 3	Remote Parallel, LPT3	SCxxxxxx_P3
Serial	Remote Serial, COM1	SCxxxxxx_SP

IOPRINT+ Print Server Data

The IOPRINT+ Print Server requires the following "General" data, and the data for the mode (Print Server or Remote Printer) you are using.

General

Item	Description
Device Name	The default name is shown on a sticker on the base of the device, in the form SCxxxxxx (SC followed by 6 digits). Change this if you wish. The new name MUST NOT exceed 19 characters, nor contain any spaces.
Device Password	Default is NULL (no password).
NetWare Mode	<i>Print Server or Remote Printer.</i>
Frame Type	Select the frame types used by your network. (Ethernet 802.2, Ethernet 802.3, Ethernet SNAP, and Ethernet II) By default, all frame types are enabled.

Novell Print Server Mode

Item	Description
NDS Tree Name	The File Server's NDS tree name (root name)
Print Server NDS Context	Path to the NDS Context. This does not include the Context itself, and each OU should be separated by a period. e.g. department.company
Master file server (Bindery mode only)	Name of the IOPRINT+ Print Server's master file server.
Polling Queue Interval	Defines how often the IOPRINT+ Print Server will poll the queues to be serviced.
Job Notification by Connection ID	Set to Yes to receive a job notification at only the workstation where the print job originated, No to receive a job notification at all workstations that you have logged on.
NetWare Password	The password on the NetWare Print Server. The device needs this password to connect to the NetWare server.

Novell Remote Printer Mode

Item	Description
Novell Printer Server for P1	NetWare print server to service the IOPRINT+ Print Server's parallel port 1
Novell Printer Server for P2, P3 & SP (if exist)	NetWare print server to service the IOPRINT+ Print Server's parallel port 2 (P2), parallel port 3 (P3), or Serial port (SP), if fitted.

Configuration - Print Server Mode

This section describes how to configure both the NetWare Server and the IOPRINT+ Print Server for Novell *Print Server Mode* operation.

Before you begin, please note the following information:

Novell Printer Numbers

NetWare printer numbers match device ports as follows.

Novell Printer Number	Device Port
Printer number 0	Parallel Port 1
Printer number 1	Parallel port 2
Printer number 2	Parallel port 3 OR the serial port.

Assigning users to printer queues If new printer queues are created, users needing to use the print queues may need to be designated as queue users by using PCONSOLE.

Procedure - NetWare V2, V3

Follow the steps listed below to configure the IOPRINT+ Print Server in NetWare print server mode for NetWare V2, V3, or V4 (Bindery Mode):

- | | |
|--|---|
| <i>Create Queues.</i> | <ol style="list-style-type: none">1. If using existing queues, log in and proceed to Step 2. Otherwise, perform the following procedure.<ol style="list-style-type: none">a. Log into a NetWare file server as a SUPERVISOR or as a user with SUPERVISOR rights.b. Run PCONSOLE program.c. Select <i>Print Queue Information</i>.d. Press [Ins] key to add a new queue.e. Type a queue name, and press [ENTER].f. Repeat until you have the desired number of queues. |
| <i>Add a Novell Print Server.</i> | <ol style="list-style-type: none">2. Follow these steps to inform NetWare that a print server exists.<ol style="list-style-type: none">a. From the PCONSOLE Main Menu, select <i>Print Server Information</i>b. Press [Ins] to add a new print server.c. Enter your desired print server name. |
| <i>Assign Printers.</i> | <ol style="list-style-type: none">3. Follow these steps to associate the NetWare printer objects with the IOPRINT+ Print Server's printer ports.<ol style="list-style-type: none">a. Select the Print Server just added.b. Select <i>Print Server Configuration</i>.c. Select <i>Printer Configuration</i>.d. Select the print number, using the correct printer numbers.e. Press [Esc].f. Select YES.g. Repeat steps d) to f) for each printer port. |
| <i>Associate printers with Print Queues.</i> | <ol style="list-style-type: none">4. Follow the steps below to associate print queues with the printer(s) attached to the IOPRINT+ Print Server.<ol style="list-style-type: none">a. Select <i>Queues Serviced by Printer</i> from the Print Server Configuration Menu.b. Select the printer to which you want to assign a print queue.c. Press [Ins], then select the queue that you want the printer to service.d. Press [Enter] twice to associate the printer with the queue.e. Repeat until all printer and queue associations are completed.f. Exit PCONSOLE |

*Configure the
IOPRINT+ Print
Server*

5. Configure the IOPRINT+ Print Server
 - a. Run the **PSCONFIG** program.
 - b. Select your IOPRINT+ Print Server.
 - c. Select *Set to NetWare Print Server Mode*.
 - d. Enter the file server you are logged onto, to be the master file server to the IOPRINT+ Print Server
 - e. Replace *Print Server name* with the name used on the NetWare server in step [2](#).
 - f. Select *Execute Setup* to save your changes.

Procedure NetWare V4

For NetWare V4, you can use *Quick Setup* instead of the procedure above, to configure the IOPRINT+ Print Server in Print Server Mode.

The procedure is as follows:

Configure NetWare

1. Login as ADMIN. or a user with Admin. rights.
 - a. Run the **P_CONSOLE** program and press **[F4]** to switch to bindery mode.
 - b. Select *Quick Setup*
 - c. Enter the desired names in the following fields:
Print server
New printer
New print queue
 - d. Press **[F10]** to save.
 - e. If necessary, repeat for parallel ports 2 and 3 or the serial port.

Configure the IOPRINT+ Print Server

2. Configure the IOPRINT+ Print Server
 - a. Run the **PSCONFIG** program
 - b. Select your IOPRINT+ Print Server.
 - c. Select *Set to NetWare Print Server Mode*.
 - d. Select the file server you logged on in step 1. to be the master file server.
 - e. Replace the IOPRINT+ Print Server name with the name set in step 1.
 - f. Select Execute Setup.

Novell Remote Printer Mode

This section describes how to use PCONSOLE and PSCONFIG to configure both the NetWare Server and the IOPRINT+ Print Server for Novell Print Server mode operation.

Remote Printer Assignments

In remote printer mode the following assignments should be used, where SCxxxxxx is the device name.

DevicePort	NetWarePrinter Type	Printer Name
Parallel 1	Remote Parallel, LPT1	SCxxxxxx
Parallel 2	Remote Parallel, LPT2	SCxxxxxx_P2
Parallel 3	Remote Parallel, LPT3	SCxxxxxx_P3
Serial	Remote Serial, COM1	SCxxxxxx_SP

Configuration - Remote Printer Mode

Follow the steps listed below to configure the IOPRINT+ Print Server to Novell Remote Printer mode in NetWare V2, V3, and V4 (Bindery emulation).

Create Queues

- Follow the steps below to create queues for the IOPRINT+ Print Server. If using existing queues go to Step 2.
 - Run **PCONSOLE** program.
 - Select *Print Queue Information*.
 - Press **INS** key to add a new queue.
 - Type a queue name, and press **Enter**.
 - Repeat until you have the desired number of queues.

Assign printers to Print Servers

- Assign printers to Print Servers
 - Run PCONSOLE, select Print Server Information
 - Select the desired NetWare Print Server.
 - Select *Print Server Configuration*.
 - Select *Printer Configuration*
 - Select printers that show "Not Installed".
 - Enter the correct data in the "Name" and "Type" Fields. Refer to [Remote Printer Assignments](#) on page 191.
 - Press **Esc**, then select "Yes" to save your changes.
 - Repeat steps e. to g. until all printers are assigned.
 - Press **Esc** and exit.

*Associate Printers
with Print Queues*

3. Associate Printers with Print Queues

- a. Select Queues Serviced by Printer.
- a. Select a printer you want to assign a print queue to.
- b. Press **INS**.
- c. Select the queue that you want the printer to service, and press **Enter**.
- d. Repeat until all printer and queue associations are configured.
- e. Exit PCONSOLE

*Configure the
IOPRINT+ Print
Server*

4. Configure the IOPRINT+ Print Server

- f. Run **PSCONFIG** program
- g. Select the appropriate IOPRINT+ Print Server device from the list.
- h. Select *Set to NetWare Remote Printer Mode*
- i. For all print ports, enter the "NetWare Print Server Name" you selected in Step [2](#).
- j. Select *Execute Setup* to save your changes.

Advanced Configuration

This section describes the advanced operations which can be performed on your IOPRINT+ Print Server.

To make these changes:

- Use PCONSOLE to configure your NetWare Server.
- Use PSConfig, BiAdmin, WPConfig, or WebAdmin to change the IOPRINT+ Print Server device settings.

Service Additional NetWare Bindery file servers

If you used QUICKSET to configure your IOPRINT+ Print Server in NetWare Print Server mode, it is setup to use a single file server.

If you want the IOPRINT+ Print Server to service more than one bindery file server, perform the following steps:

1. Login, with supervisory rights, to the other file servers you want your IOPRINT+ Print Server to service.
2. Create queues and a print server name for your IOPRINT+ Print Server on each file server you want to service.
3. Login, with supervisory rights, to the master file server of your IOPRINT+ Print Server.
4. Run **PCONSOLE**.
5. Select *Print Server Information*, then select your IOPRINT+ Print Server in the print server list.
6. Select *Printer Server Configuration*, then select *File Server To Be Serviced*.
7. Insert the file server names of the other file servers to be serviced by your IOPRINT+ Print Server.
8. Reset the IOPRINT+ Print Server to make it reconnect to the NetWare master file server.

Attach to more than one NetWare Print Server (Remote Printer Mode)

If you used QUICKSET to configure your IOPRINT+ Print Server in NetWare Remote Printer mode, the setup uses the same NetWare Print Server for each port.

If you want each port of the IOPRINT+ Print Server to attach to a different NetWare Print Server, perform the following steps.

1. Use PCONSOLE to create and assign the required printers and queues as required.
2. Run PSCONFIG
3. Select the correct IOPRINT+ Print Server
4. Select *Set to NetWare Remote Printer Mode*.
5. Enter the correct NetWare print server names in the print server name fields, for P2 (Parallel Port 2), P3 (Parallel Port 3), and SP (Serial Port), as appropriate.
6. Select *Execute Setup* to save your changes.

Using PSConfig - NDS Mode

PSConfig is a DOS-based, menu-driven program. It uses the IPX/SPX protocol to connect to the IOPRINT+ Print Server, so your PC must load the IPX/SPX drivers before PSConfig can be used.

PSConfig can only configure the IOPRINT+ Print Server itself. You must use the NetWare PCONSOLE program to configure the NetWare server. To create or modify NetWare printer objects and printer queues, and allow user groups to access those queues, use PCONSOLE.

Note

If possible, use the *BiAdmin* management utility instead; this program will allow you to configure both the IOPRINT+ Print Server and the NetWare server. *BiAdmin* requires Windows 95/98/NT.

- [Installation](#) on page [183](#)
- [Using PSConfig](#) on page [183](#)
- [Configuration Data](#) on page [184](#)
- [Printer Assignments \(Remote Printer Mode\)](#) on page [184](#)
- [IOPRINT+ Print Server Data](#) on page [185](#)
- [Configuration - Print Server Mode](#) on page [187](#)
- [Novell Remote Printer Mode](#) on page [191](#)
- [Configuration - Remote Printer Mode](#) on page [191](#)
- [Advanced Configuration](#) on page [193](#)
- [Attach to more than one NetWare Print Server \(Remote Printer Mode\)](#) on page [194](#).

Installation

Simply copy the file PSCONFIG.EXE file from the \Utility\Dos directory on the CD-ROM to your workstation's hard disk.

Using psconfig

To use PSConfig to change IOPRINT+ Print Server settings, follow this procedure:

1. Run PSConfig. A list of IOPRINT+ Print Server units will appear.
2. Select the IOPRINT+ Print Server you want to setup, then press **Enter**.
3. Select **Change Configuration**. A list of category configurations will appear.
4. Select the category you want to edit, then press **Enter**.
5. Select the item you want to edit and press **Enter**. If you are prompted to enter a character string, enter a string.
6. Change any other items you wish. The **Esc** key will return you to main menu to select another category if you wish.
7. Select **Execute Change** and press **Enter** to save the configuration changes.

Configuration data

This sections explains the configuration data required by the IOPRINT+ Print Server, and how this data is linked to the NetWare server configuration.

Novell printer numbers (print Server Mode)

In NetWare Print Server mode, NetWare printer numbers match IOPRINT+ Print Server ports as follows.

Novell Printer Number	IOPRINT+ Print Server Device Port
Printer number 0	Parallel Port 1
Printer number 1	Parallel port 2
Printer number 2	Parallel port 3 OR the serial port.

Printer assignments (remote printer mode)

In remote printer mode the following assignments should be used, where SCxxxxxx is the device name.

Port	Printer Type	Printer Name
Parallel 1	Remote Parallel, LPT1	SCxxxxxx
Parallel 2	Remote Parallel, LPT2	SCxxxxxx_P2
Parallel 3	Remote Parallel, LPT3	SCxxxxxx_P3
Serial	Remote Serial, COM1	SCxxxxxx_SP

IOPRINT+ Print Server data

The IOPRINT+ Print Server requires the following "General" data, and the data for the mode (Print Server or Remote Printer) you are using.

General

Item	Description
Device Name	The default name is shown on a sticker on the base of the device, in the form SCxxxxxx (SC followed by 6 digits). Change this if you wish. The new name MUST NOT exceed 19 characters, nor contain any spaces.
Device Password	Default is NULL (no password).
NetWare Mode	<i>Print Server or Remote Printer.</i>
Frame Type	Select the frame types used by your network. (Ethernet 802.2, Ethernet 802.3, Ethernet SNAP, and Ethernet II) By default, all frame types are enabled.

Novell Print Server Mode

Item	Description
NDS Tree Name	The File Server's NDS tree name (root name)
Print Server NDS Context	Path to the NDS Context. This does not include the Context itself, and each OU should be separated by a period. e.g. department.company
Master file server (Bindery mode only)	N/A
Polling Queue Interval	Defines how often the IOPRINT+ Print Server will poll the queues to be serviced.
Job Notification by Connection ID	Set to Yes to receive a job notification at only the workstation where the print job originated, No to receive a job notification at all workstations that you have logged on.
NetWare Password	The password on the NetWare Print Server. The device needs this password to connect to the NetWare server.

Novell Remote Printer Mode

Item	Description
Novell Printer Server for P1	NetWare print server to service the IOPRINT+ Print Server's parallel port 1
Novell Printer Server for P2, P3 & SP (if exist)	NetWare print server to service the IOPRINT+ Print Server's parallel port 2 (P2), parallel port 3 (P3), or Serial port (SP), if fitted.

Print Server Mode - Configuration Procedure

Before you begin, please note the following information:

Novell Printer Numbers

NetWare printer numbers match device ports as follows.

Novell Printer Number	Device Port
Printer number 0	Parallel Port 1
Printer number 1	Parallel port 2
Printer number 2	Parallel port 3 OR the serial port.

Assigning users to printer queues

If new printer queues are created, users needing to use the print queues may need to be designated as queue users by using PCONSOLE.

Follow the steps below to use *Quick Setup* to configure the IOPRINT+ Print Server in NDS print server mode.

1. Configure NetWare
 - a. Login as ADMIN. or a user with Admin. rights.
 - b. Select *Quick Setup*.
 - c. Enter your desired print server name in the **Print Server** field. Record the context.
 - d. d) Enter the desired names in the following fields:
 - **New printer**
 - **New print queue**
 - **Print Queue Volume**
 - e. Press **F10** to save.
 - f. Repeat the process for parallel ports 2 and 3 and the serial port, if they exist.
 - g. Exit **PCONSOLE**.
 - h. Enter the command **whoami** and record the Tree name.
2. Configure the IOPRINT+ Print Server
 - a. Run the **PSCONFIG** program.
 - b. Select your IOPRINT+ Print Server. Ensure the device name matches the name used in step 1 for **Print Server**.
 - c. Select *Set to NetWare Print Server Mode*.
 - d. Enter data as follows:
 - NDS Tree name:.
 - Print Server NDS Context:
 - e. Select *Execute Setup* to save your changes.

Remote Printer Mode - Configuration Procedure

In remote printer mode the following assignments should be used, where SCxxxxxx is the device name.

Device Port	NetWare Printer Type	Printer Name
Parallel 1	Remote Parallel, LPT1	SCxxxxxx
Parallel 2	Remote Parallel, LPT2	SCxxxxxx_P2
Parallel 3	Remote Parallel, LPT3	SCxxxxxx_P3
Serial	Remote Serial, COM1	SCxxxxxx_SP

Ensure that you are in the NDS mode then follow the steps listed below.

Create queue objects

1. Login to NetWare as ADMIN. or a user with Admin. rights.
2. Run the **PCONSOLE** program.
3. Select *Print queues*.
4. Press **INS** key to add a new queue.
5. Type a queue name, and press **Enter**.
Repeat Steps above until you have the desired number of queues.

Create printer objects

1. From the PCONSOLE Main Menu, select *Print servers*.
2. Select a NetWare Print Server.
3. Select *Printers*
4. Press **INS** Key to insert a printer.
5. Enter the correct information in the *Name* Field. Refer to the previous section *Remote Printer Assignments*.
6. Select the printer.
7. In the *Type* field, select *parallel* for parallel port 1, 2, or 3; select *serial* for the serial port.
8. Select *Configuration*
9. In the *Port* field, select *LPT1* for parallel port 1, *LP2* for parallel port 2, *LPT3* for parallel port 3, and *COM1* for the serial port.
10. In *Location* field, set to *Manual Load*.
11. Press **Esc** to exit Configuration sub-menu.

Associate queue objects & print objects

1. Select Print queues assigned.
2. Press **INS**
3. Select the queue that you want the printer to service.
4. Press **ESc** twice.
5. Repeat steps above until all association among queues and printers are configured completely.
6. Exit **PCONSOLE**

Configure the IOPRINT+ Print Server

1. Run the PSCONFIG program
2. Select your IOPRINT+ Print Server.
3. Select *Set to NetWare Remote Printer Mode.*
4. Enter the NetWare Print Server Name for all print ports.
5. Select Execute Setup.

Unloading & Reloading NetWare Pserver

1. If Pserver was previously loaded, unload it:
2. Go to the file server console where the NLM is running
3. Press Alt-ESC until you get to the Print Server NLM screen.
4. Press ESC to halt the print server NLM. Answer "Yes" to the prompt.
5. Load or reload the NetWare Pserver NLM with the following command:
load pserver XXXX

Where XXXX is the NetWare print server.
6. When the *Enter Print Server Name* menu appears, press INSERT until you get to *Contents of Current Context.*
7. Select the context that holds the print server. Select the print server from the list and press ENTER.

Advanced Configuration

This section describes the advanced operations which can be performed on your IOPRINT+ Print Server.

To make these changes:

- User PCONSOLE to configure your NetWare Server.
- Use PSCONFIG, BiAdmin, WPConfig, or WebAdmin to change the IOPRINT+ Print Server device settings.

Attach to more than one NetWare Print Server

In NetWare Remote Printer mode, if you want each port of the IOPRINT+ Print Server to attach to a different NetWare Print Server, perform the following steps.

1. Use PCONSOLE to create and assign the required printers and queues as detailed in the *Remote Printer Mode* section.
2. Run PSCONFIG
3. Select the correct IOPRINT+ Print Server'
4. Select *Set to NetWare Remote Printer Mode*.
5. Enter the correct NetWare print server names in the print server name fields, for P2 (Parallel Port 2), P3 (Parallel Port 3), and SP (Serial Port), as appropriate.
6. Select *Execute Setup* to save your changes.

Appendix C WebAdmin

You need to read this chapter if you want to...

You need to read this Appendix if you want to use the WebAdmin software with your IOPRINT+ unit.

This Appendix provides information about the WebAdmin software for use with your IOPRINT+ unit.

This Appendix includes the following sections;

- [Introduction to WebAdmin](#) on page **205**
- [System Requirements](#) on page **205**
- [Server Installation](#) on page **206**
- [Running the Program](#) on page **207**
- [Status options](#) on page **209**
- [Configuration options](#) on page **210**
- [Diagnostics options](#) on page **211**
- [Settings Button](#) on page **212**

Introduction to WebAdmin

WebAdmin must be installed on a supported WEB server, and a compatible WEB browser used run the WebAdmin program. See [System Requirements](#) on page 205.

System Requirements

Item	Description
Server Operating Systems	Microsoft Windows NT 3.51 and 4.0. (Workstation and Advanced Server) Intel or Intel-Compatible processors
Web Servers	Microsoft Internet Information Server (IIS) 1.0 and 2.0
Internet Browsers	Microsoft Internet Explorer 2.0, 3.0 and above. NetScape Navigator 2.0, 3.0 & above.

Server Installation

1. Run the SETUP program in the Utility\Webadmin directory on the CD-ROM.
2. Follow the on-screen instructions.
3. By default, the installation program files will be installed to the following CGI directory:
4. C:\Program Files\PrintServer\WebAdmin
5. The alias *webadm*n for the CGI directory will be created and added to the system registry. If you wish to change the alias of the CGI directory, the procedure is as follows:
6. Choose: Start|Programs|MicroSoft Internet Server(Common)|Internet Service Manager
7. Click the computer which has the service: *WWW* to display service content.
8. Click the *Directory* option to display directory content.
9. Select the *Alias* field, and type the name you want.
10. Check the access rights and ensure the directory is both readable and executable, then click *OK*.
11. Restart the PC to complete the setup.


Running the Program

1. Start your WEB browser.
2. In the *Address* box, type either the IP address or the domain name of the WebAdmin program, followed by the string:
?application/x-msdownload

Example:

`http://202.70.111.20/wab/webadmin.exe?application/x-msdownload`

You will then see a screen like the example below.

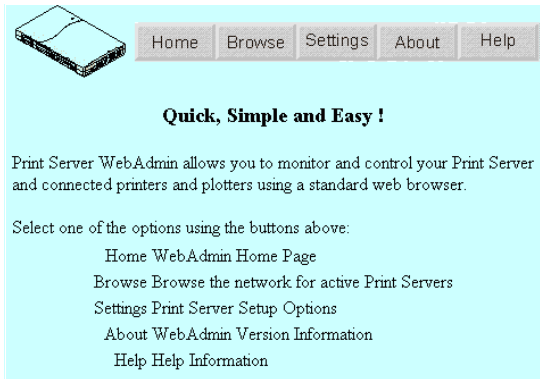

The buttons are described in the following sections:


- **Home Button** on page **208**
- **Browse Button** on page **208**

Home Button Clicking on the *Home* button from any other screen will return you the *Home* screen shown above.

Browse Button The *Browse* button will generate a list of IOPRINT+ Print Servers as shown in the following example. (WebAdmin Listing)

Default Name	Device Name	Printer Port
SC162347	SC162347	2P1S (Bidirectional)
SC162368	SC120699	2P1S (Bidirectional)
SCC14953	MIS	3P 100 BaseT (Bidirectional)

To configure the selected IOPRINT+ Print Server, click on it. This will generate a screen like the following. (WebAdmin Selected Device)

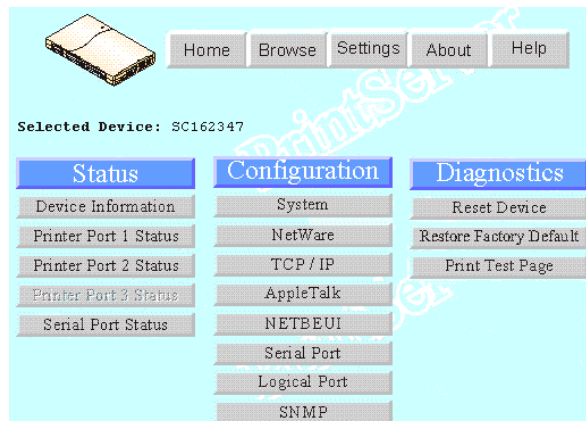

For details on options from this screen see the following:

- [Status options](#) on page [209](#)
- [Configuration options](#) on page [210](#)
- [Diagnostics options](#) on page [211](#)

Status options

These options allow you to check the status of connected printers or IOPRINT+ Print Servers.

Option	Details								
Device Information	A list of the current device settings will be displayed.								
Printer Port Status / Serial Port Status	<p>Click the button for any port to check the status of the attached printer, as shown by the sample screen below.</p> <div data-bbox="779 614 1195 861"> <p>Parallel Port 1 Status</p> <table> <tr> <td colspan="2">Selected Device: SC162347</td></tr> <tr> <td>Printer Model:</td><td>HP LaserJet 4 Plus</td></tr> <tr> <td>Status:</td><td>On-Line</td></tr> <tr> <td>Printing Information:</td><td>Idle</td></tr> </table> <p> Back Refresh Configuration </p> </div> <p>If the printer is bi-directional and is not busy, it can be configured by clicking the <i>Configuration</i> button.</p>	Selected Device: SC162347		Printer Model:	HP LaserJet 4 Plus	Status:	On-Line	Printing Information:	Idle
Selected Device: SC162347									
Printer Model:	HP LaserJet 4 Plus								
Status:	On-Line								
Printing Information:	Idle								

Configuration options

These options allow you to configure the current IOPRINT+ Print Server.

Option	Details
System	Allows you to change the device name, and to set the LAN protocol(s) used by the current device. Only the <i>Connected Protocol</i> referred to on page 64, and your LAN protocol, should be enabled. Note that by default, all protocols are enabled. This allows operation in any environment, but degrades performance.
Netware	Configure NetWare with this icon.
TCP/IP	Use <i>Settings -IP Addresses</i> to initially assign an IP address, and this button for any subsequent changes.
AppleTalk	Enter AppleTalk configuration details here.
NetBEUI	Allows NetBEUI (Windows SMB) changes to be made. The available fields are as follows:
Domain name	Enter the designated work group to be serviced by the IOPRINT+ Print Server. Using only UPPER CASE is recommended.
Response Time	Sets how fast jobs are sent to the printer. The default value of zero (0) delay should be increased only if your printer cannot cope with no delay.
Abort Job As Paper Out	YES will terminate the current print job when a printing error is encountered. NO (default) will try to continue but may cause print errors. If errors occur, try setting this value to YES. Note Normally, there should be no need to adjust these settings.
Serial Port	Configure the serial port if one is fitted. Check your serial printer to see what settings should be used.
Logical Port	Logical ports (printers) can be used under NetWare or Unix.
SNMP	Enter SNMP configuration data here.

Diagnostics options

This column of buttons allows you to perform tasks which are seldom required.

Option	Details
Reset Device	Use this option to reset the IOPRINT+ Print Server. This is equivalent to a power off and on. Resetting should be done after changing the configuration, or if the device ceases responding after a LAN or printer problem.
Restore Factory Defaults	Select this option to return all parameters to their factory default settings.
Print Test Page	Use this option to print a test sheet from the selected IOPRINT+ Print Server port. The test page will contain status information.


Settings Button

The *Settings* button will reveal the *Setup Options* screen:



Option	Details
IP Addresses	Enter the required IP Addresses. You need to know the device's default name. TCP/IP protocol, you must set an IP address before anything else.
Attach Remote	Connect to a IOPRINT+ Print Server on another network segment.
Connected Protocol	Change the protocol used for communication between the program and the current device.

1. elect the Printer which matches the remote printer, then choose *Properties*, as shown in the example below.

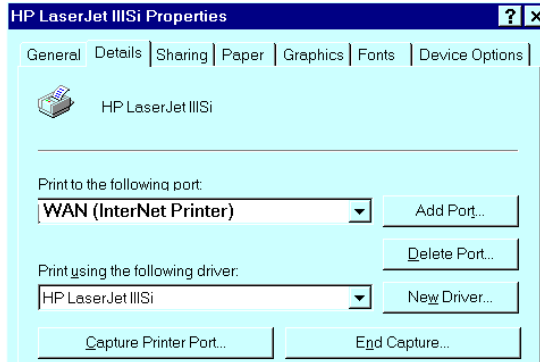

2. Select the new port - WAN (InterNet Printer) in the example - as the port for this printer.
3. If you do not have the correct printer driver, or you wish to create another printer using an existing driver, use the Windows *Add Printer* facility.
4. Using the Windows *Port Settings* or *Configure Port* facility will reveal the same *Configure Port* screen shown in *InterNet Printer Port*.
5. If you wish to print to multiple Internet Printers, use the Windows *Add Port* facility to add a new InterNet Printer port. Ensure that the correct data is entered in each port, and that each port has a unique name.

Checking the Printer Driver

To make sure that the correct printer driver for the remote printer is installed on your system, you can use the InterNet Printing Port to send an E Mail to the Internet Printer. The procedure is as follows:

1. Connect your default printer to the InterNet Printing Port.
2. Check that "Reply Notification Mail" in the InterNet Printing Port is ON.
3. From Notepad or another text editor, print a short message (e.g. "This is a test print") to the Internet Printer.

You will receive a reply E Mail containing the "Printer ID" which will identify the printer attached to the IOPRINT+ Print Server. If this does not match the printer driver you are using, install the correct printer driver.

Appendix D Web Browser configuration

You need to read this chapter if you want to...

You need to read this Appendix if you want to configure your IOPRINT+ unit for use with a web browser.

This Appendix provides information about configuring web browsers for use with your IOPRINT+ unit.

This Appendix includes the following sections;

- [Introduction](#) on page [215](#)
- [Preparation](#) on page [215](#)
- [Connecting to the IOPRINT+ Print Server](#) on page [215](#)
- [Configuration Screens](#) on page [216](#)

Introduction

The 100BaseT IOPRINT+ Print Server models incorporate a HTTP server. This allows you to connect to the IOPRINT+ Print Server and configure it using your Web Browser. Most browser should work, provided they support tables and forms.

Preparation

Because it supports dynamic IP Address allocation using DHCP, BOOTP, or RARP, the IOPRINT+ Print Server ships with an IP Address of 0.0.0.0. This is NOT a valid IP Address. Therefore, you must do one of the following:

- Check your DHCP server (if you have one), and determine the IP Address allocated to the IOPRINT+ Print Server. (Note: The physical address of the IOPRINT+ Print Server can be determined from the *Default Name* shown on a sticker on the base in the form SCxxxxxx, where each x represents a digit The physical address is 00:c0:02:xx:xx:xx.)
- Configure the Unix or Windows NT host so that you can connect to the IOPRINT+ Print Server and allocate an IP Address to it.
- Use BiAd min or another method to allocate a valid IP Address to the IOPRINT+ Print Server.

Connecting to the IOPRINT+ Print Server

1. Start your Web Browser
2. In the *Address* box, enter *HTTP://* followed by the IP Address of the IOPRINT+ Print Server.
e.g.
`http://192.168.0.21`
3. You will then be prompted for the password. If no password has been set, just press ENTER.
4. Use the menu bar on the top of the screen to move about. Remember to save each screen before changing to a different screen.

Configuration Screens

This sections explains the configuration data which can be input on each of the available screens.

Appletalk screen

Appletalk	NetBeui	NetWare	SNMP	TCP/IP
Configure Server	Server Status	Printer Ports	Logical Printers	Internet Printing

AppleTalk

AppleTalk zone

Port	Printer Type	Communication Protocol
Parallel Port 1	<input type="text" value="LaserWriter"/>	<input checked="" type="radio"/> ASCII <input type="radio"/> Binary
Parallel Port 2	<input type="text" value="LaserWriter"/>	<input checked="" type="radio"/> ASCII <input type="radio"/> Binary
Parallel Port 3	<input type="text" value="LaserWriter"/>	<input checked="" type="radio"/> ASCII <input type="radio"/> Binary

Item	Description
Printer Type	These are text fields, used to describe the printer driver used for each port.
Communication Protocol	Sets whether the port uses ASCII or Binary Communication Protocol. Binary communication is twice as fast as ASCII, but ASCII communication is more reliable. The default is ASCII.

NetBEUI screen

<u>Appletalk</u>	NetBeui	<u>NetWare</u>	<u>SNMP</u>	<u>TCP/IP</u>
Configure Server	Server Status	Printer Ports	Logical Printers	Internet Printing

NetBEUI

Domain Name	Workgroup
Response Time (0.1 secs)	0 (0..255)
Abort Print Job if Error	<input type="radio"/> Yes <input checked="" type="radio"/> No

Item	Details
Domain name	Enter the designated work group to be serviced by the IOPRINT+ Print Server. This field is not case sensitive, so names with different case will be considered to be the same name.
Response Time	Sets how fast jobs are sent to the printer. The default value of zero (0) delay should be increased only if your printer cannot cope with no delay.
Abort Job if Error	YES terminates a print job if a printing error occurs. NO (default) will try to continue but may cause print errors. If print errors occur, try setting this value to YES.

NetWare screen

NetWare	
General	
NetWare mode	<input checked="" type="radio"/> Print Server Mode <input type="radio"/> Remote Printer Mode
Frame types	<input checked="" type="checkbox"/> 802.2 <input checked="" type="checkbox"/> SNAP <input checked="" type="checkbox"/> 802.3 <input checked="" type="checkbox"/> Ethernet II
Remote Printer Mode	
NetWare Printer Server for parallel port 1	<input type="text"/>
NetWare Printer Server for parallel port 2	<input type="text"/>
NetWare Printer Server for parallel port 3	<input type="text"/>
Print Server Mode	
NDS Tree Name	FAST
NDS Context	.TAIWAN.SERVER
Master File Server	<input type="text"/> (Bindery Mode only)
NetWare Password	<input type="text"/>
Job Notification	<input type="radio"/> Originating Workstation only <input checked="" type="radio"/> All log-ins
Polling Queue Interval	1 (1..255)

Item	Description
General	
NetWare Mode	Select <i>Print Server</i> or <i>Remote Printer</i> , as appropriate. The default is <i>Print Server</i> .
Frame Type	Select the frame types used by your network. (Ethernet 802.2, Ethernet 802.3, Ethernet SNAP, and Ethernet II) By default, all frame types are enabled.
Remote Printer Mode	
Novell Printer Server for P1	NetWare print server to service the IOPRINT+ Print Server's parallel port 1
Novell Printer Server for P2, P3 (if exist)	NetWare print server to service the IOPRINT+ Print Server's parallel port 2 (P2), parallel port 3 (P3), if fitted.
Print Server Mode	

Item	Description
NDS Tree Name (NDN mode only)	The File Server's NDS tree name (root name)
Print Server NDS Context (NDS Mode only)	Path to the NDS Context. This does not include the Context itself, and each OU should be separated by a period. e.g. department.company
Master File Server (Bindery Mode only)	Name of the IOPRINT+ Print Server's master file server
NetWare Password	The password on the NetWare Print Server. The device needs this password to connect to the NetWare server.
Job Notification	The options are: Job notification at only the workstation where the print job originated Job notification at all workstations that you have logged into.
Polling Queue Interval	Defines how often the IOPRINT+ Print Server will poll the queues to be serviced.

SNMP (Simple Network Management Protocol) screen

Appletalk	NetBeui	NetWare	SNMP	TCP/IP
Configure Server	Server Status	Printer Ports	Logical Printers	Internet Printing

SNMP

SysContact:

SysLocation:

Management Stations

No.	1	<input type="button" value="Get Data"/>
IP Address	203 70 212 211	
Community	public	
Access	Read-only	

Trap Receivers

No.	1	<input type="button" value="Get Data"/>
IP Address	203 70 212 211	
Community	private	
Enable	<input checked="" type="checkbox"/> Enable with Severity level: 1	

Item	Description
SysContact	Text Field - Name of the contact person
SysLocation	Text Field - Location of the contact person
Management Stations	
No.	Select the Management station (1..4) and click the Get Data button to update the display for the selected item.
IP Address	Enter the IP Address of the management station which has the SNMP program installed.
Community	This is a text field. Enter the name of the community.
Access	Select the desired level of access.
Trap Receivers	
No.	Select the Trap Receiver number (1..4) and click the Get Data button to update the display for the selected item.
IP Address	Enter the IP Address of the Trap Receiver which will be sent the Trap message.
Community	This is a text field. Enter the name of the community.
Enable	Check to enable; select the severity level. Note: Currently, all traps are level 1.

TCP/IP screen

Appletalk	NetBeui	NetWare	SNMP	TCP/IP
Configure Server	Server Status	Printer Ports	Logical Printers	Internet Printing

TCP/IP

LAN Settings

Device IP Address	192	168	0	1
Router IP Address	0	0	0	0
Network Mask	255	255	255	0

TCP/IP Reconnection Settings

Delay before reconnection attempt (secs)	2	(0..255)
Number of reconnection attempts	254	(0..255)

Item	Description
IP Address	Enter the IP Address assigned to this IOPRINT+ Print Server. If using dynamic IP Addresses (DHCP, BOOTP, rarp), this address should be left at 0.0.0.0.
Router (Gateway) IP Address	If your network segment has a router, enter the router address here. If there is no router, leave the address as 0.0.0.0.
Network Mask	If the Gateway Address above is 0.0.0.0 the Network Mask should also be left at 0.0.0.0. If you have a router, enter the Network mask (Subnet mask) for the segment to which the IOPRINT+ Print Server is attached.
Delay before reconnection attempts	Sets how long the IOPRINT+ Print Server should wait before retrying a TCP/IP connection which is lost. Allowable values are from 0 to 255 seconds, with 2 as the default.
Number of reconnection attempts	Sets how many attempts at reconnection will be made. After that, the TCP/IP session will be terminated. Allowable values are from 0 to 255, with 254 as the default.

Configure Server screen

Appletalk	NetBeui	NetWare	SNMP	TCP/IP
Configure Server	Server Status	Printer Ports	Logical Printers	Internet Printing

Configure Server

Print Server Name	<input type="text" value="AdminLaser"/>
Password	<input type="password" value="*****"/>
Verify	<input type="password" value="*****"/>
Enable Protocols	<input checked="" type="checkbox"/> Appletalk <input checked="" type="checkbox"/> IPX/SPX <input checked="" type="checkbox"/> NetBEUI

Item	Description
Print Server Name	Change the default name if you wish. The new name must not contain any spaces or blanks.
Password	Enter the device password, and again in the Verify field. Once a password is entered, it is required in order to gain access and change the configuration.
Enable Protocols	Non-TCP/IP protocols may be disabled if they are not required on your LAN. (Note: If using the WPCongig utility, the IPX/SPX protocol is required.)

Server Status screen

This screen shows server system data and the current settings for all of the other screens. It is read-only; no data can be input on this screen.

Server Status

Hardware ID: 0171009C28
Firmware Version: 6013
Protocol ID: 003F
Default Name: SCC14183
Server Name: SCC14183
Netware Info:
Master File Server:
NDS Tree Name:
NDS Tree Context:
Print Server Mode Status:
Remote Printer Mode Status: N/A
AppleTalk Info:
Printer Type:
SCC14183:LaserWriter
SCC14183_P2:LaserWriter
SCC14183_P3:LaserWriter
TCP/IP Info:
IP Address: 203.70.212.235
Gateway Address: 203.70.212.252
Subnet Mask: 255.255.255.0
Email Server IP Address: 0.0.0.0
Printing Account Name: N/A
Redirect Account Name: N/A
SMB Info:
Domain Name:

Refresh

Printer Ports screen

This screens displays the current status of each port. The following example is for the 3 port model.

Printer Status

Parallel Port 1

Connected Printer	P1
Status	On-Line
Printing Information	Idle

Print Test Page

Parallel Port 2

Connected Printer	P2
Status	Offline
Printing Information	Idle

Print Test Page

Parallel Port 3

Connected Printer	P3
Status	Offline
Printing Information	Idle

Print Test Page

Refresh

Field descriptions

Item	Description
Connected Printer	The model name of the printer connected to the port, if the printer name is known. (If the printer is not bi-directional, this information is unavailable.)
Status	The current status of the printer: On-line Off-line Out of paper
Printing Information	This will show either <i>Idle</i> or <i>Printing</i> .

Buttons

Item	Description
Print Test Page	This will print a test page from printer connected to the selected port. The test page will contain the current status information.
Configure Port (Serial Port only)	If your model has a serial port, clicking this button will reveal the following screen, allowing you to configure the serial port, if one is fitted. See the following section.
Refresh	Update all information shown on screen.

Serial Port Configuration screen

If fitted, the *Serial Port Screen* can be accessed by clicking the *Configuration* button on the Printer Port screen above.

Configure Serial Port

Baud Rate	9600 ▾
Protocol	Hardware ▾
Parity	None ▾
Data Bits	8 ▾
Stop Bits	1 ▾

If the default values do not work, check your serial printer to determine what settings should be used.

Logical Printers screen

Appletalk	NetBeui	NetWare	SNMP	TCP/IP
Configure Server	Server Status	Printer Ports	Logical Printers	Internet Printing

Logical Printers

Logical Printer	No: <input type="text" value="L1"/>	<input type="button" value="Get Data"/>
Port	<input type="text" value="Parallel 1"/>	
Pre-string (Hex)	<input type="text"/>	
Post-string (Hex)	<input type="text"/>	
Convert LF to CR/LF	<input type="checkbox"/>	

Item	Description
Logical Printer (Port)	Select the Logical Printer Port you wish to configure (L1 to L3 or L1 to L8, depending on your model) Click the Get Data button to update the display with the current data for the selected logical printer.
Port	Select the Printer Port which the Logical printer is to use.
Pre-string	The printer control string (in hex) to be sent to the printer before each print job.
Post String	The printer control string (in hex) to be sent to the printer after each print job.
Convert LF to CR+LF	If checked, LF (line feed) characters are changed to CR+LF (carriage return + line feed).

Internet Printing screen

Internet Printing

Mail Server

Mail Server IP Address	192 168 10 100
Account Name	sales@ms09.com
Account Password	*****
Verify Password	*****
Check Mail every:	1 30 (Hr Min)
Redirect unprintable Mail to:	postmaster

Printer

Printer Model	HP 4 Plus
Printer Port	Parallel 1
Options	<input type="checkbox"/> Print every E-Mail <input checked="" type="checkbox"/> Print Banner Page <input type="checkbox"/> Mail response when printed

Item	Description
Mail Server	
Mail Server IP Address	The IP Address of the E Mail Server used by the IOPRINT+ Print Server.
Account Name	Enter the name of the Mail Server account used for Internet Printing. Internet users will send the print job to this mail address.
Account Password	Enter the password for the above Mail Account here, and again for <i>Verify</i> .
Check Mail Interval	Sets how often to check the Mail Server. Use 0 to indicate a continuous connection.
Redirect Unprintable Mail to:	Jobs which can not be printed will be sent to this account. If blank, unprintable jobs will be discarded.
Printer	
Printer Name	Text field to identify the printer used for internet printing.
Printer Port	Select the port (physical or logical) to be used for all Internet print jobs.

Item	Description
Print every E Mail	If ON, then all E Mail received is printed. Otherwise, only E Mail generated by the <i>InterNet Printing Port</i> software will be printed.
Print Banner	If YES (default), a banner page is printed to identify the owner of the print job.
Mail Response when printed	If YES, all print jobs receive an E mail response. If NO, only users who set this option in their <i>InterNet Printing Port</i> software receive an E Mail

Appendix E WPCONFIG management program

You need to read this chapter if you want to...

You need to read this Appendix if you want to use the WPCONFIG management program.

This Appendix provides information about using the WPCONFIG management program with your IOPRINT+ unit.

This Appendix includes the following sections;

- [Introduction to WPCONFIG](#) on page [231](#)
- [Installation](#) on page [231](#)
- [Using WPCONFIG](#) on page [232](#)

Introduction to WPCONFIG

For Windows 3.1 WPCONFIG can be run from any Windows PC that has IPX and SPX protocols loaded. For Windows 95 or Windows NT platforms, the BiAdmin program is preferable to WPCONFIG, because WPCONFIG does NOT support the following features.

- Printer Configuration
- SNMP Configuration
- Internet Printing

Installation









1. Run the SETUP program in the Utility\Wpconfig directory on the CD-ROM.
2. Follow the on-screen instructions.

The Setup program will automatically create a WPCONFIG group containing two icons: WPCONFIG and Readme.

Using WPCONFIG

When run, WPCONFIG searches the network for all active IOPRINT+ Print Servers, listing them as shown below.



*WPCONFIG Main
Screen*

Refresh Status Configuration Diagnostics Help			
       			
Default Name	Device Name	Network No.	Printer Port(s)
SC029142	SC029142	14	1 Parallel
SC555524	SC555524	21	1 Parallel
SC120693	SC120693	14	3 Parallel
Ready			

WPCONFIG Icons

The icons provide status information as well as access to the selected IOPRINT+ Print Server settings. If an icon is greyed out, that option is unavailable. For example, the serial port is greyed out on units without a serial port.

	<p>Device Information</p> <p>This presents configuration information about the IOPRINT+ Print Server in a scrollable, read-only list.</p>
	<p>Printer Port Status</p> <p>Shows current printer status (On-line, printing, off-line) for all ports..</p>
	<p>NetWare</p> <p>Configure NetWare with this icon.</p>
	<p>TCP/IP</p> <p>Set the IP Address, Network Mask, and Gateway IP Address on this screen. See Unix - TCP/IP on page 45 or Windows NT Server (TCP/IP) on page 78 for details.</p>
	<p>AppleTalk</p> <p>Enter AppleTalk configuration settings here. See AppleTalk Configuration on page 39 for details.</p>
	<p>NetBEUI</p> <p>NetBEUI (Windows SMB) changes can be made using this icon. The available fields are as follows:</p> <p>Domain name</p> <p>Enter the designated work group to be serviced by the IOPRINT+ Print Server. Using only UPPER CASE is recommended.</p> <p>Response Time</p> <p>Sets how fast jobs are sent to the printer. The default value of zero (0) delay should be increased only if your printer cannot cope with no delay.</p> <p>Abort Job As Paper Out</p> <p>YES will terminate the current print job when a printing error is encountered. NO (default) will try to continue but may cause print errors. If errors occur, try setting this value to YES.</p>
	<p>Logical Printers</p> <p>Logical printers can be used under NetWare configuration on page 69 or Unix - TCP/IP on page 45.</p>
	<p>Serial Port</p> <p>Configure the serial port if one is fitted. Check your serial printer to see what settings should be used.</p>
	<p>Refresh</p> <p>Update the IOPRINT+ Print Server listing. This is required after changing the device name or IP Address.</p>

	<p>Exit</p> <p>Exit WPCONFIG.</p>
	<p>Help</p> <p>Show WPCONFIG version information.</p>
	<p>Set to Default Button</p> <p>This button is on most configuration screens. This will restore current screen values to their factory defaults.</p>
	<p>Save to Device Button</p> <p>This button is on most configuration screens. This will save any changes to the device.</p>

Menu Options

Configuration Menu

Menu option	Description
System	Allows you to change the device name, and to set the LAN protocol(s) used by the current device. Only the IPX and your LAN protocol should be enabled. Note By default, all protocols are enabled. This allows operation in any environment, but degrades performance.
Reset Device	This should be done after making any configuration changes, or if the device stops responding.
Restore Factory Defaults	This restores ALL values to the factory defaults. To restore only the current screen, use the <i>Set to Default</i> button on the screen.

Diagnostics menu

Menu option	Description
Print Test Page	Use this option to print a test sheet from the selected IOPRINT+ Print Server port. The test print out will include status information.

Appendix F Internet printing

You need to read this chapter if you want to...

You need to read this Appendix if you want to print data across the internet.

This Appendix provides information about printing across the internet.

This Appendix includes the following sections;

- [Introduction to Internet Printing](#) on page [238](#)
- [System Requirements](#) on page [239](#)
- [Internet Mail Printing Configuration](#) on page [240](#)
- [User Software](#) on page [241](#)
- [Installation](#) on page [242](#)
- [Using the new Port](#) on page [244](#)
- [Checking the Printer Driver](#) on page [245](#)
- [Printing through the Internet](#) on page [246](#)
- [Cancelling a Print Job](#) on page [246](#)
- [Server Status screen](#) on page [247](#)
- [Printer Ports screen](#) on page [248](#)
- [Serial Port Configuration screen](#) on page [250](#)
- [Logical Printers screen](#) on page [251](#)
- [Internet Printing screen](#) on page [252](#)

Introduction to Internet Printing

The Internet Printing System allows users to print data to your printer across the Internet. Users send the Internet IOPRINT+ Print Server an E Mail, with the print job normally sent as an attachment to the E Mail. The IOPRINT+ Print Server will retrieve the E Mail and print it. The InterNet Printing Port software is available for the following operating systems:

- Microsoft Windows 95
- Microsoft Windows NT 3.51 or later.

System Requirements

Mail Server

- **Accessibility.** The Mail Server must be accessible by the intended clients or users. Normally, this means a permanent connection to the Internet.
- **Protocols.** The Mail Server must support the POP3 and SMTP protocols. The Internet Printing System uses these protocols and the most common E Mail formatting standards:
- MIME (Multipurpose Internet Mail Extensions)
- Base64 Encoding (for mail attachments)

IOPRINT+ Print Server used for Internet Printing

- **TCP/IP Protocol.** The LAN must use the TCP/IP protocol.
- **Mail Server Access.** The IOPRINT+ Print Server must be able to access the Mail Server using a single IP address.
- **Mail Account.** The IOPRINT+ Print Server must have a Mail Account. Users print by sending an E Mail to this mail account.

User (Client) Requirements

- **Internet Connection.** Either through a LAN, or dial-up.
- **E Mail address.** This is used to notify the user that their print job has been done, or if there are any problems.
- **Printer Driver.** Users must have a printer driver which matches the printer connected to the remote Internet IOPRINT+ Print Server.
- **Print Capture Software.** To print more than plain text, users require InterNet Printing Port software to capture the print job and convert it into an E Mail attachment.

Internet Mail Printing Configuration

The BiAdmin Management program can be used to set the following entries on the TCP/IP screen. FTP can also be used; the number in brackets shows the line number in the IOPRINT+ Print Server's CONFIG file.

Item	Description
Mail Server IP Address (4100 MAIL_IP)	The IP Address of the E Mail Server used by the IOPRINT+ Print Server.
Mail Account (4101 MAIL_ACC)	The name of the E Mail Account used by the IOPRINT+ Print Server.
Mail Account Password (4102 MAIL_PAS)	Enter the password for the above Mail Account here.
Check Mail Interval (4103 MAIL_INT)	Sets how often to check for mail. Values range from 0 to 65,535 minutes, with 0 meaning a continuous connection and 1 as the default.
Print Banner (4104 MAIL_BAN)	If YES (default), a banner page is printed to identify the owner of the print job.
Redirect Mail Account (4105 MAIL_RED)	Jobs which can not be printed will be sent to this account. If blank, unprintable jobs will be discarded.
Default Printer Number (4106 MAIL_POR)	Printer number for all Internet print jobs. Only one port can be selected. Users on the LAN can also use this port.
Print every E Mail (4107 MAIL_EVR)	If ON, then all E Mail received is printed. Otherwise, only E Mail from the InterNet Printing Port will be printed.
Activate Response Mail (4108 MAIL_NOT)	If YES, all print jobs receive an E mail response. If NO, only users who set this option in their InterNet Printing Port software receive an E Mail
Printer Model ID String (4109 MAIL_MOD)	This text field identifies the printer used for Internet printing. This value is sent to remote users upon request.

User Software

The InterNet Printing Port software should be installed by all everyone intending to use Internet printing. Otherwise, remote users can print correctly only if:

- They send an E Mail directly to the IOPRINT+ Print Server Mail Account, using their normal E Mail application.
- The E Mail contains plain text only.
- The Internet IOPRINT+ Print Server is configured with *Print every E Mail* ON.


Installation of the InterNet Printing Port software will create a new printer port. After attaching the correct printer to this port, users can print to the Internet Printer using any Windows application.

Installation

1. Run the InterNet Printing Port installation program SETUP.EXE.
2. Default values for the installation are:

Item	Details
Directory	C:\Program Files\Internet_Printer
Start Menu folder	InterNet Printing Port Driver

3. You will then see the *Configure Port* screen, as shown in the following example.

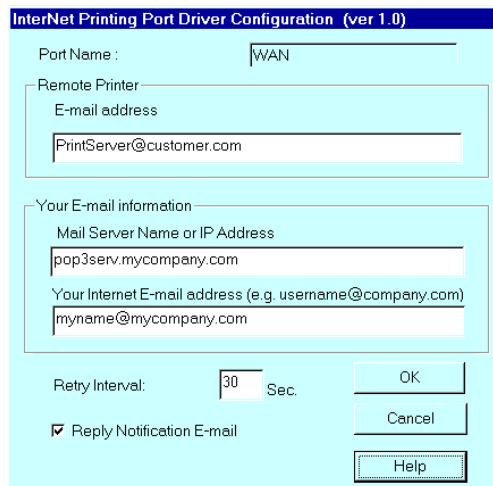

The following data must be provided.

Item	Description
Port Name	Enter a descriptive name (e.g. "WAN") for the new printer port.
Remote Printer E-mail Address	Enter the E Mail address for the Internet printer. Your print jobs will be sent to this E Mail address.
Mail Server Name or IP Address	If on a LAN, ask the LAN Administrator. If using a dial-up connection, use the data provided by your ISP.
Your Internet E-mail Address	The normal address that people use to send you E-mail.


Item	Description
Retry Interval (Seconds)	If unable to connect to the E Mail server, retry after this time period (1 to 255 seconds, 30 is usually OK).
Reply Notification Mail	Check to receive an E Mail when your print job has been processed.

On completion, a new printer port will have been created.

Using the new Port

The Windows Control Panel is used to connect the correct printer to the InterNet Printing Port. In Windows 95/NT, the procedure is:

1. Select the Printer which matches the remote printer, then choose *Properties*, as shown in the example below.

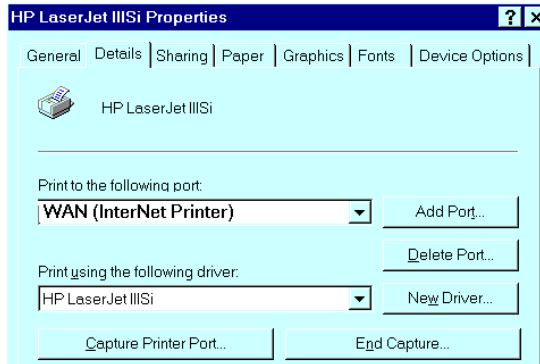

2. Select the new port - WAN (InterNet Printer) in the example - as the port for this printer.
3. If you do not have the correct printer driver, or you wish to create another printer using an existing driver, use the Windows *Add Printer* facility.
4. Using the Windows *Port Settings* or *Configure Port* facility will reveal the same *Configure Port* screen shown in *InterNet Printer Port*.
5. If you wish to print to multiple Internet Printers, use the Windows *Add Port* facility to add a new InterNet Printer port. Ensure that the correct data is entered in each port, and that each port has a unique name.

Checking the Printer Driver


To make sure that the correct printer driver for the remote printer is installed on your system, you can use the InterNet Printing Port to send an E Mail to the Internet Printer. The procedure is as follows:

1. Connect your default printer to the InterNet Printing Port.
2. Check that "Reply Notification Mail" in the InterNet Printing Port is ON.
3. From Notepad or another text editor, print a short message (e.g. "This is a test print") to the Internet Printer.

You will receive a reply E Mail containing the "Printer ID" which will identify the printer attached to the IOPRINT+ Print Server. If this does not match the printer driver you are using, install the correct printer driver.

Printing through the Internet

1. Create or open the document you wish to print.
2. Select the Printer connected to the InterNet Printing Port.
3. If you do not have a permanent Internet connection, establish a connection now. (**Note:** The InterNet Printing Port will NOT establish a dial-up connection, but it will send the E Mail the next time you are connected.)
4. Print the document.
5. The InterNet Printing Port will generate an E Mail and send it to the remote printer. The document will be encoded and sent as an attachment to the E Mail. You will see a progress screen similar to the example below:

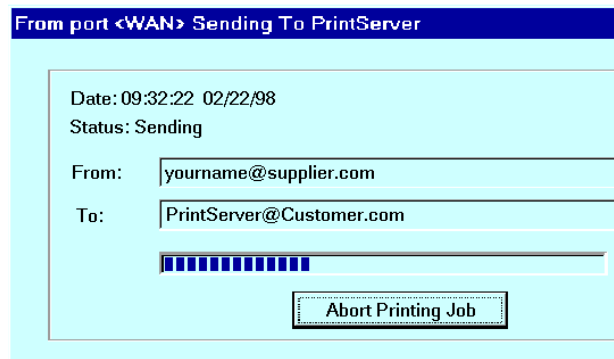

6. Close the Internet connection if you opened it in earlier in this procedure.
7. If the "Notify after print job" option is set, you will receive an E Mail when your job is printed.

Cancelling a Print Job

Users cannot cancel a Print Job once it has been sent, but Print Jobs can be cancelled at the IOPRINT+ Print Server. In the BiAdmin Management program, the *Control - Abort Mail Print Job* menu option can be used to cancel a print job which has already started printing.

Server Status screen

This screen shows server system data and the current settings for all of the other screens. It is read-only; no data can be input on this screen.

Server Status

Hardware ID: 0171009C28
Firmware Version: 6013
Protocol ID: 003F
Default Name: SCC14183
Server Name: SCC14183
Netware Info:
Master File Server:
NDS Tree Name:
NDS Tree Context:
Print Server Mode Status:
Remote Printer Mode Status: N/A
AppleTalk Info:
Printer Type:
SCC14183:LaserWriter
SCC14183_P2:LaserWriter
SCC14183_P3:LaserWriter
TCP/IP Info:
IP Address: 203.70.212.235
Gateway Address: 203.70.212.252
Subnet Mask: 255.255.255.0
Email Server IP Address: 0.0.0.0
Printing Account Name: N/A
Redirect Account Name: N/A
SMB Info:
Domain Name:

[Refresh](#)

Printer Ports screen

This screens displays the current status of each port. The following example is for the 3 port model.

Printer Status

Parallel Port 1

Connected Printer	P1
Status	On-Line
Printing Information	Idle

Print Test Page

Parallel Port 2

Connected Printer	P2
Status	Offline
Printing Information	Idle

Print Test Page

Parallel Port 3

Connected Printer	P3
Status	Offline
Printing Information	Idle

Print Test Page

Refresh

Field descriptions

Item	Description
Connected Printer	The model name of the printer connected to the port, if the printer name is known. (If the printer is not bi-directional, this information is unavailable.)
Status	The current status of the printer: On-line Off-line Out of paper
Printing Information	This will show either <i>Idle</i> or <i>Printing</i> .

Buttons

Item	Description
Print Test Page	This will print a test page from printer connected to the selected port. The test page will contain the current status information.
Configure Port (Serial Port only)	If your model has a serial port, clicking this button will reveal the following screen, allowing you to configure the serial port, if one is fitted. See the following section.
Refresh	Update all information shown on screen.

Serial Port Configuration screen

If fitted, the *Serial Port Screen* can be accessed by clicking the *Configuration* button on the Printer Port screen above.

Configure Serial Port

Baud Rate	9600 ▾
Protocol	Hardware ▾
Parity	None ▾
Data Bits	8 ▾
Stop Bits	1 ▾

If the default values do not work, check your serial printer to determine what settings should be used.

Logical Printers screen

Appletalk	NetBeui	NetWare	SNMP	TCP/IP
Configure Server	Server Status	Printer Ports	Logical Printers	Internet Printing

Logical Printers

Logical Printer	No: L1	Get Data
Port	Parallel 1	
Pre-string (Hex)		
Post-string (Hex)		
Convert LF to CR/LF	<input type="checkbox"/>	

Save Cancel

Item	Description
Logical Printer (Port)	Select the Logical Printer Port you wish to configure (L1 to L3 or L1 to L8, depending on your model) Click the Get Data button to update the display with the current data for the selected logical printer.
Port	Select the Printer Port which the Logical printer is to use.
Pre-string	The printer control string (in hex) to be sent to the printer before each print job.
Post String	The printer control string (in hex) to be sent to the printer after each print job.
Convert LF to CR+LF	If checked, LF (line feed) characters are changed to CR+LF (carriage return + line feed).

Internet Printing screen

Internet Printing

Mail Server

Mail Server IP Address	192 168 10 100
Account Name	sales@ms09.com
Account Password	*****
Verify Password	*****
Check Mail every:	1 30 (Hr-Min)
Redirect unprintable Mail to:	postmaster

Printer

Printer Model	HP 4 Plus
Printer Port	Parallel 1
Options	<input type="checkbox"/> Print every E-Mail <input checked="" type="checkbox"/> Print Banner Page <input type="checkbox"/> Mail response when printed

Item	Description
Mail Server	
Mail Server IP Address	The IP Address of the E Mail Server used by the IOPRINT+ Print Server.
Account Name	Enter the name of the Mail Server account used for Internet Printing. Internet users will send the print job to this mail address.
Account Password	Enter the password for the above Mail Account here, and again for <i>Verify</i> .
Check Mail Interval	Sets how often to check the Mail Server. Use 0 to indicate a continuous connection.
Redirect Unprintable Mail to:	Jobs which can not be printed will be sent to this account. If blank, unprintable jobs will be discarded.
Printer	
Printer Name	Text field to identify the printer used for internet printing.
Printer Port	Select the port (physical or logical) to be used for all Internet print jobs.

Item	Description
Print every E Mail	If ON, then all E Mail received is printed. Otherwise, only E Mail generated by the <i>InterNet Printing Port</i> software will be printed.
Print Banner	If YES (default), a banner page is printed to identify the owner of the print job.
Mail Response when printed	If YES, all print jobs receive an E mail response. If NO, only users who set this option in their <i>InterNet Printing Port</i> software receive an E Mail

Appendix G SNMP

You need to read this chapter if you want to...

You need to read this chapter if you want information about IOPRINT+ and SNMP.

This Appendix provides information about IOPRINT+ and SNMP.

This Appendix includes the following sections;

- [SNMP Support](#) on page [255](#)
- [Preparing the IOPRINT+ Print Server for SNMP](#) on page [256](#)
- [Management Station Settings](#) on page [257](#)
- [Trap Receiving Station Settings](#) on page [257](#)
- [IOPRINT+ Print Server MIB](#) on page [258](#).

SNMP Support

The IOPRINT+ Print Server's SNMP support allows network supervisors to monitor and control the IOPRINT+ Print Server using network management platforms such as HP OpenView, IBM SystemView, etc. This is accomplished through the SNMP **agent** and the SNMP **MIB**.

The **agent** (device software) responds to standard SNMP commands and reports device configuration and conditions. When a change in condition occurs, the SNMP agent will send a message (a **Trap**) to the associated management station.

The IOPRINT+ Print Server's **SNMP MIB** is a collection of objects that are monitored and controlled using SNMP's **get** and **set** commands. The MIB files are in the Mib folder on the CD-ROM. The appropriate.MIB file must be imported into your SNMP management program. The available files are:

- Mib1p.mib (Single port models)
- Mib2p1s.mib (Two parallel ports, 1 serial port model)
- Mib3p.mib (Three parallel port model)

Preparing the IOPRINT+ Print Server for SNMP

Before attempting to manage the IOPRINT+ Print Server using a SNMP Management station, the following settings should be assigned to it, in addition to the IP Address, Network Mask, and Gateway IP Address. These settings can be made using FTP, BiAdmin, or WebAdmin.

SNMP Settings

The number and token in brackets shows the line number in the IOPRINT+ Print Server CONFIG file.

Item	Description
SysContact (6000 CONTACT)	Text Field - Name of the contact person.
SysLocation (6001LOCATION)	Text Field - Location of the contact person.
Management Station IP Address(s) (6011 M1_IP) (6021 M2_IP) (6031 M3_IP) (6041 M4_IP)	Up to 4 Management Stations can be entered.
Trap Receiving IP Address(s) (6111 T1_IP) (6121 T2_IP) (6131 T3_IP) (6141 T4_IP)	Up to 4 Trap Receiving Stations can be entered.

Management Station Settings

For each Management Station, the following fields are available.

Field	Description
Access Permission (6012 M1_A CCP) 6022 M2, 6032 M3, 6042 M4	Options are: Read Only Read/Write Not Accessible.
Community String (6013 M1_CSR) 6023 M2, 6033 M3, 6043 M4	Leaving this blank will disable management by this station.

Trap Receiving Station Settings

For each Trap Receiving Station, the following fields are available.

Field	Description
Community String (6113T1_CSTR) 6123 T2, 6133 T3, 6143 T4	Leaving this blank will disable management by this station.
Trap Enable (6114 T1_ENAB) 6124 T2, 6134 T3, 6144 T4	Use this option to Enable/Disable Trap Receiving by this station.
Trap Severity (6112 T1_S) 6122 T2, 6132 T3, 6142 T4	In this version, all traps are level 1. Levels 2 and 3 will be implemented in future versions.

IOPRINT+ Print Server MIB

The IOPRINT+ Print Server MIB needs to be installed on each management station, using the *Import-Compile* commands of your SNMP management program. Check your management program for details on this procedure.

The IOPRINT+ Print Server MIB contains 96 objects in 13 groups, including one trap, as listed below.

***PSSystemConfig* group**

Object	Description
PrintServerName	The name of the IOPRINT+ Print Server, Default is SCxxxxxx.
NetwareProtocol	Netware Protocol Stack Status.
TcpipProtocol	TCP/IP Protocol Stack Status.
AppleTalkProtocol	AppleTalk Protocol Stack Status.
NetbeuiProtocol	Netbeui Protocol Stack Status.

PSLogicalPrinterConfig group

Object	Description
LP1PhysicalPort	The Physical port of Logical printer 1.
LP1PreString	The String sent to logical printer 1 whenever a job begins.
LP1PostString	The string sent to the logical printer 1 whenever the job ends.
LP1LFChange	Convert LF to LF+CR Status.
LP2PhysicalPort	The Physical port of Logical printer 2.
LP2PreString	The String sent to logical printer 2 whenever a job begins.
LP2PostString	The string sent to logical printer 2 whenever the job ends.
LP2LFChange	Convert LF to LF+CR Status.
LP3PhysicalPort	The Physical port of Logical printer 3.
LP3PreString	The String sent to logical printer 3 whenever a job begins.
LP3PostString	The string sent to logical printer 3 whenever the job ends.
LP3LFChange	Convert LF to LF+CR Status.
LP4PhysicalPort	The Physical port of Logical printer 4.
LP4PreString	The String sent to logical printer 4 whenever a job begins.
LP4PostString	The string sent to logical printer 4 whenever the job ends.
LP4LFChange	Convert LF to LF+CR Status.
LP5PhysicalPort	The Physical port of Logical printer 5.
LP5PreString	The String sent to logical printer 5 whenever a job begins.
LP5PostString	The string sent to logical printer 5 whenever the job ends.
LP5LFChange	Convert LF to LF+CR Status.
LP6PhysicalPort	The Physical port of Logical printer 6.
LP6PreString	The String sent to logical printer 6 whenever a job begins.
LP6PostString	The string sent to logical printer 6 whenever the job ends.
LP6LFChange	convert LF to LF+CR Status.
LP7PhysicalPort	The Physical port of Logical printer 7.
LP7PreString	The String sent to logical printer 7 whenever a job begins.
LP7PostString	The string sent to the printer 7 whenever the job ends.
LP7LFChange	Convert LF to LF+CR Status.
LP8PhysicalPort	The Physical port of Logical printer 8.
LP8PreString	The String sent to logical printer 8 whenever a job begins.

Object	Description
LP8PostString	The string sent to logical printer 8 whenever the job ends.
LP8LFChange	Convert LF to LF+CR Status.

PSNetwareConfig group

Object	Description
FrameethernetIIEnable	EthernetII frame Type Status
Frame802-2Enable	Ethernet 802.2 frame Type Status
Frame802-3Enable	Ethernet 802.3 frame Type Status
FrameSnapEnable	Ethernet 802.2 SNAP frame Type Status
OperationMode	The current Netware operation mode. PS: PrintServer mode, RP: Remote Printer mode.
MasterFileSvrName	The name of the File Server that the device will connect to First. The master file server contains all the information that the device needs, including a list of all other file servers to be serviced. (Netware 2.x, 3.x)
NDS_TreeName	The NDS Tree Name for Netware Print server to login into. (Netware 4.x)
NDSContext	The NDS context where the print server's object belongs.
NetwareQPollingInterval	The Netware Print Server Polling Interval. The range is 1-255 minutes.
JobNotifyByConnID	When the job ends, Print will notify the user by the connection ID.
NetwarePrintServerP1	The Netware Print Server to connect to for parallel port 1, when the device is operating as a remote printer.
NetwarePrintServerP2	The Netware Print Server to connect to for parallel port 2, when the device is operating as a remote printer.
NetwarePrintServerP3	The Netware Print Server to connect to for parallel port 2, when the device is operating as a remote printer.
NetwarePrintServerSP	The Netware Print Server to connect to for the serial port, when the device is operating as a remote printer.

PSTcpipConfig group

Object	Description
IPAddr	IP Address of this device.
GatewayAddr	The default gateway IP Address.
SubnetMask	The subnet network mask.

PSAppleTalkConfig group

Object	Description
AppleTalkZone	The zone name where the device is located.
PrinterTypeP1	The printer driver type for parallel port 1.
PrinterTypeP2	The printer driver type for parallel port 2.
PrinterTypeP3	The printer driver type for parallel port 3.
PrinterTypeSP	The printer driver type for serial port.
BinaryCommEnableP1	Binary communication protocol status. When disabled, the data is transparently sent to the printer.
BinaryCommEnableP2	Binary communication protocol status. When disabled, the data is transparently sent to the printer.
BinaryCommEnableP3	Binary communication protocol status. When disabled, the data is transparently sent to the printer
BinaryCommEnableSP	Binary communication protocol status. When disabled, the data is transparently sent to the printer

PSNetbeuiConfig group

Object	Description
SMBGroupName	SMB Group Name.
SMBdropJob	Do you want to drop the job when printer is out of paper?.
SMBDelayInterval	SMB Delay Interval.

PSStatus group

Object	Description
SystemInfo	This field contains the system information, including the F/W version, hardware address and current protocol status settings.
PrinterStatus	This field shows the current Printer Status.
PrinterInfo	Displays the device ID for each of the supported ports.

PSIPXStatistics

Object	Description
IPXPrintJobServiced	Number of NetWare jobs serviced.
IPXBytesServiced	Number of NetWare data bytes serviced.
IPXEtherIIPacketReceived	Number of IPX packets received of EthernetII frame type.
IPX8022PacketReceived	Number of IPX packets received of Ethernet 802.2 frame Type.
IPX8023PacketReceived	Number of IPX packets received of Ethernet 802.3 frame Type.
IPXSnapPacketReceived	Number of IPX packets received of Ethernet 802.2 SNAP frame Type.
IPXEtherIIPacketSend	Number of IPX packets sent of EthernetII frame Type.
IPX8022PacketSend	Number of IPX packets sent of Ethernet 802.2 frame Type.
IPX8023PacketSend	Number of IPX packets sent of Ethernet 802.3 frame Type.
IPXSnapPacketSend	Number of IPX packets sent of Ethernet 802.2 SNAP frame Type.

PSAppleTalkStatistics

Object	Description
IPXPrintJobServiced	Number of NetWare jobs serviced.
IPXBytesServiced	Number of NetWare data bytes serviced.
IPXEtherIIPacketReceived	Number of IPX packets received of EthernetII frame type.
IPX8022PacketReceived	Number of IPX packets received of Ethernet 802.2 frame Type.
IPX8023PacketReceived	Number of IPX packets received of Ethernet 802.3 frame Type.
IPXSnapPacketReceived	Number of IPX packets received of Ethernet 802.2 SNAP frame Type.
IPXEtherIIPacketSend	Number of IPX packets sent of EthernetII frame Type.
IPX8022PacketSend	Number of IPX packets sent of Ethernet 802.2 frame Type.

Object	Description
IPX8023PacketSend	Number of IPX packets sent of Ethernet 802.3 frame Type.
IPXSnapPacketSend	Number of IPX packets sent of Ethernet 802.2 SNAP frame Type.
APPrintJobServiced	Number of AppleTalk jobs serviced.
APBytesServiced	Number of AppleTalk bytes serviced
APPacketReceived	Number of packets received by AppleTalk.
APPacketSend	Number of packets sent by AppleTalk.

PSTcpipStatistics

Object	Description
IPPrintJobServiced	Number of TCP/IP Jobs serviced.
IPBytesServiced	Number of TCP/IP bytes serviced.
IPPacketReceived	Number of packets received by TCP/IP.
IPPacketSend	Number of packets sent by TCP/IP.

PSControl group

Object	Description
ResetPrinterServer	Reset (reboot) the device.
RestoreFactoryDefault	Restore the factory default settings.
ResetStatistics	Set the statistics counter back to zero.

PSSerialConfig group

Object	Description
SerialBaudrate	Serial port baud rate (bps)
SerialStopBits	Serial port stop bits.
SerialParity	Serial port parity.
SerialDataBits	Serial port data bits.
SerialProtocol	Serial port flow control protocol.

Traps

Trap	Description
printserverTrap	Printer status changed.

Appendix H FTP (File Transfer Protocol)

You need to read this chapter if you want to...

You need to read this Appendix if you want information about using your IOPRINT+ with FTP.

This Appendix provides information using your IOPRINT+ with FTP (File Transfer Protocol).

This Appendix includes the following sections;

- [Introduction](#) on page [267](#)
- [Using FTP](#) on page [267](#)
- [Configuration with FTP](#) on page [270](#)
- [Printing using FTP](#) on page [272](#)

Introduction

FTP (File Transfer Protocol) allows a user to log-on to a remote host, and manipulate files on the host. The IOPRINT+ Print Server can act as a FTP host, allowing FTP to be used for both configuration and printing. However, the following limitations apply:

- Only one FTP user can connect to the IOPRINT+ Print Server.
- Only "command line" FTP programs can be used. FTP programs which attempt to "browse" the file system are NOT supported.

Using FTP

1. Configure the IOPRINT+ Print Server so that it has a valid IP Address.
2. Start your FTP client from the command prompt (GUI interface FTP clients are NOT supported) and connect to the IOPRINT+ Print Server using its IP Address.

e.g. ftp 203.70.212.155

3. The IOPRINT+ Print Server will respond with "Print Server Ready" and prompt for "Name", as shown below:

```
Connected to 203.70.212.45
#220 Print Server Ready
Name (203.70.212.45:root):
```

4. Enter the name for this device. If you have not assigned a name, you must use the "Default name" shown on the sticker on the base of the unit. The "Default name" is in the form SCxxxxxx (SC followed by 6 digits).
5. You will then be prompted for the password. If no password has been set, just press ENTER.
6. From the resulting prompt, you can manipulate the following files, and use the following commands.

Files

The following files will appear on the IOPRINT+ Print Server when it is acting as an FTP host.

Filename	Purpose	Mode
CONFIG	Configuration file	Read/Write (get, put)
DEFAULTC	Reset device to default configuration	Read (get)
PSINF	Device information	Read (get)
PASSRESET	Clear password	Read (get)
RESET	Reset device	Read (get)
SETIP	Save current IP address	Read (get)
CONFIG	Configuration file	Read/Write (get, put)

Commands

Only the following commands are implemented. Commands are usually case sensitive. Where the command requires a parameter, the parameter is shown in *italics*.

dir - List files (as shown in the previous table).

get FILENAME - Retrieve a file. The only files that can be retrieved are CONFIG and PSINF. Using GET with the other "files" will activate a command, as follows:

Item	Description
get DEFAULTC	Set the IOPRINT+ Print Server back to its default configuration.
get RESET	Reset the IOPRINT+ Print Server. This also terminates the current connection.
get PASSRESET	Clear password (no password).
get SETIP	Set the current IP address as a static IP address.



Warning

Do NOT use the SETIP command if the device has an IP Address assigned by a DHCP server. This will cause an Address conflict

put CONFIG - Copy the file CONFIG to the device, overwriting the existing CONFIG file. Details of the format of CONFIG files are contained in *Appendix B - Configuration File Format*.

Note

After using the **put CONFIG** command to write a new configuration file to the device, you should issue a **get RESET** command.

put PASSWORD - Copy the file PASSWORD to the IOPRINT+ Print Server, giving it a new password. Passwords can be up to 19 bytes in length.

put filename Ln - Copy the file *filename* to the printer connected to Logical Port *n*, where *n* is a Logical Port number. This will print the file.

quit - Terminate the current FTP session.

Other FTP Commands - The other FTP commands are not implemented, and will usually return the error message *Invalid command*.

Configuration with FTP

1. Configure the Unix host as described in [Unix - TCP/IP](#) on page [45](#) so that the IOPRINT+ Print Server is recognized as a valid device on the LAN.
2. Connect to the IOPRINT+ Print Server with the following command.
ftp NAME
3. You will be prompted for *Name*, as shown below:

```
Connected to 203.70.212.45
#220 Print Server Ready
Name (203.70.212.45:root):
```

4. Enter the name for this device. If you have not assigned a name, you must use the "Default name" shown on the sticker on the base of the unit. The "Default name" is in the form SCxxxxxx (SC followed by 6 digits).

You will then be prompted for the password. If no password has been set, just press ENTER.

5. Copy the configuration file **CONFIG**, to your system, then quit.

```
ftp>get CONFIG
ftp>quit
```

6. Edit the CONFIG file to set parameters in the following four lines in the file.

```
0001 BOX_NAME:Name
4000 IP_ADDR:x.x.x.x
4001 GATEWAY:y.y.y.y
4002 MASK:z.z.z.z
```

Where

New_Name is the IOPRINT+ Print Server's name.

x.x.x.x is the IP Address assigned to the IOPRINT+ Print Server.

y.y.y.y is the IP Address of your router, if you have one.

z.z.z.z is the network mask, if assigned.

Note

You can set any configuration options by editing the CONFIG file. Refer to the *Configuration File Format* for your particular model for a detailed description of the CONFIG file.

7. Copy the CONFIG file back to the IOPRINT+ Print Server, reset, and quit:

```
ftp NAME  
ftp>put CONFIG  
ftp>get RESET  
ftp>quit
```

Printing using FTP

Connect to the IOPRINT+ Print Server, as explained above, then use the following syntax:

```
ftp>put FileName Ln
```

Where:

FileName is the file to be printed.

n is the number of the logical printer you wish to print to.

Example:

```
#ftp Marketing  
ftp>put /etc/hosts L2
```

This example would print the file `/etc/hosts` to logical printer 2 on the IOPRINT+ Print Server named Marketing.

Printing using FTP is NOT recommended, because:

- There can be only 1 FTP connection, so at any time only one user can print, even on multi-port models.
- Print jobs are not spooled (queued).

Appendix I Troubleshooting

You need to read this appendix if you want to... You need to read this Appendix if you want information on troubleshooting problems with your IOPRINT+ product.

This Appendix provides information on troubleshooting a variety of problems with your IOPRINT+ product.

This Appendix includes the following sections;

- [Introduction](#) on page [274](#)
- [Hardware Problems](#) on page [275](#)
- [Printing problems](#) on page [276](#)
- [WebAdmin Program](#) on page [296](#)

Introduction

If you encounter printing difficulties, first refer to [Hardware Problems](#) on page [275](#) then look at [Printing problems](#) on page [276](#). For further details relating to specific situations, refer to the documents listed below. If, after following the advice in these sections, the IOPRINT+ Print Server still does not function properly, please contact your dealer for further advice.

- [Hardware Problems](#) on page [275](#)
- [Printing problems](#) on page [276](#)
- [WebAdmin Program](#) on page [296](#).

Hardware Problems

Problem	Solution
All the IOPRINT+ Print Server's LEDs are off.	Check the power supply or power connection.
IOPRINT+ Print Server's status light continuously stays lit.	Reset IOPRINT+ Print Server by unplugging the power supply and plugging it back in.
IOPRINT+ Print Server status light and power light stays on continuously and do not turn off.	Reset IOPRINT+ Print Server by unplugging the power supply or by pushing the reset push button.
I am using DHCP, and getting an IP Address conflict involving the IOPRINT+ Print Server.	<p>If the IOPRINT+ Print Server is left on, but the DHCP server is turned off, then the IOPRINT+ Print Server will retain its IP Address without the DHCP Server being aware of it. Simply reset the IOPRINT+ Print Server so it will obtain a new IP Address.</p> <p>This problem would also arise if you assigned a static IP Address which is within the range used by the DHCP server.</p> <p>If so, use another address which is NOT within the range used by the DHCP server.</p>
I am using WPCongig on Windows 95, and having problems configuring the IOPRINT+ Print Server.	WPCongig is designed for Windows 3.1 only. For Windows 95/NT, you should use BiAdmin.

Printing problems

This section deals specifically with troubleshooting printer related problems and includes the following;

- [Printing - General](#) on page [277](#)
- [Printing - AppleTalk](#) on page [278](#).
- [Internet Printing](#) on page [283](#)
- [Printing - NetWare](#) on page [285](#)
- [Printing - TCP/IP](#) on page [292](#)
- [Printing - Windows](#) on page [294](#).

Printing - General

Problem	Solution
When using 10BaseT cabling, the IOPRINT+ Print Server unit does not work.	Check the Hub's link LED for the port to which the IOPRINT+ Print Server is connected. If it is off, there is a problem in the network cable. If using 10BaseT or 100BaseT, check the LED next to the connector. It should be on if the network connection is OK.
A printing device connected to the a IOPRINT+ Print Server port cannot print or prints garbage.	Check the following: <ul style="list-style-type: none"> • Cable connection between IOPRINT+ Print Server and printer. • Serial port configuration, if a serial device. • Printer driver in the application program or Windows matches the printer.
The <i>Configuration</i> button on the <i>Printer Status</i> screen in BiAdmin is greyed out, even though my printer is bi-directional.	The button is unavailable if the printer is busy. You must wait until the printer is idle.

Printing - AppleTalk

Note

For information on using the laserwriter 8.1.1 driver, see [Using the LaserWriter 8.1.1 Driver](#) on page 281.

Problem	Solution
Why do I get an incorrect printout?	<p>Some possible reasons are listed as follows:</p> <p>You may have chosen Binary encoding to print the file. Try to use ASCII encoding.</p> <p>Some of the fonts in your print file may not be supported by the printer. Try selecting LaserWriter 7 instead of LaserWriter 8.</p>
Can't find the IOPRINT+ Print Server's name in the Chooser.	<p>Try the following:</p> <ol style="list-style-type: none"> 1. Make sure that AppleTalk is on (the button next to Active is highlighted in the Chooser). 2. Make sure the printer has been on and in the READY state for a few minutes. 3. Make sure the printer has not been renamed since its last appearance in the Chooser. 4. If the printer resides on a network with multiple zones, make sure the correct zone is selected from the AppleTalk Zones box in the Chooser.

Problem	Solution
My document didn't print to the right printer.	<p>Check the following:</p> <p>Another IOPRINT+ Print Server with the same name may have received your print job. Use the PSTOOL to reconfigure your IOPRINT+ Print Server name and ensure all IOPRINT+ Print Servers have unique names.</p> <p>Make sure your application output encode is set to ASCII. If not, change it to ASCII.</p>
My file doesn't print with the correct fonts.	Try changing your printer driver to LaserWriter 7.
My EPS file doesn't print with the correct fonts.	This is a problem that occurs in some application programs. Try downloading the fonts contained in the EPS file before printing the saved EPS file.
I can't select the Remaining from: item in the print dialog box.	If you have selected the Layout value, 2 Up, or 4 Up, you cannot access the Remaining from: item. Choose other selections.
A cover page prints either on the first or the last page of the document.	<p>Select one of these solutions:</p> <ul style="list-style-type: none"> • Turn the cover page feature off. • Insert extra page breaks in your document to avoid the cover page printing on the first or last page of your document. • Install the Apple LaserWriter 7 driver. You are having trouble printing with the Apple LaserWriter 8 driver.
Why do I have trouble printing with the LaserWriter 8?	Your application software may not be compatible with the LaserWriter 8 driver or your system may not meet the requirements of the LaserWriter 8 driver. Use the Apple LaserWriter 7 driver instead.

Problem	Solution
How come the colours on my printed output do not match the colours on my computer screen?	<p>When the printer receives a colour file, it tries to match the printed output colour to the colour on the computer screen. Sometimes the printer cannot match up the colours as closely as wanted. To alleviate this problem, perform the following steps:</p> <ol style="list-style-type: none"> 1. Choose Calibrated Colour/ Greyscale in the <i>Print</i> pop-up menu in the <i>Print Options</i> dialog box. The printer will make adjustments to match the colours. 2. Check your monitor to make sure all settings (for example, brightness) are adjusted correctly.
The blue colour I chose on my computer screen is printing out purple.	Choose Calibrated Colour/Greyscale in the <i>Print</i> pop-up menu in the <i>Print Options</i> dialog box.

Using the LaserWriter 8.1.1 Driver

Some application programs have incompatibilities with this driver. The following list describes known problems. If you experience problems, contact the publisher of the program. A newer version of the program may be available.

Aldus Freehand 3.11

You cannot print using Layout options in the Print dialog box. If you choose a layout from the Layout pop-up menu, the document does not print and no error message appears.

EPS files created from within Freehand cannot be used in other programs.

Selecting the Unlimited Downloadable Fonts option in the Page Setup option dialog box results in a PostScript error.

Aldus PageMaker 4.2a

You cannot scale EPS images in documents printed using the Layout option in the Page Setup dialog box.

Aldus Persuasion 2.1.2

When you print a document that contains gradient fill patterns, the document is printed with solid patterns instead of gradients.

Documents that contain EPS graphics may not print correctly if you select 2-Up or 4-Up printing.

Canvas 3.0.6

Printing with substituted fonts may result in incorrect line layout.

Informed Manager 1.3.5

Shaded headings in a document may not print correctly. Some documents will print with extra pages.

MacDraft 2.1

When you print using the Cut Marks option, a PostScript error results.

Microsoft PowerPoint

In PowerPoint version 2.01f, you cannot import an EPS file created with the Apple LaserWriter 8.1.1 driver that has been saved without preview information.

When importing EPS files, you may want to increase the memory allocated to the application.

Microsoft Works 3.0

Printing documents that have rotated objects with rounded corners results in a PostScript error.

More 3.1

When creating EPS files with the Apple LaserWriter 8.1.1 driver, be sure you have enough disk space to hold the file. A "No Disk Full" error message appears when your hard disk becomes full and cannot hold the entire file.

QuarkXPress 3.11

You cannot print EPS files that contain certain TrueType fonts.

Using Calibrated Colour results in a PostScript error.

Studio/8 and Studio/32

For EPS files and the Apple LaserWriter 8.1.1 driver, you must select the QuickDraw Printer option.

Internet Printing

Problem	Solution
I don't know my Mail Server's IP Address.	Use the PING command to connect to the Mail Server by name. Example ping ms.hinet.net The reply will say Reply from xxx.xxx.xxx.xxx where xxx.xxx.xxx.xxx is the IP Address of the Mail Server.
Plain text E Mails are not printed.	Text E Mail messages are printed only if the IOPRINT+ Print Server is configured with <i>Print every E Mail</i> ON.
Plain text E Mails print OK., but if I include an attachment, I get an E Mail reply "Wrong Encoding Method".	The Internet Printer system supports only Base64 encoding. Using the Internet Printing Port driver will ensure a correctly encoded attachment..
A print job is printing garbage.	Users must use the correct printer driver. The print job can be cancelled using the <i>Control - Abort Mail Print Job</i> menu option in the BiAdmin program.
Two print jobs are printing on the same page.	Change the port used for Internet Printing from a physical port to a Logical Port (Printer). Configure the Logical Printer so that the <i>String after Job</i> contains a FF (Form Feed, decimal 12 or 0C in Hex).
The Print job seemed to go through OK, but it was never received.	Check the E Mail address. If you use more than one Internet Printer with the same printer driver, ensure that you use the correct port each time you print.

Problem	Solution
Only the banner page was printed.	<p>This could be caused by using the wrong encoding method. Ask the user to use the InterNet Printing Port.</p> <p>Also, some printer drivers, when configured as Local Printer, will poll the printer to see if it is connected. Since the printer is networked, the printer can not be detected. To fix this, perform the following:</p> <ol style="list-style-type: none"> 1. Select Network printer when asked How is the printer attached to your computer? 2. Then when prompted for Network Path or Queue name enter a dummy value such as \\54321 and select Next The printer wizard will display a message stating the Network Printer is off-line. Continue to install the printer as normal. 3. When finished, go to Control Panel\Printers and select your printer. The printer icon will be greyed out indicating the printer is not ready. 4. Select Properties - Details. In the <i>Print to the following port</i> box, select Print Server (PrintServer). 5. Click Apply, then OK, then close the properties window. 6. Select the printer and go to the File menu. Check the <i>Work off-line</i> option is OFF. 7. If the printer is connected and powered On, the printer icon should no longer be greyed out, and you should be able to print.
The Banner page is not correct; the first row has disappeared.	<p>This may be caused by the previous print job not sending a form feed after finishing printing. Try sending print jobs to a logical printer, which is defined with a Post String of FF (Form Feed - 0C in Hex).</p> <p>To do this, define the Logical Printer, and set the port used for Internet Printing to this Logical Printer.</p>

Printing - NetWare

Problem	Solution
My IOPRINT+ Print Server prints garbage.	<p>Follow the following steps to identify the problem:</p> <ol style="list-style-type: none"> 1. Print a diagnostic file using PSCONFIG program. 2. Run PSCONFIG and select your IOPRINT+ Print Server from the list. Then select <i>Print Diagnostic Report</i> 3. Select each port in turn and print a diagnostic report. 4. Check to see if the diagnostic report printed OK. If the diagnostic report printed OK, the problem may be caused by incorrect system configuration. If the diagnostic report printout is not OK, check your printer. If your printer is OK, call your dealer. 5. Print a test text file and a test graphic file. If the text file prints correctly but the graphic file prints garbage, then specify /NT (no tabs) option for NPRINT or CAPTURE commands and print again. If both print incorrectly proceed to the next step. <p>Continues on next page.....</p>

Problem	Solution
My IOPRINT+ Print Server prints garbage. (continued)	<p>Temporarily disable the IOPRINT+ Print Server servicing the print queue following the step-by-step instructions below:</p> <p>NetWare 2.x and 3.x</p> <ol style="list-style-type: none"> 1. Run PCONSOLE, Select Print Queue Information, select the print queue that the IOPRINT+ Print Server services, select Current Queue Status. 2. Set Servers can service entries in queue to NO. 3. Press Esc and select Print Queue ID. Record its queue ID. 4. Send your test files to the print queue using normal print commands. <p>NetWare 4.x bindery and NDS modes</p> <ol style="list-style-type: none"> 6. Run PCONSOLE, select Print Queues, select the print queue that your Print Server services, select Status. 7. Set Allow service by current print servers to NO. 8. Press Esc and select Information, and record its queue ID. 9. Send your test files to the print queue using normal print commands. 10. Re-route network printing to local printing. 11. Disconnect the printer attached to your IOPRINT+ Print Server and connect it to LPT1 of your PC. 12. Change to the drive and then the directory on the file server that contains the print queue. The directory will have the name of the queue ID (e.g. \queues\Q_ID for NDS mode or system\Q_ID for Bindery mode). 13. The test files you printed in step 3 should be in the queue directory. Print these files to the local printer using the COPY command with the /b option. Example: <pre>copy /b test.txt LPT1</pre> 14. Compare the printouts from the PC and the IOPRINT+ Print Server. If the printouts are the same, then the problem is NOT the IOPRINT+ Print Server. The problem might be that an incorrect printer driver was chosen or the timeout setting in the CAPTURE command is too short. If the printouts are NOT the same, there may be a problem with the Print Server. Call your dealer. 15. Re-enable queue service. 16. Disconnect the printer attached to LPT1 of your PC and connect it to your IOPRINT+ Print Server. 17. For NetWare 2.x or 3.x, run PCONSOLE and select "Print Queue Information". Then select the print queue and select "Current Queue Status". Set "Servers can service entries in queue" to YES. 18. For NetWare 4.x bindery and NDS modes, run PCONSOLE and select "Print Queues". Then select the print queue and select "Status". Set "Allow service by current print servers" to YES.

Problem	Solution
My IOPRINT+ Print Server does not appear in the Active Device List of the PSCONFIG program.	<p>Ensure that the IOPRINT+ Print Server is on the same network segment as your PC.</p> <p>Load the NetBEUI protocol on your PC, so that PSCONFIG can try connecting using NetBEUI. Once connected, check the following:</p> <p>The NetWare protocol is enabled.</p> <p>The Ethernet frame type of your PC may be different than the one with your IOPRINT+ Print Server. Enable all Ethernet frame types.</p>

Problem	Solution
My IOPRINT+ Print Server is configured as a Novell Print Server, and cannot log in to a file server.	<p>The following steps may solve this problem:</p> <ol style="list-style-type: none"> Get the IOPRINT+ Print Server information using PSCONFIG. If the device is configured as a Novell Print Server, the information will look like the following: Server Name: SC110049 NetWare Information: Master File Server: ICE Print Server Mode Status: Your_File_Server: Current Status Remote Printer Mode Status: N/A Make sure the master file server name is assigned correctly. <ol style="list-style-type: none"> Check the Current Status of Your_File_Server: Connected: No action required No file server: Assign a master file server using PSCONFIG Connecting to Server: Wait and check if the file server exists Password Mismatch: Clear the NetWare password with PCONSOLE, or set the correct password for the IOPRINT+ Print Server using WPCONFIG or BiAdmin. Print Server Not Defined: Install Print Server again Check NetWare to see if the login status of the IOPRINT+ Print Server to the file servers is Ready. If it is not, check the error message and perform the required corrective action. Check the Novell file server's name. If it is over 20 characters long,. Rename it using no more than 20 characters. If the file server is not in the status list and the IOPRINT+ Print Server has logged into the master file server, it means that the file server has not been serviced by the IOPRINT+ Print Server. Check to see if the file server is in the list of "File Server To Be Serviced" item of PCONSOLE. If not, insert the file server name to the list.

Problem	Solution
<p>My IOPRINT+ Print Server is configured as a Novell Remote Printer, and can't log in to the Novell Print Server.</p>	<p>Try the following steps.</p> <ol style="list-style-type: none"> 1. Get the IOPRINT+ Print Server information as described above. 2. Check the fields after "Remote Printer Mode Status": 3. For each logical printer, there will be a status entry. The status will be one of the following. <ul style="list-style-type: none"> Connected: No action required Unable to find server: Load NetWare Print Server. Connecting to Server: Wait and check if the NetWare Print server is loaded Printer not Defined: Install the IOPRINT+ Print Server as a remote printer of a NetWare print server. 4. Check NetWare to see if the Print Server is ready. If it is not, check the error message and perform the required corrective action. 5. Check the NetWare print server's name. If it is over 20 characters, rename the NetWare Print Server name using no more than 20 characters.

Problem	Solution
My IOPRINT+ Print Server cannot print the jobs sent to the print queue.	<p>Try the following steps to resolve this problem.</p> <ol style="list-style-type: none"> 1. Check if the printer attached to the IOPRINT+ Print Server is on-line. 2. Check if your IOPRINT+ Print Server is logged into the file server 3. Check the current status of the queue. Run PCONSOLE and select "Print Queue Information". Then select the queue and select "Current Queue Status". See if there are three YES's. If not, set them to YES. 4. Check if the NetWare printer number is correct. 0 = parallel port 1 of the IOPRINT+ Print Server. 1 = parallel port 2 of the IOPRINT+ Print Server. 2 = serial port or parallel port 3 5. Check to see if the IOPRINT+ Print Server is a static queue server to the queue. Run PCONSOLE and select "Print Server Information". Then select "Print Server Configuration" and select "Queues Served by Printer". Then select your desired printer and check if the queue is on the list. If its not, insert the queue into the list by pressing [Insert] key and select the queue. Then reset the IOPRINT+ Print Server to service the new queue. 6. The total number of queues to be serviced may be over the limit of 56. If so, reduce the number of queues.
I used the Capture command to print a job, but the job was separated into two parts.	<p>The time out setting in Capture command may be too short. You should increase the timeout value of the Capture command. Use the option /TI=n of the Capture command to increase the time out value, where n is the value of timeout.</p>
PSCONFIG shows "No Response."	<p>This may be due to the following</p> <ul style="list-style-type: none"> • The network traffic is busy now. Wait for a minute and then try it again. • The IOPRINT+ Print Server is not powered on. Power it on. • The network cable is disconnected. Check the cable. • The node address of the IOPRINT+ Print Server may be the same as the node address of another device on the network.

Problem	Solution
QUICKSET timed out when checking if the device had logged in to the file servers.	<p>This means that the IOPRINT+ Print Server did not log in the master file server. It might be that the Ethernet frame types do not match. If so, the following steps should solve the problem.</p> <p>Try to find a workstation that use the same frame type as the IOPRINT+ Print Server so that PSCONFIG can see the device. Or load the NetBEUI protocol on your PC and use WPCONFIG to connect to the device.</p> <p>Enable the IOPRINT+ Print Server's frame type to the frame type that the master file server uses and disable all other frame types.</p>
I cannot receive Notify message in NetWare 4.x environment.	<p>Make sure you are a Notify member of the Print Server.</p> <p>Run NetAdmin and set the name of the Default Server to receive notification.</p>
I cannot use PCONSOLE to see Printer Status or the current server status in "Print Server Information" is showing <i>Down</i> in the NetWare 4.x environment.	<p>It may be that you created the print server object in NetWare 3.x environment and used PCONSOLE in NetWare 4.x to view the status. Try the following:</p> <ol style="list-style-type: none"> 1. Ensure the IOPRINT+ Print Server is ON. 2. Delete the print server object of the IOPRINT+ Print Server. 3. Install the IOPRINT+ Print Server again in NetWare 4.x NDS environment.
The "String Before Job" and/or "String After Job" settings in the Logical Printers don't work properly.	<ol style="list-style-type: none"> 1. Check the length of the control strings. No string can exceed 15 characters. 2. Check that the control strings are in HEX.

Printing - TCP/IP

Problem	Solution
IOPRINT+ Print Server device is not recognized.	<p>Check the following:</p> <ul style="list-style-type: none"> • There are no routers between the IOPRINT+ Print Server and the UNIX host during IP address assignment. • There are no NetWare File Servers that do not have TCP/IP support between the IOPRINT+ Print Server and the UNIX host. • The network cable to be used by IOPRINT+ Print Server is intact. Connect the cable to another network device and test it. You have used the correct Physical Address derived from the device Default name. • Use the ping command to see if the IOPRINT+ Print Server is a valid device on the network.
The standard interface program on SUN 5.2 cannot be used with Psfilter.	Use dumb_int.sh which is the interface program shipped with the IOPRINT+ Print Server.
When the interface program detects that the printer device is not a printer, a printer error message appears on the screen.	Mark out all stty commands in the interface script.
The .psopts file format is not accepted by BSD UNIX.	If the prefix string and suffix string must contain control words or are too long, use headfile or tailfile instead of prefix string or suffix string.
The IOPRINT+ Print Server's IP address is forgotten and it needs to be installed in a new environment.	<ol style="list-style-type: none"> 1. Follow the steps below to set the IOPRINT+ Print Server configuration back to the factory default settings: Enter the command: arp -s yyy.yyy.yyy.yyy 00:c0:02:xx:xx:xx Where yyy.yyy.yyy.yyy is the new IP address assigned to the IOPRINT+ Print Server and xx:xx:xx is the default name of the device, less the leading "SC". Combined with 00:c0:02, this gives the hardware address of the device. 2. Enter the commands: ftp yyy.yyy.yyy.yyy ftp>get DEFAULTTC ftp>quit <p>This will reset the configuration to the factory defaults (including setting the IP address back to 0.0.0.0). Reconfigure as for a new device.</p>

Problem	Solution
Printing by FTP, I receive an error message: <i>Invalid print queue</i> <i>Print queue not ready</i>	<ol style="list-style-type: none"> 1. Check that the printer is ready 2. Check that Logical printer(s) are defined on the IOPRINT+ Print Server. With FTP, you can print ONLY to a logical printer. Reset the IOPRINT+ Print Server
I can't print using LPD.	<p>Try printing with FTP. If this works, the problem is the LPD daemon on your UNIX host. Reconfigure the remote printer and the LPD daemon. Check the following points.</p> <ul style="list-style-type: none"> • The remote host name is the name of the IOPRINT+ Print Server. • The remote printer name is the logical printer name on the IOPRINT+ Print Server (e.g. L1). • If your UNIX asks for the LPD type, be sure to identify the service type as BSD.
I can't print using PSfilter,	<ol style="list-style-type: none"> 1. Run PSfilter directly with the command: PSfilter -D P_name -v <file_name& Where: P_name is the IOPRINT+ Print Server's name file_name is the file you wish to print. 2. If this fails, check for an error log file (e.g. PSErrLog XXXXX) in the /tmp directory. If there is not an error log file, recompile PSfilter. Also, check the Troubleshooting section of the Psfilter .TXT file for your system.
The "String Before Job" and/or "String After Job" settings in the Logical Printers don't work properly	<ol style="list-style-type: none"> 1. Check the length of the control strings. No string can exceed 15 characters. 2. Check that the control strings are in HEX.

Printing - Windows

Problem	Solution
<p>When printing from some software applications such as Power Point, it takes a long time and the print out is incorrect.</p>	<p>The problem is due to the printer being configured to Start printing after the first page is spooled. To change this setting:</p> <ol style="list-style-type: none"> 1. Go to <i>Control Panel - Printers</i> and click on your printer. 2. Then select <i>File - Properties - Details</i>. 3. When the Details screen appears, click the Spool Settings button. 4. When the Spool Settings dialogue box appears, choose <i>Start printing after last page is spooled</i> and click OK.

Problem	Solution
While adding my printer as instructed in Windows 95, I received a message stating that Printer could not be found.	<p>Some printer drivers, when configured as Local Printer, will poll the printer to see if it is connected. Since the printer is networked, the printer can not be detected. To fix this, perform the following:</p> <ol style="list-style-type: none"> 1. Select Network printer when asked "How is the printer attached to your computer?" 2. Then when prompted for "Network Path or Queue name" enter a dummy value such as \\123 and select <i>Next</i>. 3. The printer wizard will display a message stating that "The Network Printer is off-line". This is OK. Continue to install the printer as normal. 4. When finished, go to <i>Control Panel-Printers</i> and select your printer. The printer icon will be greyed out indicating the printer is not ready. 5. Select <i>Properties - Details</i>. In the <i>Print to the following port</i> box, select Print Server (PrintServer). 6. Click <i>Apply</i>, then <i>OK</i>, then close the Properties window. Select the printer and go to the File menu. Check the <i>Work off-line</i> option is OFF. 7. If the printer is connected and powered On, the printer icon should no longer be greyed out, and you should be able to print.
I connected and configured a WPS (Windows Printing System) printer as described, but I can't get the print job to print.	<p>WPS printer drivers poll the printer before sending print data. Since the printer is networked, the printer is not found and no data is sent. The solution is to add your printer as a network printer as described in Solution 2 above. The following is a list of a few common WPS printers:</p> <ul style="list-style-type: none"> Canon LBP-430W Epson ActionLaser 1300/W, Epson EPL-5500/W HP LaserJet 5L Lexmark WinWriter Series NEC SuperScript series Olivetti PG304 Samsung MyLaser Series

WebAdmin Program

Problem	Solution
WebAdmin doesn't find all items within the "NDS Tree Names" & "Master File Servers".	This occurs only with IPX/SPX. The solution is to manually enable all 4 Ethernet frame types - Ethernet II, SNAP, 802.3, and 802.2.
WebAdmin won't run on my browser.	Check the following: Your LAN/WAN connection is OK. The URL is correct. (Has the program been installed in a different directory to the default?) The program name is correct: webadmin.exe?application/x-msdownload The alias name "webadmin" is set correctly.
Screen contents have become scrambled.	Click on any button or link to update it, or use your Browser's "Refresh" command.
The picture on the home screen doesn't change.	The picture is an animated GIF. Older Browsers do not support animated GIFs.

Appendix J Contacting Perle

You need to read this appendix if you want to... You need to read this appendix if you want to contact Perle for technical support or any other queries about this product.

This appendix includes the following sections;

- [Making a technical support query](#) on page **298**
- [Repair procedure](#) on page **301**
- [Feedback about this manual](#) on page **302**
- [Contacting Perle technical support](#) on page **303**

Internet access

[Click here to access the our website at the following URL:](#)
<http://www.perle.com>

Email

[Click here to email](#) Perle at the following address;
Email: ptac@perle.com

Making a technical support query

This section contains the following information about making a query;

- [Who to contact](#) on page [298](#)
- [Information needed when making a query](#) on page [299](#)
- [Making a support query via the Perle web page](#) on page [300](#)

Who to contact

If you bought your product from a registered Perle supplier, you must contact their Technical Support department; they are qualified to deal with your problem.

If you are a registered Perle supplier, and bought your product from Perle, contact Perle Technical Support using the details given in [Contacting Perle technical support](#) on page [303](#).

Information needed when making a query

When you make a technical support enquiry please have the following information ready;

Hint

Print out this page and fill in the table provided with the basic information you need.

Item	Write details here
Product name and version	
Problem description	
Operating system version	
Driver version	
Details of any other cards installed in your system	
Your name	
Company Name	
Country	
Phone number	
Fax number	
Email address (if available)	

Making a support query via the Perle web page

If you have an internet connection, please send details of your problem to Technical Support using the email links provided on the Perle web site in the 'Support' area.

See also [Contacting Perle technical support](#) on page 303 for email links and other contact details for the Perle technical support centres.

[Click here to access our website at the following URL:
http://www.perle.com](http://www.perle.com)

Repair procedure


Before sending a unit for repair, you must contact your Perle supplier. If, however, you bought your product directly from Perle you can contact directly. See [Contacting Perle technical support](#) on page 303 for contact information.

Customers who are in Europe, Africa or Middle East can submit repair details via a website form shown in the next picture. This form is on the Perle website, www.perle.com, in the **Support** area.

Click here to access our web site at the following URL:
http://www.perle.com/support/rma_form.html

In the USA and Asia contact the office shown in the Technical Support section.

Website RMA (Return Material Authorisation) Form

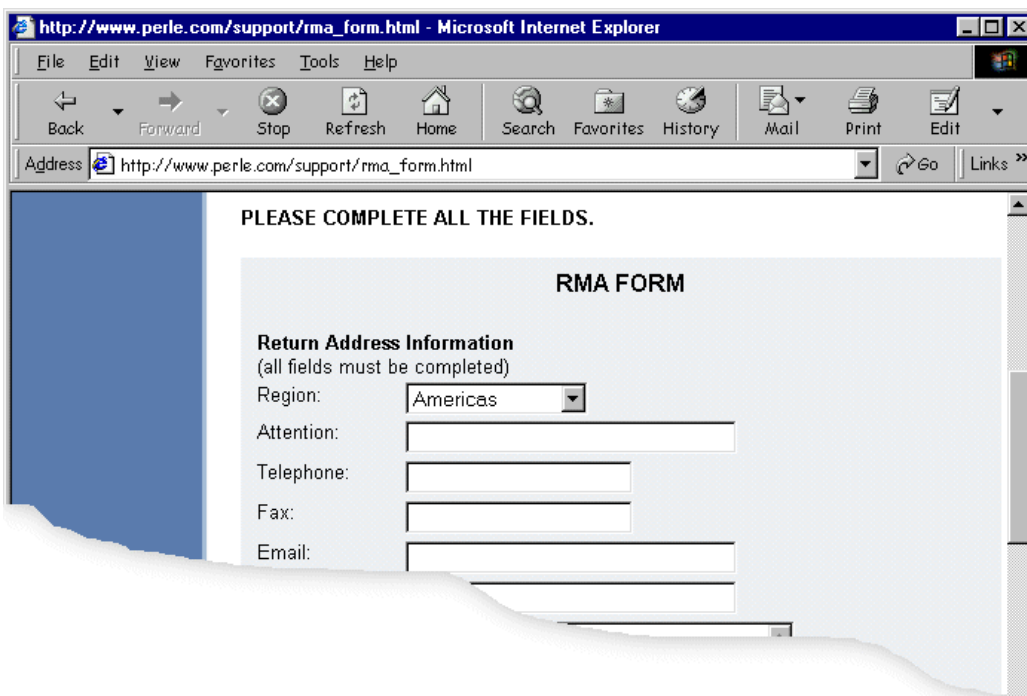

The screenshot shows a Microsoft Internet Explorer browser window displaying the RMA Form at http://www.perle.com/support/rma_form.html. The browser's address bar and menu bar are visible. The form itself is titled "RMA FORM" and includes a section for "Return Address Information" with a note that all fields must be completed. The form contains several input fields: a dropdown menu for "Region" (currently set to "Americas"), and text boxes for "Attention:", "Telephone:", "Fax:", and "Email:". The form is set against a light blue background with a darker blue sidebar on the left.

Feedback about this manual

If you have any comments or suggestions for improving this manual please email Perle using the following address;

Email: ptac@perle.com

Please include the **title**, **part number** and **date** of the manual (you can find these on the title page at the front of this manual).

Contacting Perle technical support

Note

Perle offers free technical support to Perle Authorised Distributors and Registered Perle Resellers.

To access technical support please visit the Perle website at www.perle.com/support.

If you are unable to find the information you require, please feel free to contact our technical support teams by email using the addresses shown in the next table.

Region	Address	Email
North America	Perle Systems Ltd. 60 Renfrew Drive Markham Ontario Canada L3R OE1	Email: ptac@perle.com
Europe	Perle Systems Europe Ltd. 3 Wintersells Road Byfleet Surrey KT14 7LF UK	Email: ptac@perle.com
Asia	Perle Asia Pacific (Pte) Ltd. 190 Middle Road #19-05 Fortune Centre Singapore 188979	Email: ptac@perle.com
Worldwide	Perle Systems Ltd. 60 Renfrew Drive Markham Ontario Canada L3R OE1	Email: ptac@perle.com

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z

Index

A

About this manual [4](#)
AppleTalk configuration [39](#)

B

BiAdmin [135](#)

C

cabling information [132](#)
configuration
 NetWare [69](#)
 UNIX - TCP/IP [45](#)
 web browser [214](#)
 windows NT server (TCP/IP) [78](#)
 windows Peer-to-Peer - NetBEUI [91](#)
 windows Peer-to-peer - SMB [112](#)
 windows Peer-to-peer - TCP/IP [116](#)
contacting Perle Systems [297](#)
 email [297](#)
 for technical support [298](#)
 internet [297](#)

E

email [297](#)

F

FTP [266](#)

G

general device settings, IOPRINT [38](#)

I

installation, LAN [33](#)

internet printing [237](#)

IOPRINT

 AppleTalk Configuration [39](#)
 configuration [32](#)
 features [20](#)
 general device settings [38](#)
 initial configuration [34](#)
 installation [32](#)
 introduction to [19](#)
 management [36](#)
 NetWare configuration [69](#)
 troubleshooting [273](#)
 UNIX - TCP/IP configuration [45](#)

IOPRINT+

 description of [27](#)

IOPRINT+Jr FAST

 description of [29](#)

L

LAN installation [33](#)

M

management

 BiAdmin [135](#)
 IOPRINT [36](#)
 PSConfig [181](#)
 WebAdmin [204](#)
 WPConfig [230](#)

O

on-line manual

 guide to using [5](#)
 hypertext jumps [5](#)
 navigation [5](#)

P

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z

printing, internet [237](#)
product repair form [301](#)
PSConfig [181](#)

R

repair procedure [301](#)
 product repair form [301](#)
 RMA form [301](#)
RMA form [301](#)

S

SNMP [254](#)

T

technical support [298](#)
 centres worldwide [303](#)
 queries, information needed for [299](#)
 via the internet [300](#)
 who to contact [298](#)
troubleshooting [273](#)

W

web browser [214](#)
web browser, configuration of [214](#)
WebAdmin [204](#)
windows NT server (TCP/IP)
 configuration [78](#)
windows Peer-to-Peer - NetBEUI
 configuration [91](#)
windows Peer-to-peer - SMB
 configuration [112](#)
windows Peer-to-peer - TCP/IP
 configuration [116](#)
WPConfig [230](#)